

**2032R and 2038R  
Compact Utility Tractors  
(Serial No. NP000001-)  
(North America)**



**JOHN DEERE**

**OPERATOR'S MANUAL**

**2032R and 2038R Compact Utility  
Tractors (North American Version)**

**OMTR135273 ISSUE D3 (ENGLISH)**

**CALIFORNIA**

**Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

**⚠ WARNING**

 
The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

**John Deere Augusta Works**  
North America Edition  
PRINTED IN U.S.A.



\* D C Y \*



\* 0 M T R 1 3 5 2 7 3 \*

# Introduction

---

## Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

# Contents

	Page		Page
<b>General Information</b>		Transport Tractor Safely .....	00A-16
Product View .....	00-1	Service Cooling System Safely .....	00A-16
Trademarks .....	00-1	Service Accumulator Systems Safely .....	00A-17
Glossary of Terms .....	00-1	Service Tires Safely .....	00A-17
Regions and Country Versions .....	00-2	Service Front-Wheel Drive Tractor Safely .....	00A-17
Machine Overview .....	00-3	Tightening Wheel Retaining Bolts/Nuts .....	00A-17
<b>Safety</b>		Avoid High-Pressure Fluids .....	00A-18
Recognize Safety Information .....	00A-1	Do Not Open High-Pressure Fuel System .....	00A-18
Understand Signal Words .....	00A-1	Store Attachments Safely .....	00A-18
Follow Safety Instructions .....	00A-1	Decommissioning — Proper Recycling and Disposal of Fluids and Components .....	00A-18
Prepare for Emergencies .....	00A-1	<b>Safety Signs</b>	
Wear Protective Clothing .....	00A-2	Replace Safety Signs .....	00B-1
Protect Against Noise .....	00A-2	Use Seat Belt Properly .....	00B-1
Handle Fuel Safely—Avoid Fires .....	00A-2	Operator's Manual .....	00B-1
Handle Starting Fluid Safely .....	00A-2	PTO Shield .....	00B-2
Fire Prevention .....	00A-3	Starter .....	00B-2
In Case of Fire .....	00A-3	Folding ROPS .....	00B-3
Avoid Static Electricity Risk When Refueling .....	00A-4	Canopy or Sunshade .....	00B-3
Keep ROPS Installed Properly .....	00A-4	Rotating Blades .....	00B-4
Use Foldable ROPS and Seat Belt Properly .....	00A-4	<b>Controls and Instruments</b>	
Stay Clear of Rotating Drivelines .....	00A-5	Front Console Controls .....	10-1
Use Steps and Handholds Correctly .....	00A-5	Foot-Operated Controls .....	10-2
Read Operator's Manuals for ISOBUS Controllers .....	00A-6	Right-Hand Console Controls .....	10-3
Use Seat Belt Properly .....	00A-6	Left-Hand Console Controls .....	10-4
Operating the Tractor Safely .....	00A-6	Differential, MFWD, Rate of Drop, and Seat Controls .....	10-5
Avoid Backover Accidents .....	00A-7	Instrument Cluster .....	10-6
Limited Use in Forestry Operation .....	00A-7	Information Display Icons .....	10-8
Operating the Loader Tractor Safely .....	00A-8	Information Display and Display Mode Switch .....	10-9
Keep Riders Off Machine .....	00A-8	<b>Engine Operation</b>	
Instructional Seat .....	00A-8	Operate Key Switch .....	20-1
Use Safety Lights and Devices .....	00A-9	Operate Throttle Lever .....	20-1
Use a Safety Chain .....	00A-9	Operate eThrottle .....	20-1
Transport Towed Equipment at Safe Speeds .....	00A-9	Operate Fuel Shut-Off Valve .....	20-1
Use Caution on Slopes, Uneven Terrain, and Rough Ground .....	00A-10	Start the Engine .....	20-2
Freeing a Mired Machine .....	00A-10	Cold-Weather Start .....	20-3
Avoid Contact with Agricultural Chemicals .....	00A-11	Warm and Idle the Engine .....	20-3
Handle Agricultural Chemicals Safely .....	00A-11	Start a Stalled Engine .....	20-3
Handling Batteries Safely .....	00A-12	Stop Machine .....	20-3
Avoid Heating Near Pressurized Fluid Lines .....	00A-13	<b>Air Intake, Fuel, Coolant, and Exhaust Operation</b>	
Remove Paint Before Welding or Heating .....	00A-13	Using Fuel Shutoff Valve .....	30-1
Handle Electronic Components and Brackets Safely .....	00A-13	Fill Fuel Tank .....	30-1
Practice Safe Maintenance .....	00A-14	Exhaust Filter System Overview .....	30-2
Avoid Hot Exhaust .....	00A-14	Aftertreatment Indicators Overview .....	30-3
Clean Exhaust Filter Safely .....	00A-14		
Work In Ventilated Area .....	00A-15		
Support Machine Properly .....	00A-15		
Prevent Machine Runaway .....	00A-16		
Park Machine Safely .....	00A-16		

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2023  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
Previous Editions  
Copyright © 2022

## Contents

	Page		Page
<b>Electrical and Lighting Operation</b>			
Turn Signal and Hazard Lights .....	40-1	Use Power Beyond Outlet—If Equipped .....	70B-3
Road, Work, and Warning Lights .....	40-1	Operate Third Function Selective Control Valve (If Equipped) .....	70B-3
Use Display Mode Switch .....	40-2		
<b>Drivetrain Operation</b>			
Drive Machine .....	50-1		
<b>Transmission Operation</b>			
Operate Transmission .....	50A-1		
Operate Cruise Control .....	50A-1		
<b>MFWD and Front Axle Operation</b>			
Operate Mechanical Front Wheel Drive (MFWD) .....	50B-1		
<b>Differential and Rear Axle Operation</b>			
Operate Differential Lock (Traction Assist) .....	50C-1		
<b>Power Take Off (PTO) Operation</b>			
Operate Rear and Mid Power-Take-Off (PTO) ..	50D-1		
Operate Reverse Implement Option (RIO) .....	50D-1		
Adjust Height of Cut—If Equipped .....	50D-2		
<b>Steering and Brake Operation</b>			
Brake Operation .....	60-1		
Park Brake Operation .....	60-1		
Adjust Tilt Steering Wheel .....	60-1		
<b>Hydraulics Operation</b>			
Warm Hydraulic System Oil .....	70-1		
Hydraulics Information .....	70-1		
<b>Hitch and Drawbar Operation</b>			
Operate Attachments .....	70A-1		
Operate 3-Point Hitch .....	70A-1		
Position Center Link .....	70A-1		
Operate Rate of Drop/Lock Valve .....	70A-2		
Use Draft Links .....	70A-2		
Level Implement Front-to-Rear .....	70A-2		
Level Implement Side-to-Side .....	70A-3		
Adjust Implement Side-to-Side Sway .....	70A-3		
Operate Drawbar Hitch (If Equipped) .....	70A-3		
Operate Optional iMatch Quick-Attach Hitch System .....	70A-4		
Operate and Install Front 3-Point Hitch—If Equipped .....	70A-5		
Assemble and Install A-Frame—If Equipped ....	70A-5		
Install Implements on Front Hitch with A-Frame—If Equipped .....	70A-6		
Use Front Hitch Lock Switch—If Equipped .....	70A-6		
Install and Remove Mid-Mount Mower with Front Hitch Installed—If Equipped .....	70A-7		
<b>Selective Control Valve Operation</b>			
Connect Implement Hydraulic Hoses .....	70B-1		
Operate Hydraulic Selective Control Valve (SCV) .....	70B-1		
Operate Selective Control Valve (SCV) Lock Lever .....	70B-2		
Operate Dual Rear Selective Control Valve (SCV)—If Equipped .....	70B-2		
		Use Power Beyond Outlet—If Equipped .....	70B-3
		Operate Third Function Selective Control Valve (If Equipped) .....	70B-3
<b>Wheels and Tires Operation</b>			
		Tire Labeling, Ascertain the Load Capacity of Tires .....	80-1
		Select Tire Inflation Pressure .....	80-1
		Tire Combinations .....	80-2
		Front and Rear Tire Capacity .....	80-2
<b>Ballast</b>			
		Ballast Machine .....	80A-1
		Implement Codes .....	80A-1
		Tire Capacities .....	80A-2
		Use Optional Rear Cast Iron Wheel Weights ....	80A-2
		Use Optional Rear Ballast Box .....	80A-2
		Use Liquid Weight in Tires .....	80A-2
		Use Optional Front Weights .....	80A-2
<b>Additional Equipment Operation</b>			
		Additional Equipment Operation .....	80B-1
		Front Loader Mounting Frames, Installation .....	80B-1
<b>Operator Station Operation</b>			
		Enter and Exit Machine .....	90-1
		Adjust Seat .....	90-1
		Use Seat Belt .....	90-1
		Raise and Lower Roll-Over Protective Structure (ROPS) .....	90-1
<b>Transport and Storage</b>			
		Transport Machine on Trailer .....	100-1
		Transport Machine .....	100-1
		Push or Tow Machine .....	100-1
		Tow Loads .....	100-2
		Safety Chain .....	100-2
		Store Safety .....	100-2
		Prepare Machine for Storage .....	100-2
		Prepare Fuel and Engine for Storage .....	100-3
		Remove Machine from Storage .....	100-3
		Remove Front A-Frame—If Equipped .....	100-3
		Remove Front 3-Point Hitch—If Equipped .....	100-4
		Store Front 3-Point Hitch—If Equipped .....	100-4
<b>Maintenance Intervals</b>			
		Service Your Machine .....	200-1
		Service Interval Charts .....	200-1
		Service Interval Charts .....	200-1
		Test the Safety Interlock System Before Startup .....	200-2
		Avoid Damage to Plastic and Painted Surfaces .....	200-3
		Clean Plastic Surfaces .....	200-3
		Clean and Repair Metal Surfaces .....	200-4
<b>Fuel, Lubricants, and Coolant</b>			
		Diesel Fuel .....	200A-1
		Handling and Storing Diesel Fuel .....	200A-1
		Testing Diesel Fuel .....	200A-2
		Minimizing the Effect of Cold Weather on Diesel Engines .....	200A-2
		Alternative and Synthetic Lubricants .....	200A-3

	Page		Page
Engine Oil .....	200A-3	<b>Transmission Maintenance</b>	
Diesel Engine Coolant .....	200A-3	Check Transmission Oil Level .....	250A-1
Operating in Warm Temperature Climates .....	200A-4	Change Transmission Oil and Hydraulic Suction Oil Filter .....	250A-1
Additional Information About Diesel Engine Coolants and John Deere COOL-GARD™ II Coolant Extender .....	200A-4	<b>MFWD and Front Axle Maintenance</b>	
Testing Diesel Engine Coolant .....	200A-5	Check Front Axle Oil Level .....	250B-1
Transmission and Hydraulic Oil .....	200A-5	Change Front Axle Oil .....	250B-1
Front Axle and MFWD Oil .....	200A-6	Adjust Front Axle Thrust Bolt Torque .....	250B-2
Grease .....	200A-6	Lubricate Axle Trunnion .....	250B-2
		Lubricate MFWD Driveshaft .....	250B-2
<b>Maintenance—As Required</b>		Clean MFWD Axle Breather Valve .....	250B-3
Service—As Required .....	200B-1	<b>Differential and Rear Axle Maintenance</b>	
<b>Controls and Instruments Maintenance</b>		Rear Axle .....	250C-1
Controls and Instruments Maintenance .....	210-1	<b>Power Take Off (PTO) Maintenance</b>	
<b>Engine Maintenance</b>		PTO Maintenance .....	250D-1
Required Emission-Related Information .....	220-1	<b>Steering and Brake Maintenance</b>	
Emissions Performance and Tampering .....	220-1	Check and Adjust Toe-In .....	260-1
Daily Startup Procedure .....	220-1	Steering Maintenance .....	260-1
Check Engine Oil Level .....	220-1	Brake Maintenance .....	260-1
Change Engine Oil and Filter .....	220-2	<b>Hydraulics Maintenance</b>	
Clean Dust Unloading Valve .....	220-2	Hydraulic Maintenance .....	270-1
Service the Alternator Belt .....	220-3	<b>Hitch and Drawbar Maintenance</b>	
Clean Front and Side Grille Screens .....	220-3	Lubricate 3-Point Hitch .....	270A-1
Clean Engine Compartment .....	220-4	<b>Selective Control Valve Maintenance</b>	
<b>Air, Fuel, Coolant and Exhaust Maintenance</b>		Check Selective Control Valve .....	270B-1
Service Air Filter Elements .....	230-1	<b>Wheels and Tires Maintenance</b>	
Check Air Filter Hose .....	230-1	Check Wheel Lug Bolts and Hardware .....	280-1
Exhaust Filter Maintenance and Service .....	230-2	Remove and Install Wheels .....	280-1
Automatic (AUTO) Exhaust Filter Cleaning .....	230-2	Check Tire Pressure .....	280-1
Disabled Exhaust Filter Cleaning .....	230-3	Tire Inflation Pressure Chart .....	280-1
Parked Exhaust Filter Cleaning .....	230-4	Select Front Tire Rolling Direction .....	280-1
Service Exhaust Filter Cleaning .....	230-5	Change Wheel Spacing and Tread Width .....	280-2
Check and Drain Water Separator .....	230-6	Lift Points for Jacking up the Tractor .....	280-2
Clean Water Separator and Filter Screen .....	230-6	<b>Ballast Maintenance</b>	
Replace Fuel Filters .....	230-6	Match Ballast to Work Load .....	280A-1
Fuel Injection Pump .....	230-7	<b>Additional Equipment Maintenance</b>	
Fuel Injection Nozzles .....	230-7	Additional Equipment Maintenance .....	280B-1
Drain and Flush Fuel Tank .....	230-7	<b>Operator Station Maintenance</b>	
Check Coolant Level .....	230-7	Raise and Lower Hood .....	290-1
Drain and Flush Cooling System .....	230-8	Remove and Install Side Panels .....	290-1
Fill Cooling System .....	230-9	Remove and Install Front Cowl .....	290-1
Check Radiator Hoses and Clamps .....	230-9	Inspect ROPS for Loose Hardware .....	290-2
Clean Radiator, Fuel, and Transmission Cooling Fins .....	230-9	<b>Troubleshooting</b>	
<b>Electrical and Lighting Maintenance</b>		Information Display Fault Messages .....	300-1
Prevent Battery Explosions .....	240-1	Engine .....	300-2
Remove and Install Battery .....	240-1	Electrical System .....	300-4
Clean Battery and Terminals .....	240-2	Machine .....	300-6
Use Booster Battery .....	240-2	Brakes .....	300-7
Replace Headlight Bulb .....	240-2	Steering .....	300-7
Replace Tail/Turn Light Bulb .....	240-3		
Replace Warning Light Bulb .....	240-3		
Replace Fuses and Relays .....	240-3		
<b>Drivetrain Maintenance</b>			
Drivetrain Maintenance .....	250-1		

Page

**On Board Diagnostics**

Service Alert and Information Display ..... 300A-1  
 On Board Diagnostic Display ..... 300A-1  
 On-Board Diagnostic (OBD) Tool ..... 300A-1  
 Diagnostic Trouble Code (DTC) ..... 300A-1

**Specifications**

Engine Specifications ..... 400-1  
 Drivetrain Specifications ..... 400-1  
 Hydraulic System Specifications ..... 400-1  
 Electrical System Specifications ..... 400-1  
 Fluid Capacities ..... 400-1  
 Ground Speeds ..... 400-2  
 Dimensions ..... 400-2  
 Height From Ground ..... 400-2  
 Ground Clearance ..... 400-2  
 Turning Radius ..... 400-2  
 Machine Weight ..... 400-2  
 3-Point Hitch Specification ..... 400-2  
 Coupling Devices ..... 400-2  
 How to Calculate Maximum Permissible  
     Download on Trailer Hitch ..... 400-3  
 How to Calculate Permissible Mass ..... 400-3  
 Unified Inch Bolt and Screw Torque Values ..... 400-4  
 Metric Bolt and Screw Torque Values ..... 400-5

**Identification Numbers**

Product Identification Information ..... 400A-1  
 Record Identification Numbers ..... 400A-1

**Certification and Warranty**

Product Warranty ..... 400B-1  
 YANMAR POWER TECHNOLOGY CO.,  
 LTD. EMISSION CONTROL SYSTEM  
 WARRANTY - USA ONLY ..... 400B-1  
 Emission System Warranty ..... 400B-3  
 Tire Warranty ..... 400B-5  
 Limited Battery Warranty ..... 400B-5

**Service Records**

Every 10 Hour Service ..... 500-1  
 Every 50 Hour Service ..... 500-1  
 Every 200 Hour Service ..... 500-1  
 Every 400 Hour Service ..... 500-2  
 Every 600 Hour Service ..... 500-2  
 Yearly ..... 500-2  
 Every 1000 Hour Service ..... 500-2  
 Every 2000 Hour Service or Every Two Years ... 500-3  
 Every 6000 Hour Service or Every Six Years ... 500-3  
 Change of Ownership ..... 500-3  
 Change of Ownership ..... 500-4  
 Change of Ownership ..... 500-4

# General Information

## Product View



*Open Operator's Station*

LVP15913—UN—19JUL22

ycwrhfr,1658235490714-19-19JUL22

## Trademarks

Trademarks	
GreenStar™	Trademark of Deere & Company
iMatch™	Trademark of Deere & Company
Quik-Tatch™	Trademark of Deere & Company
Cool-Gard™	Trademark of Deere & Company
Cool-Gard™ II	Trademark of Deere & Company
Plus-50™	Trademark of Deere & Company
Torq-Gard™	Trademark of Deere & Company
Hy-Gard™	Trademark of Deere & Company
LoadMatch™	Trademark of Deere & Company
SpeedMatch™	Trademark of Deere & Company
MotionMatch™	Trademark of Deere & Company
iMatch™	Trademark of Deere & Company

UP00731,0000111-19-27AUG18

## Glossary of Terms


Abbreviation	Description
DTC	Diagnostic Trouble Code
ECU	Engine Control Unit
HST	Hydrostatic Transmission

General Information

Abbreviation	Description
MFWD	Mechanical Front Wheel Drive
OBD	On-Board Diagnostic
PTO	Power Take Off
RIO	Reverse Implement Option
ROPS	Roll-Over Protective Structure
SCV	Selective Control Valve

UP00731,0000112-19-27AUG18

Regions and Country Versions

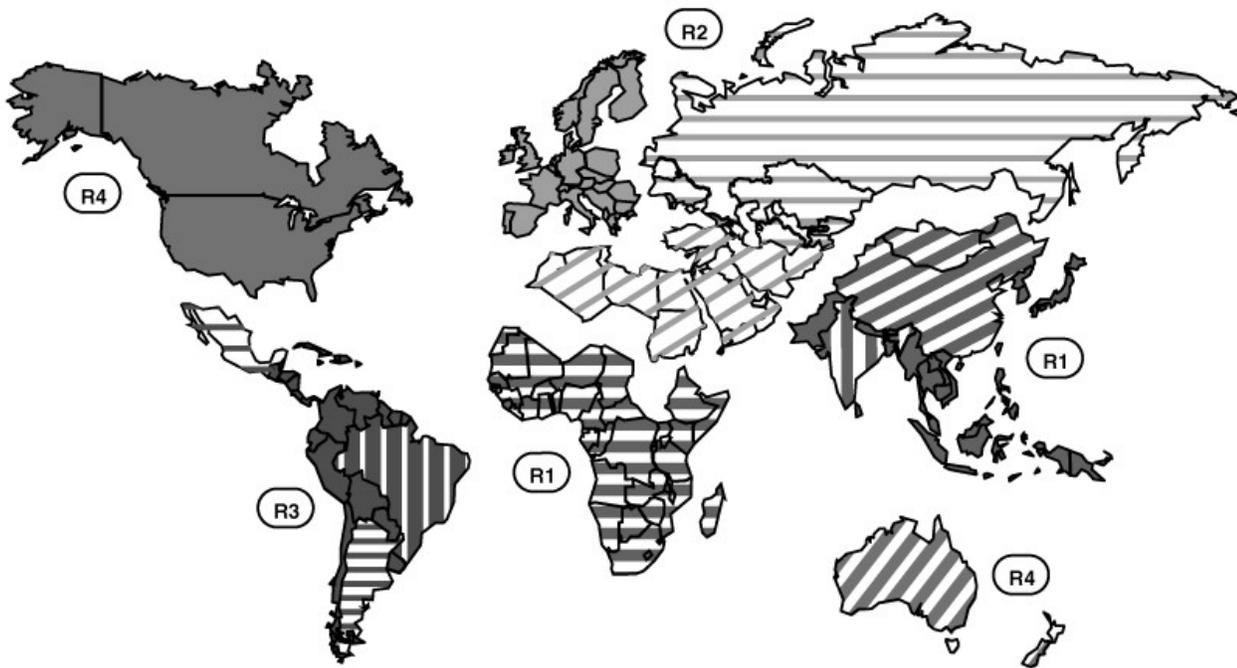

RXA0150915—UN—01FEB16

R1—Asia and Sub-Saharan Africa  
 R1A—Far East, Sri Lanka, and Pakistan  
 R1B—China  
 R1C—India  
 R1D—Sub-Saharan Africa  
 R2—Europe, North Africa, Mid East, CIS  
 R2A—European Union (EU 28+)  
 R2B—North Africa and North Middle East (NANME)  
 R2C—Commonwealth of Independent States (CIS)

R3—Central and South America  
 R3A—Latin America (JDLA)  
 R3B—Brazil  
 R3C—Mexico  
 R3D—Argentina  
 R4—North America  
 R4A—USA and Canada  
 R4B—Oceania (Australia and New Zealand)

Regions 1, 2 and 3 equipment is traditionally manufactured with Economic Commission for Europe (ECE) features or systems.

Region 4 equipment is traditionally manufactured with Society of Automotive Engineers (SAE) features or systems.

Drive and signal lighting, traffic signs, safety signs, and braking features are some of the systems that differ between ECE and SAE. For example, Text-Free (pictorial only) safety signs are used for ECE while Text with Picture safety signs are used on SAE. When identifying equipment information by regions, countries, trade federations, industry standards, or governmental regulations, refer to the region map provided.


*NOTE: Australia and New Zealand (R4B) are available as either region 4 and/or region 2 configurations, only using text-free safety signs.*

GS25068,0001DB8-19-14JAN19

## Machine Overview

**IMPORTANT: READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in the personal injury or equipment damage. This manual and safety signs on your machine are available in other languages. (See your John Deere dealer to order.)**

Review manual sections for Controls and Instruments identification, Steering and Brakes, Transmission, and Transportation before operation on the road or in the field.

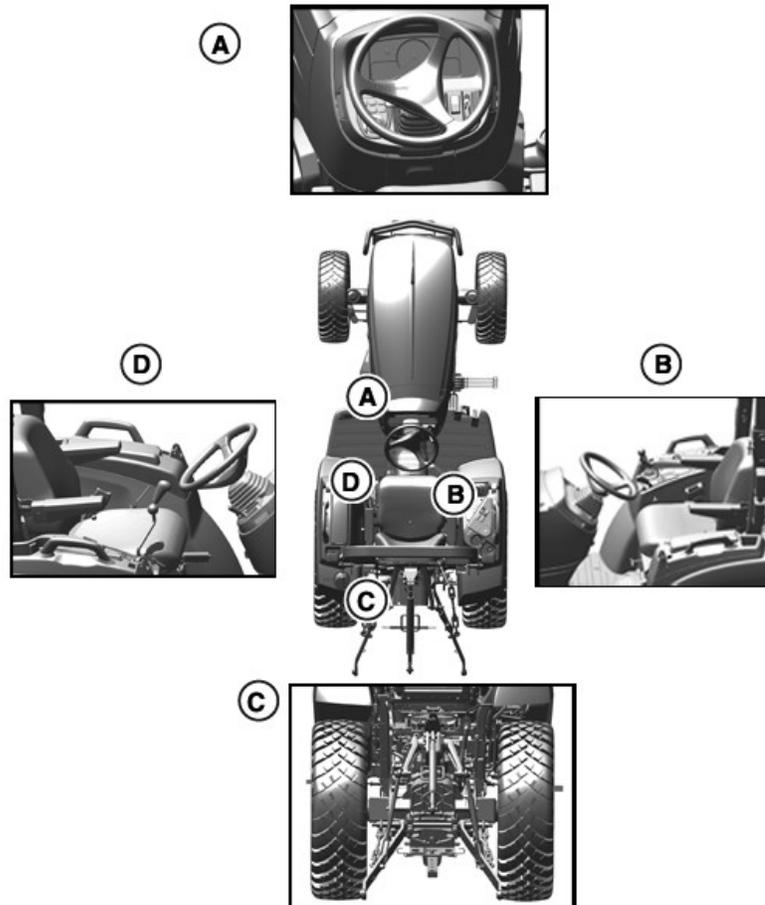

A—Front Console Controls  
B—Right Side Controls

C—Rear Implement Interface  
D—Left Side Controls

LVP15914—UN—19JUL22

### Operating the Machine Introduction:

- Sit on the operator seat and fasten seat belt.
- Start engine. (See the Engine Operation section.)
- Turn on lights or signals as required. (See Electrical and Lighting Operation section.)
- Operate transmission to move the machine. (See the Transmission Operation section.)
- Use steering and brakes as required. (See Steering and Brake Operation section.)
- Activate features and implements as required. (See Operational sections.)

### Preliminary Overview

Use the following list as a reminder to inspect items before operation. Detailed operation and service information is available in Operational and Maintenance sections.

- Review manual and machine for safety information and safety signs.
- Review manual for proper operation, adjustment, and service.
- Review manual for engine and drivetrain operations. (throttles, brakes, steering, transmission gears, MFWD, and Differential Lock.)
- Review manual for control devices (hitch, hydraulic, and electrical).
- Review manual for regular lubrication points and intervals.
- Check for visual signs of leak damage, failures, and flats.
- Prepare the machine hardware, fuel, fluids, lubricants, air, and daily maintenance.
- Check and prepare implements or attachments according to implement or attachment Operator Manuals.

### Using this Manual:

The information provided in this manual is divided into sections. The sections are organized in typical machine features or functional systems (Engine, Electrical, Hydraulic, Transmission, and so on). These sections are identified at the top of each page. Specific information within each section is organized into modules. These modules are enclosed in boxes and the heading at the top left identifies the main modules. Page numbers identify the section as well as the number of the page in the section.

By reviewing this manual frequently, you learn which section to turn to for the specific information. For example, the Safety information is covered at the beginning. The operation of all features and systems is covered in the first half of the manual. Maintenance Intervals are in the middle of the manual. The

Maintenance of all the features and systems are covered in the second half of the manual, and the Specifications are covered at the end.

A detailed table of contents appears before Safety information and there is an alphabetical index at the very end of the manual.

The Operator Manual content flows as sequential reading down one column of text and graphic then over to the top of the next column as shown.



W28329—UN—18OCT17  
ycwrhfr,1658235691414-19-19JUL22

# Safety

## Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-03OCT22

## Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-01AUG22

## Understand Signal Words



**▲ WARNING**

**▲ CAUTION**

TS187—19—30SEP88

**DANGER;** The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.


**WARNING;** The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION;** The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

## Prepare for Emergencies

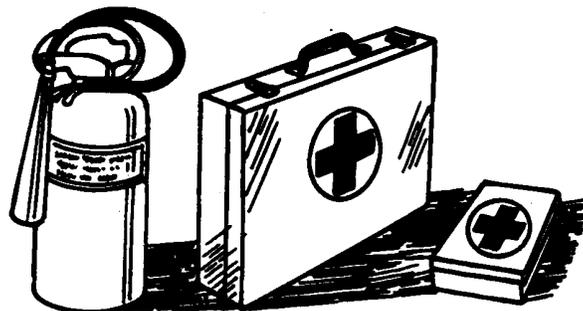

TS291—UN—15APR13


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

## Wear Protective Clothing

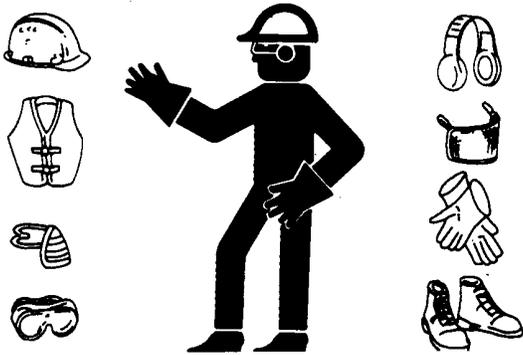

TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX.WEAR2-19-03MAR93

## Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.


Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX.FIRE1-19-12OCT11

## Protect Against Noise

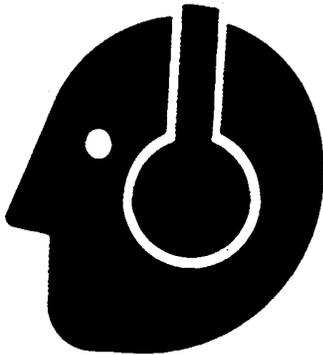

TS207—UN—23AUG88

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

**Always wear hearing protection.** Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

DX.NOISE-19-03OCT17

## Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

## Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.
- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION-19-12OCT11

## In Case of Fire



TS227—UN—15APR13

### CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:


1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

## Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

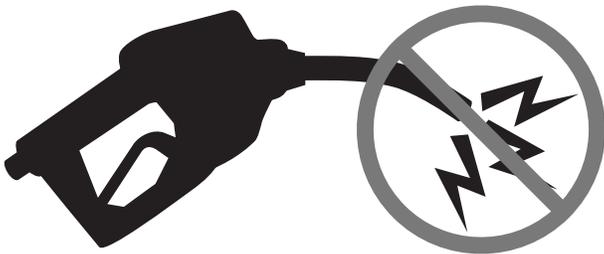

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

DX,FUEL,STATIC,ELEC-19-12JUL13

## Keep ROPS Installed Properly

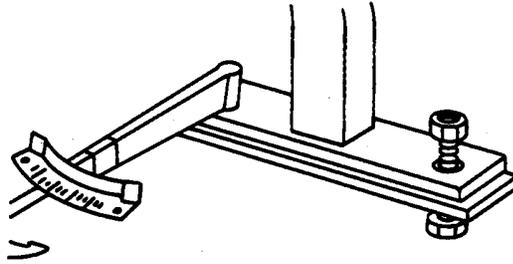

TS212—UN—23AUG88

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.


The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

DX,ROPS3-19-12OCT11

## Use Foldable ROPS and Seat Belt Properly

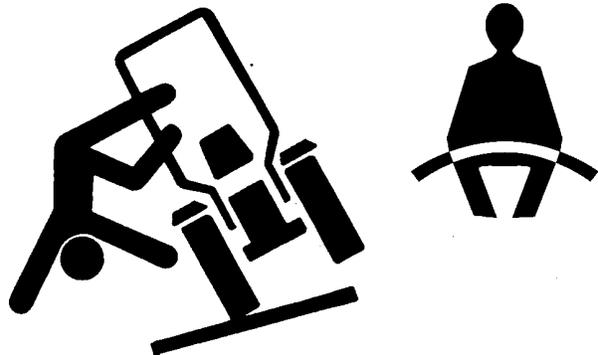

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
  - Hold the latch and pull the seat belt across the body.
  - Insert the latch into the buckle. Listen for a click.
  - Tug on the seat belt to make sure that the belt is securely fastened.


- Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. DO NOT USE a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

DX,FOLDROPS-19-22AUG13

### Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95

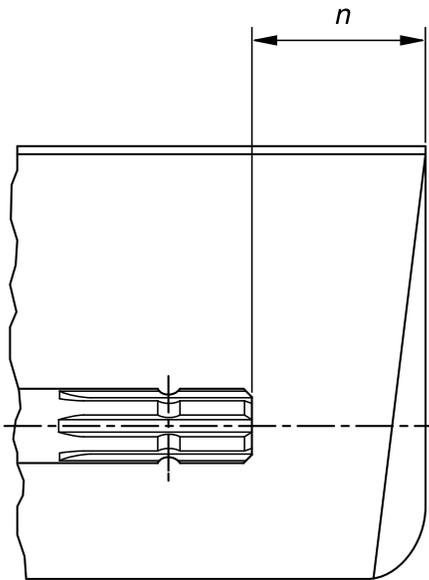

H96219—UN—29APR10

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off driveshafths with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making

adjustments, connections, or cleaning out PTO driven equipment.

Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.


Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/ Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)
4	57.5 mm (2.264 in.)	22	100 mm (4.00 in.)

DX,PTO-19-28FEB17

### Use Steps and Handholds Correctly

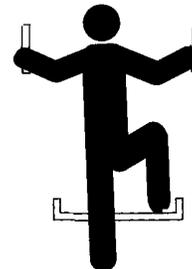

T133468—UN—15APR13

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease

or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

DX,WW,MOUNT-19-12OCT11


## Read Operator's Manuals for ISOBUS Controllers

In addition to GreenStar™ Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer. Some of these functions could pose a hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product prior to use.

*NOTE: ISOBUS refers to the ISO Standard 11783*

DX,WW,ISOBUS-19-15JUL15

## Use Seat Belt Properly

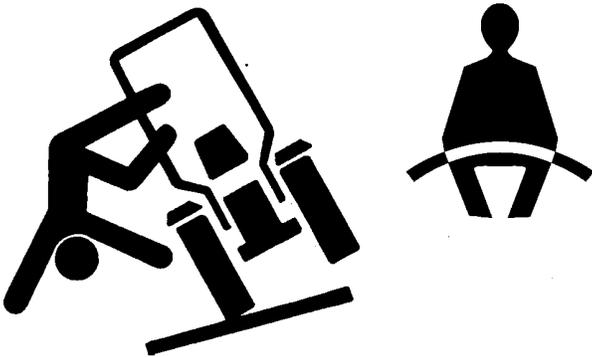

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage,

such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

DX,ROPS1-19-22AUG13

## Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- Operators must be mentally and physically capable of accessing the operator's station and/or controls, and operating the machine properly and safely.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/ attachments, such as front loaders.
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pickup hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

## Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with a seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual

brakes, or operating around hazards on rough ground or steep slopes.

- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

#### Heated and Ventilated Operator's Seat

- An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

#### Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

#### Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral, and securely engage park mechanism, including the park pawl and park brake. In addition, if the tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

#### Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors are:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor

- Crushing and pinching during hitching

DX,WW,TRACTOR-19-08MAY19

#### Avoid Backover Accidents



PC10857XW—UN—15APR13

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.

DX,AVOID,BACKOVER,ACCIDENTS-19-30AUG10


#### Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY-19-12OCT11

## Operating the Loader Tractor Safely

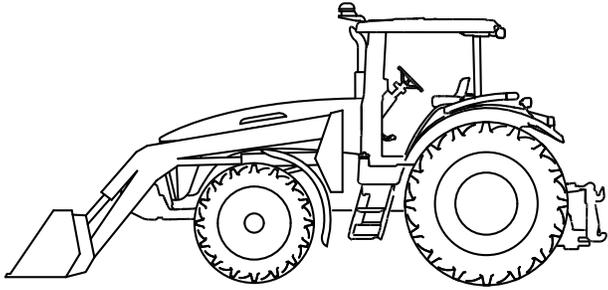

TS1692—UN—09NOV09

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.

Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.


Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and clammers).

Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER-19-18SEP12

## Keep Riders Off Machine

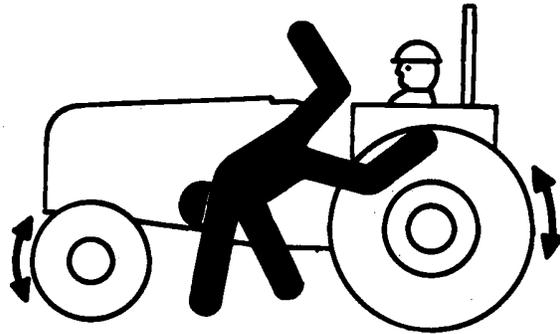

TS290—UN—23AUG88

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

DX,RIDER-19-03MAR93

## Instructional Seat




TS1730—UN—24MAY13

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

DX,SEAT,NA-19-22AUG13

## Use Safety Lights and Devices

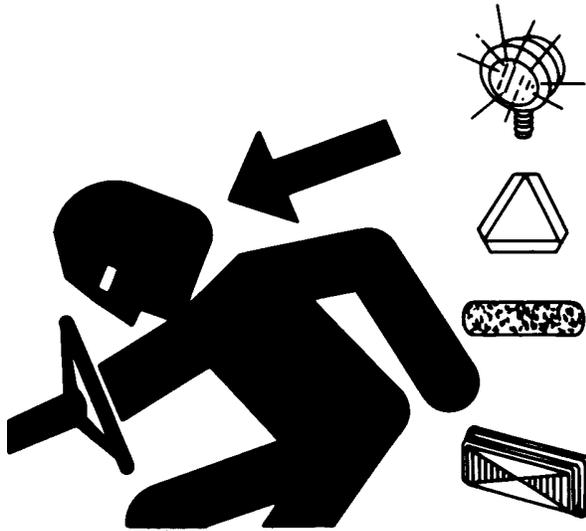


TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

DX.FLASH-19-07JUL99

## Use a Safety Chain

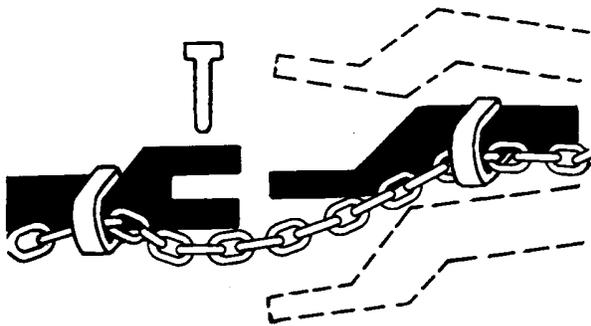

TS217—UN—23AUG88

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.


Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength

rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

DX.CHAIN-19-03MAR93

## Transport Towed Equipment at Safe Speeds

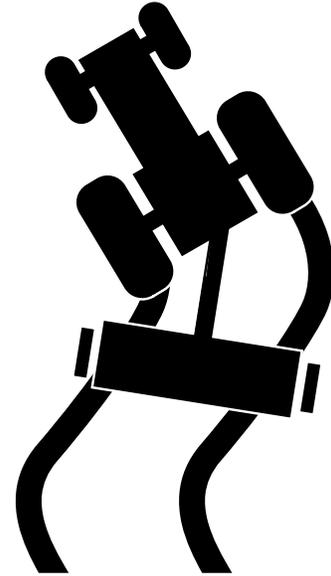

TS1686—UN—27SEP06

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components

Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

**Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.**

**Implements without brakes:** Do not transport at speeds greater than 32 km/h (20 mph).


**Implements with brakes:**

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.
- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX,TOW1-19-28FEB17

### Use Caution on Slopes, Uneven Terrain, and Rough Ground

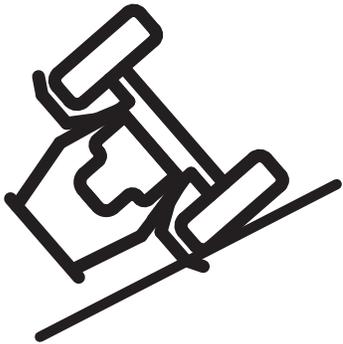

RXA0103437—UN—01JUL09

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.

Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in


Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE-19-28FEB17

### Freeing a Mired Machine

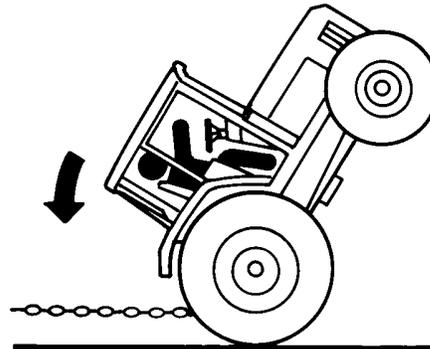

TS1645—UN—15SEP95



TS263—UN—23AUG88

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not

hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

DX.MIRED-19-07JUL99

## Avoid Contact with Agricultural Chemicals



TS220—UN—15APR13



TS272—UN—23AUG88


This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

DX.CABS-19-25MAR09

## Handle Agricultural Chemicals Safely

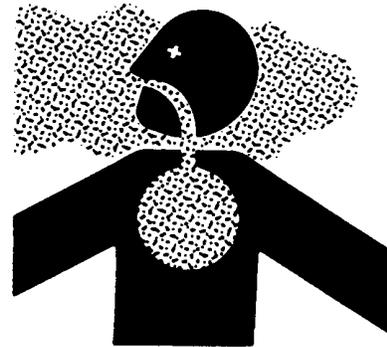

TS220—UN—15APR13



A34471

A34471—UN—11OCT88

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
  - Chemicals labeled **'Danger'**: Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
  - Chemicals labeled **'Warning'**: Less toxic. Generally require use of goggles, gloves, and skin protections.
  - Chemicals labeled **'Caution'**: Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.


- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.
- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse empty containers and puncture or crush containers and dispose of properly.

DX,WW,CHEM01-19-24AUG10

## Handling Batteries Safely



TS204—UN—15APR13

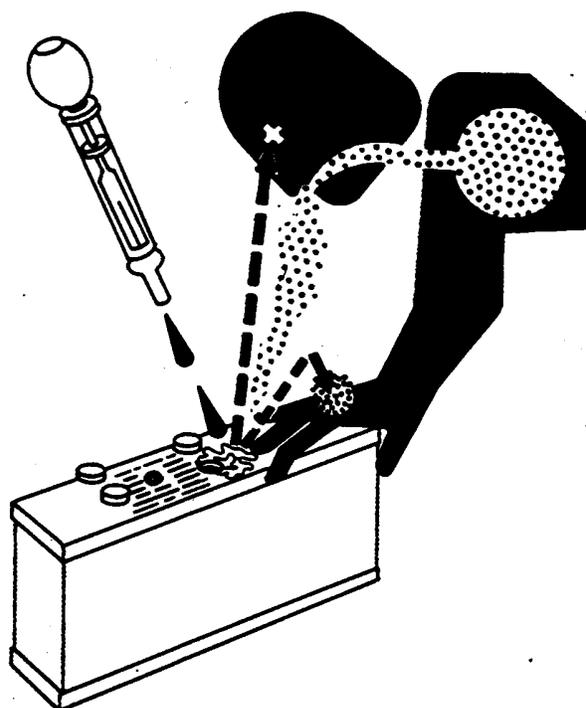

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

### Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

### If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

### If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

**WARNING:** Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,WW,BATTERIES-19-02DEC10

### Avoid Heating Near Pressurized Fluid Lines



TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

### Remove Paint Before Welding or Heating



TS220—UN—15APR13

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT-19-24JUL02

### Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX,WW,RECEIVER-19-24AUG10

## Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.


On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

## Avoid Hot Exhaust

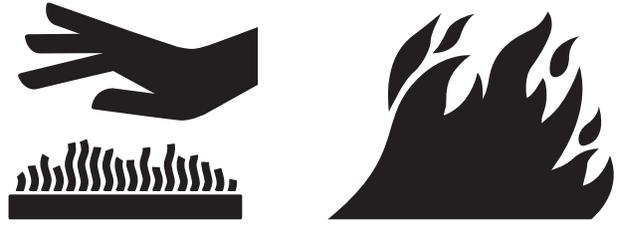

RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09


## Clean Exhaust Filter Safely



TS227—UN—15APR13



TS271—UN—23AUG88

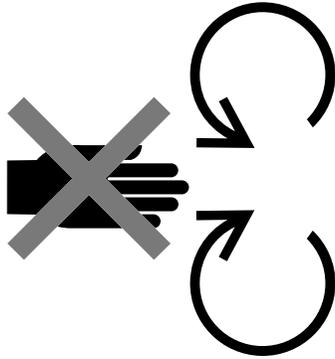

TS1693—UN—09DEC09



TS1695—UN—07DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine


Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

DX,EXHAUST,FILTER-19-12JAN11

## Work In Ventilated Area

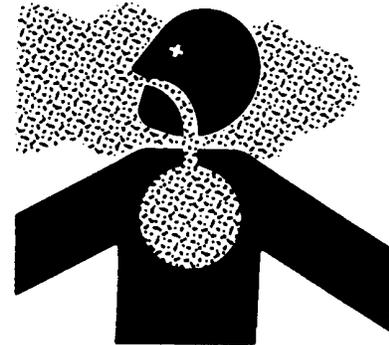


TS220—UN—15APR13

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

DX,AIR-19-17FEB99

## Support Machine Properly

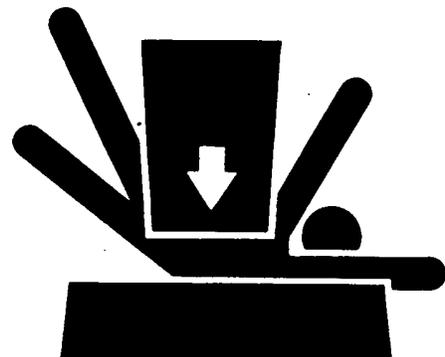

TS229—UN—23AUG88

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load.

Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

### Prevent Machine Runaway



TS177—UN—11JAN89


Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS1-19-29SEP98

### Park Machine Safely

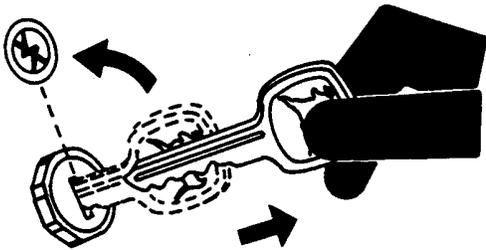


TS230—UN—24MAY89

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

DX,PARK-19-04JUN90

### Transport Tractor Safely

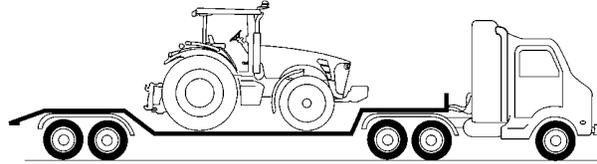

RXA0103709—UN—01JUL09

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

DX,WW,TRANSPORT-19-19AUG09

### Service Cooling System Safely



TS281—UN—15APR13

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

DX,WW,COOLING-19-19AUG09

## Service Accumulator Systems Safely



TS281—UN—15APR13

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.

Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.

DX,WW,ACCLA2-19-22AUG03

## Service Tires Safely



RXA0103438—UN—11JUN09

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.


When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.

Wheels and tires are heavy. When handling wheels and tires use a safe lifting device or get an assistant to help lift, install, or remove.

DX,WW,RIMS-19-28FEB17

## Service Front-Wheel Drive Tractor Safely

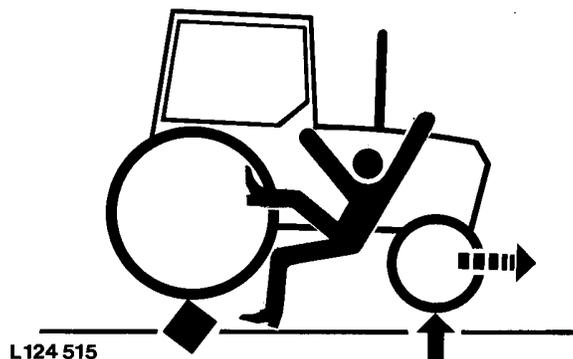


L124 515

L124515—UN—06AUG94

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

DX,WW,MFWD-19-19AUG09

## Tightening Wheel Retaining Bolts/Nuts

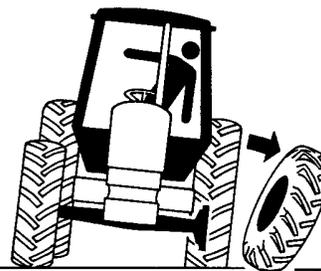


L124 516

L124516—UN—03JAN95

Torque wheel retaining bolts/nuts at the intervals specified in section Break-In Period and Service.

DX,WW,WHEEL-19-12OCT11

## Avoid High-Pressure Fluids

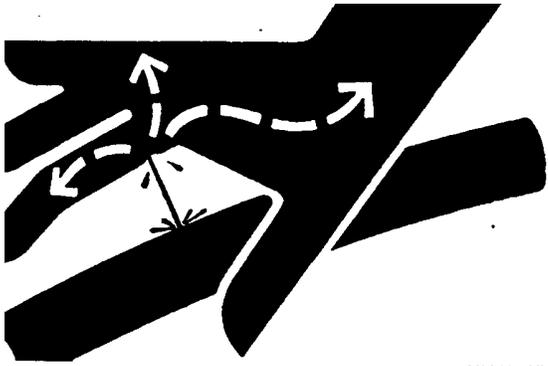

X9811—UN—23AUG88

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID-19-12OCT11

## Do Not Open High-Pressure Fuel System



TS1343—UN—18MAR92

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel

lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

DX,WW,HPCR1-19-07JAN03

## Store Attachments Safely




TS219—UN—23AUG88

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

DX,STORE-19-03MAR93

## Decommissioning — Proper Recycling and Disposal of Fluids and Components

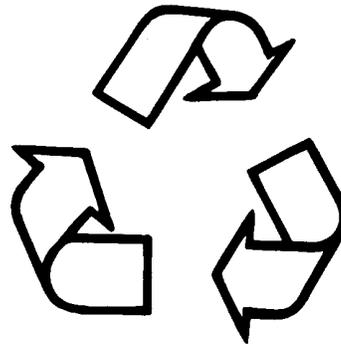

TS1133—UN—15APR13

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.


- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid); filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX.DRAIN-19-01JUN15

---

# Safety Signs

## Replace Safety Signs

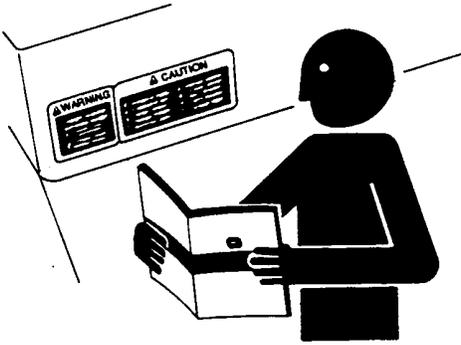


TS201—UN—15APR13

Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.


DX,SIGNS-19-18AUG09

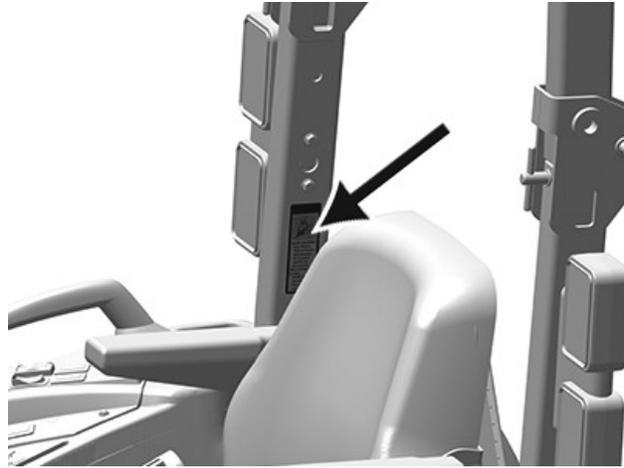

LVP15915—UN—19JUL22

Right-Side ROPS

## Use Seat Belt Properly

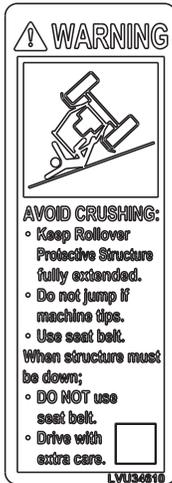

LV28432—UN—18MAY17

### WARNING

#### AVOID CRUSHING:


- Keep Rollover Protective Structure fully extended.
- Do not jump if machine tips.
- Use Seat Belt.

#### When structure must be down

- DO NOT use seat belt.
- Drive with extra care.

ycwrhfr,1658235804776-19-19JUL22

## Operator's Manual

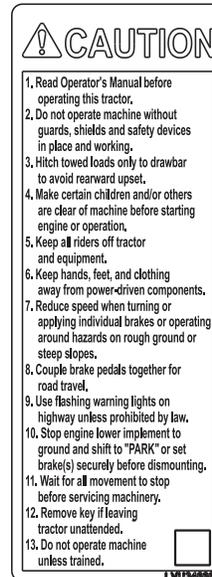

LV29031—UN—27JUL17



LVP15916—UN—19JUL22

Left Side of ROPS

**CAUTION**

1. Read Operator's Manual before operating this tractor.
2. Do not operate machine without guards, shields and safety devices in place and working.
3. Hitch towed loads only to drawbar to avoid rearward upset.
4. Make certain children and/or others are clear of machine before starting engine or operation.
5. Keep all riders off tractor and equipment.
6. Keep hands, feet and clothing away from power-driven components.
7. Reduce speed when turning or applying individual brakes or operating around hazards on rough ground or steep slopes.
8. Couple brake pedals together for road travel.
9. Use flashing warning lights on highway unless prohibited by law.
10. Stop engine, lower implement to ground and shift to "PARK" or set brake(s) securely before dismounting.
11. Wait for all movement to stop before servicing machinery.
12. Remove key if leaving machine unattended.
13. Do not operate machine unless trained.


ycwrhfr,1658235825694-19-19JUL22

**PTO Shield**



LVU34602

LV28429—UN—18MAY17

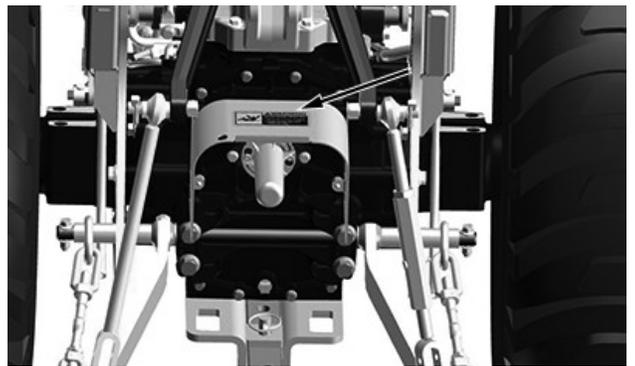

LV28759—UN—18DEC17

PTO Shield


**WARNING**

**AVOID INJURY FROM PTO**

- Keep all shields in place
- Keep hands, feet and clothing away

PP71895,000153B-19-24AUG20

**Starter**

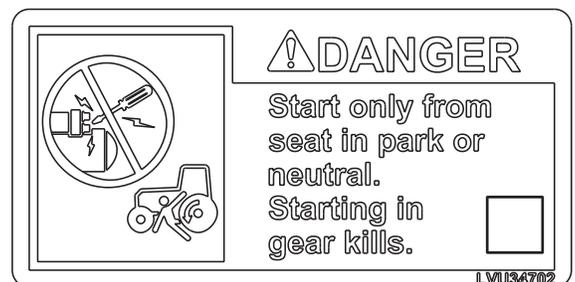

LVU34702

LV29621—UN—09JAN18

## Safety Signs




Starter

LV28763—UN—18DEC17

**Do not place hands or fingers near foldable ROPS when implements are raised.**

PP71895,000153C-19-24AUG20

## Canopy or Sunshade

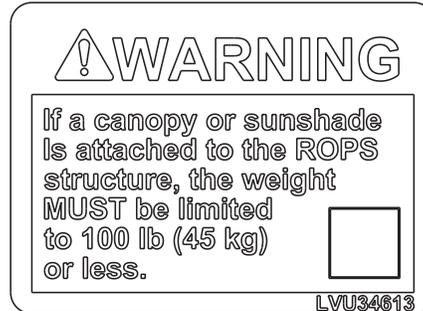

LVU34613

LV28492—UN—01JUN17


## DANGER

**Start only from seat in park or neutral.**


**Starting in gear kills.**

UP00731,000098F-19-06APR20

## Folding ROPS

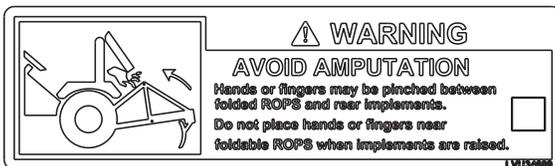

LV28431—UN—18MAY17

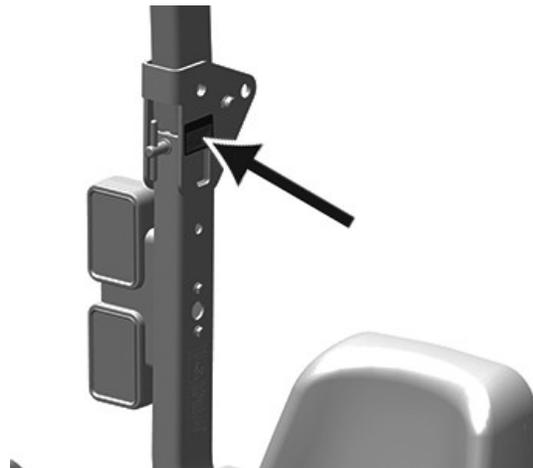


Right Side of ROPS

LVP15917—UN—19JUL22

## WARNING

**If a canopy or sunshade is attached to the ROPS structure, the weight MUST be limited to 100 lb (45 kg) or less.**

ycwrhfr,1658235860740-19-19JUL22

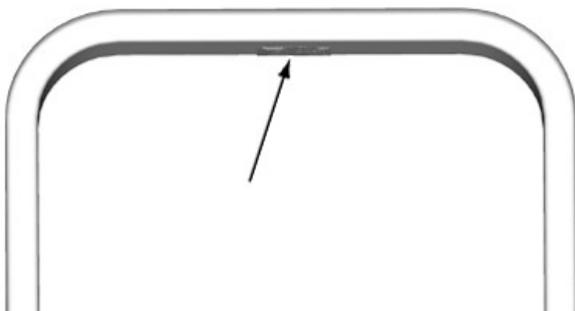

Top of ROPS

LV18894—UN—03SEP13

## WARNING

### AVOID AMPUTATION

**Hands or fingers may be pinched between folded ROPS and rear implements.**

## Rotating Blades



LV30644—UN—30SEP19



LVP15918—UN—19JUL22

*Right Side Console*

### **DANGER**


#### **ROTATING BLADES CUT OFF ARMS AND LEGS**

- Do not mow when children or others are around
- Do not mow in reverse
- Look down and behind before and while backing
- Never carry children even with blades off

ycwrhfr,1658235876303-19-19JUL22

# Controls and Instruments

## Front Console Controls

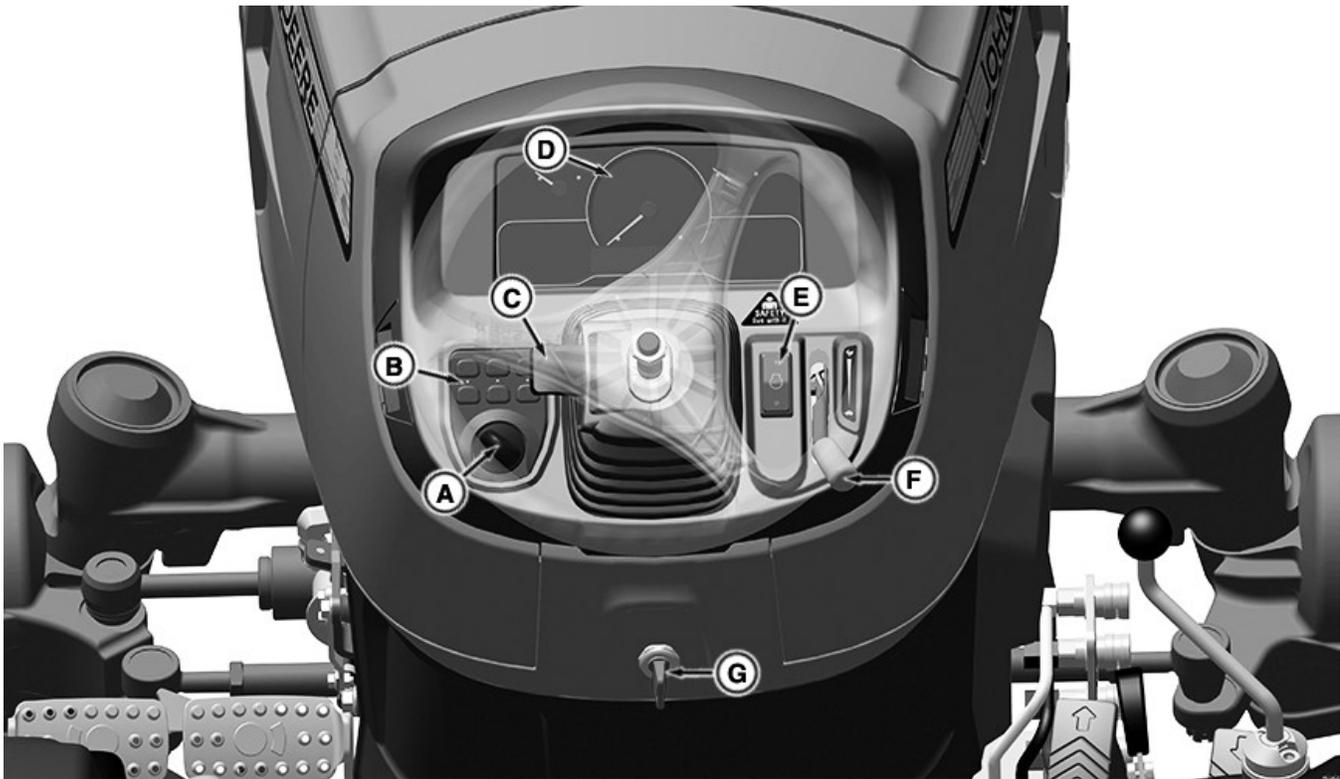

LV24873—UN—12APR16


*Front Console*

A—Head/Work Lights Switch  
B—Dash Panel Module  
C—Tilt Wheel Lever  
D—Instrument Cluster

E—eThrottle Switch  
F—Throttle Lever  
G—Key Switch

UP00731,0000200-19-16AUG16

## Foot-Operated Controls

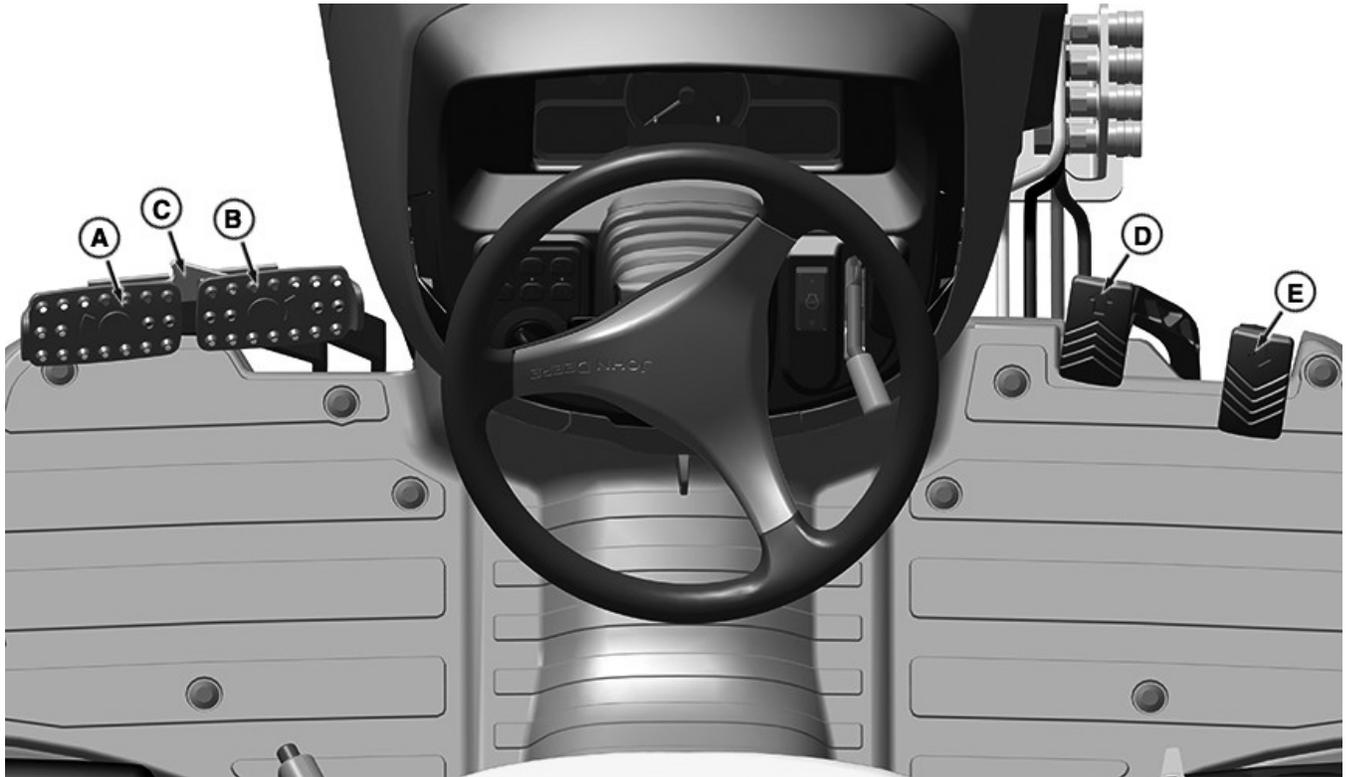

LV24874—UN—27APR16

*Foot Controls*


**A—Left Brake Pedal**  
**B—Right Brake Pedal**  
**C—Brake Pedal Lock Tab**

**D—Forward Travel Pedal**  
**E—Reverse Travel Pedal**

UP00731.0000203-19-21JUN16



## Left-Hand Console Controls

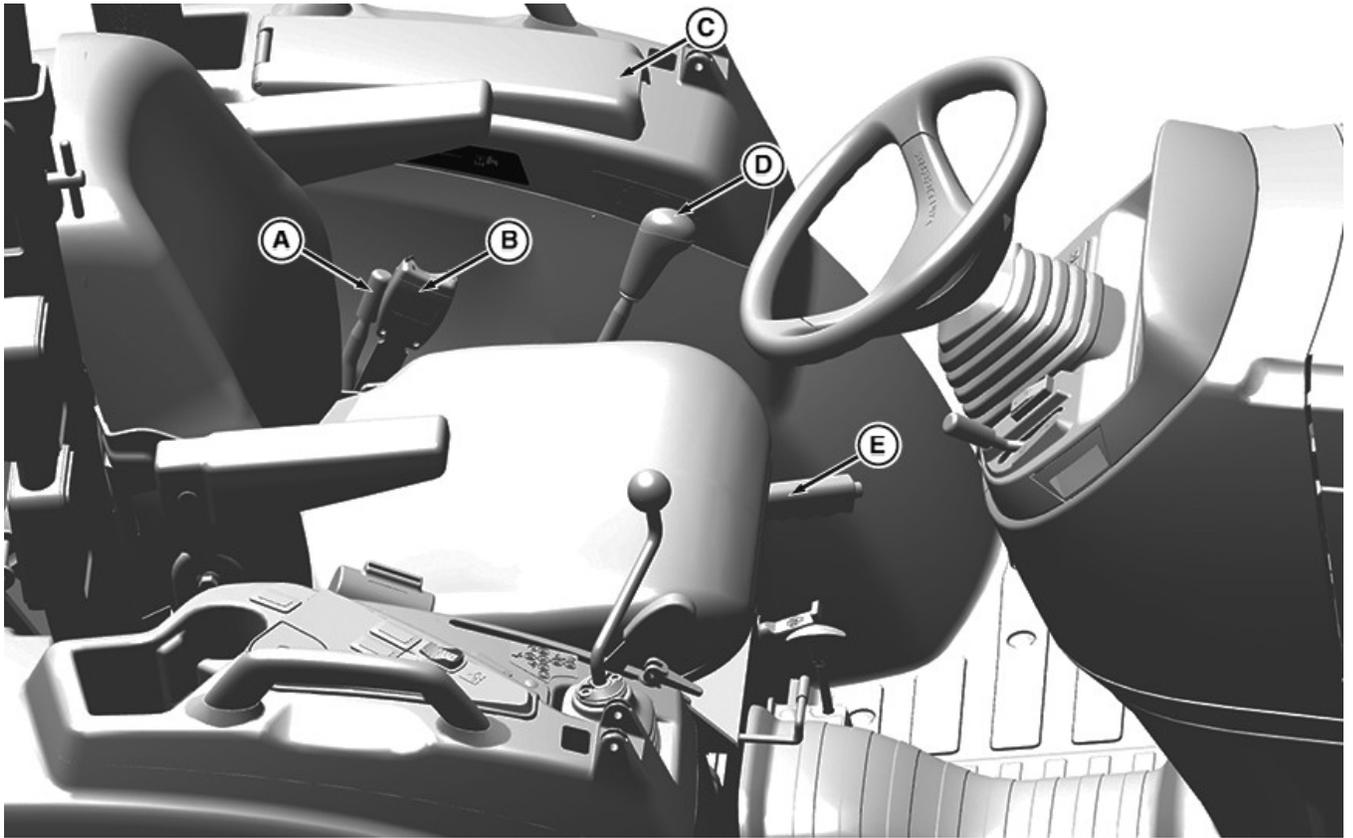

LVP15919—UN—19JUL22


*Left-Hand Side Console*

A—PTO Shift Lever  
B—Seat Belt  
C—Operator's Manual Holder

D—Transmission Range Shift Lever  
E—Park Brake Lever

ycwrhfr,1658238385724-19-19JUL22

Differential, MFWD, Rate of Drop, and Seat Controls

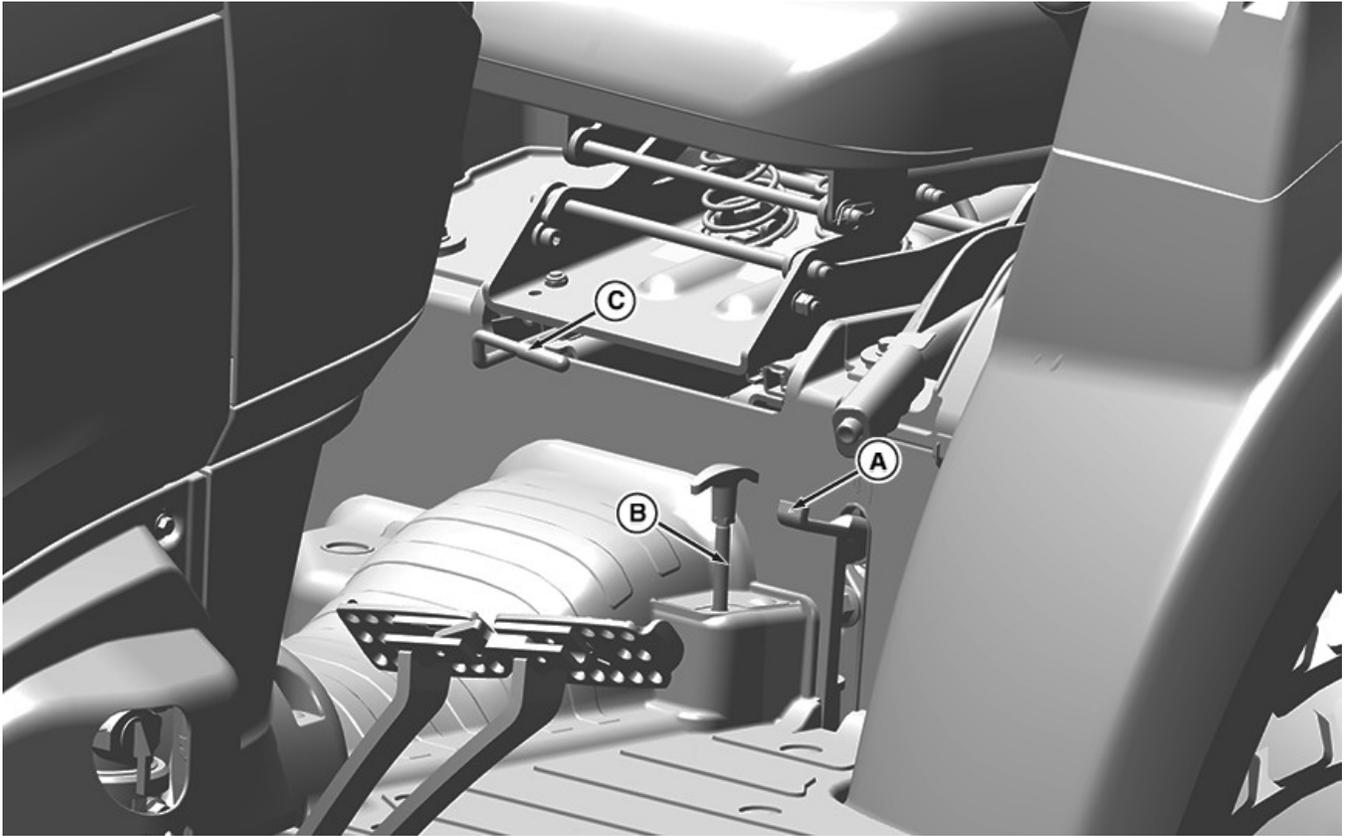

LVP15920—UN—19JUL22



LVP15921—UN—19JUL22

*Rate of Drop/Lock Valve*


A—Differential Lock Pedal  
B—MFWD Control Lever

C—Fore and Aft Seat Adjustment Lever  
D—Rate of Drop/Lock Valve Knob

ycwrhfr,1658238348693-19-19JUL22

## Instrument Cluster

### Instrument Control Panel

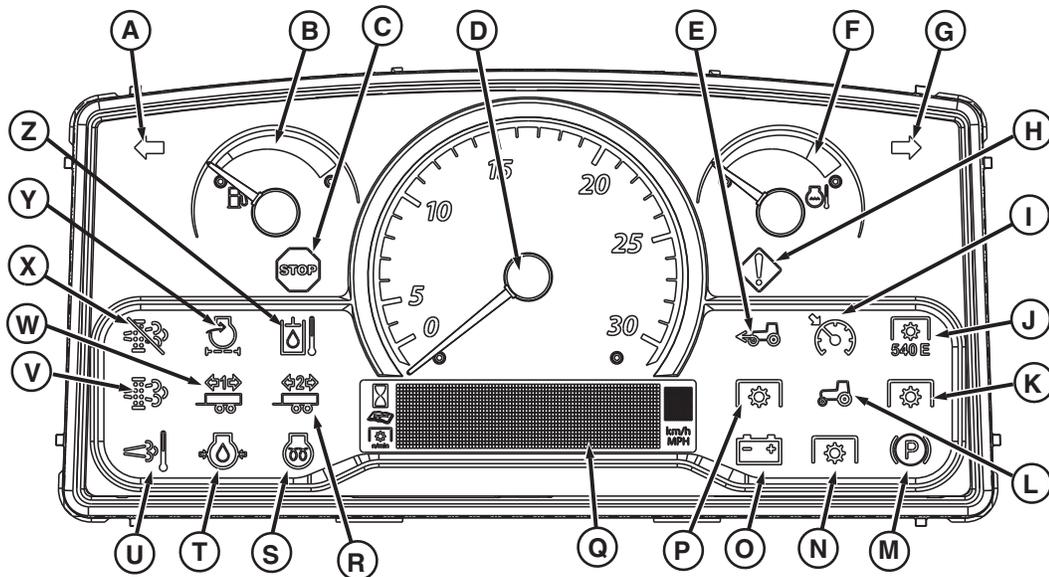

Instrument Control Panel

LV30715—UN—18MAR20

**A - Left Turn Signal/Warning Flasher Indicator Icon** - Left turn signal, hazard light, and the headlight/taillight ON indicator light.

**B - Fuel Gauge** - Indicates the fuel level in the tank.

**C - STOP Indicator Icon** - Light flashes when a serious malfunction is detected.

**D - Tachometer** - Displays engine speed in increments of 100.

**E - Front-Wheel Drive Indicator Icon** - Illuminates when front-wheel drive is switched on.

**F - Engine Coolant Temperature Gauge** - Indicates the temperature of the cooling system.

**G - Right Turn Signal/Warning Flasher Indicator Icon** - Right turn signal, hazard light, and the headlight/taillight ON indicator light.

**H - Service Alert Indicator Icon** - Light flashes indicating performance or operational problem is detected that needs to be resolved as soon as possible.

**I - Cruise Control Switch Icon** - Illuminates when cruise control is switched on.

**J - 540E PTO Indicator Icon** - Not used.

**K - Rear PTO Indicator Icon** - Not used.

**L - Tractor PTO Indicator Icon** - Not used.

**M - Parking Brake Light** - Illuminates when the ignition key is in the ON position and the park brake is engaged.

**N - Mid PTO Indicator Icon** - Illuminates when either the Mid or Rear PTO is engaged.

**O - Alternator/Battery Charging Icon** - Illuminates when the ignition key is in the ON position and the engine is not running. It also indicates that an electrical load has exceeded alternator capacity and continued operation could deplete battery reserve.

**P - Front PTO Indicator Icon** - Not used.

**Q - Information Display Screen** - Displays operational information.

**R - Trailer 2 Indicator Icon** - Not used.

**S - Engine Glow Plug Indicator Icon** - Illuminates when the engine control unit (ECU) determines the need for engine pre-heating. Time depends on ambient temperature.

**T - Engine Oil Pressure Icon** - Illuminates when there is insufficient engine oil pressure to continue operation.

**U - High Exhaust Temperature Icon** - Illuminates when the temperature is high enough inside the exhaust filter to allow active filter cleaning.

**V - Exhaust Filter Indicator Icon** - Illuminates when soot levels in the filter are high and exhaust filter cleaning is needed.

**W - Trailer 1 Indicator Icon** - Not used.

**X - Auto Cleaning Disabled Indicator Icon** - Not used.

**Y - Air Filter Restriction Icon** - Illuminates when air

cleaner element is clogged, indicating air element needs to be cleaned or replaced.

the hydraulic oil temperature is overheated (If equipped).

**Z - Hydraulic Oil Temperature Icon** - Illuminates when

UP00731,000099C-19-18MAR20

---

## Information Display Icons

The following icons will show up in the information display screen if applicable for your specific tractor.



Information Display Icons

LV30645—UN—12DEC19

**1 - RIO Active Icon** - Illuminates when reverse implement option is active.

**2 - Important Icon** - This symbol is associated with feedback to operator.

**3 - Shift to Neutral Icon** - Shift to neutral position..

**4 - Wrench Icon** - Illuminates when there is an active error shown on the information display panel. May be accompanied by a display message.

**5 - Automatic Regeneration Off Icon** - Automatic regeneration has been disabled.

**6 - Diesel Particulate Filter—Exhaust Filter Icon** - When shown on the LCD, this symbol is associated with the display of soot level and filter hours.

**7 - Shut PTO Off Icon** - Illuminates when the condition requires the PTO to be shutoff.

**8 - Engine Overheat Icon** - Illuminates when engine coolant temperature is too high.

**9 - Apply Park Brake Icon** - Illuminates when the condition requires park brake engaged. May be accompanied by a display message.

**10 - ECU Regeneration Inhibited Icon** - Illuminates if the ECU is preventing regeneration. See your John Deere dealer.

**11 - Engine Cold Icon** - Illuminates when regeneration requires engine to be above 60° C.

**12 - Reduce Engine Speed Icon** - Illuminates when regeneration requires initial low idle.

**13 - Increase Engine Speed Icon** - Illuminates when engine speed needs to be increase..

**14 - Electrical System Fault Icon** - Illuminates when an electrical fault is present. May be accompanied by a display message.

**15 - Engine Run Fault Icon** - Illuminates when the operator attempts to engage the starter when the engine is already running. May be accompanied by a display message.

**16 - Engine Icon** - This symbol is associated with the display of engine hours.

**17 - Bulb Fault Icon** - Left or right turn signal fault.

**18 - Operator Out of Seat Icon** - Illuminates when the operator should return to seat..

**19 - Calibration Mode Icon** - Illuminates when tractor is in calibration mode.

**20 - eThrottle Active Icon** - Illuminates when eThrottle is active.

**21- eThrottle Off Icon** - Illuminates when eThrottle is not active.

**22- Ambient Temperature Icon** - Illuminates to show ambient temperature.

**23 - Mid PTO Icon** - This symbol is associated with the display of Mid PTO speed.

**24 - Ground Speed Missing Icon** - Illuminates to show transmission fault.

**25 -Active ICC Icon** - Illuminates to show active ICC diagnostic trouble code.

**26 - Active TCU Icon** - Illuminates to show active TCU diagnostic trouble code.

**27 - Tractor Side View Icon** - This symbol is associated with the display of vehicle hours.

**28 - Hour Meter Icon** - Illuminates when the engine or PTO hour information is shown on the information display panel.

**29 - Service Alert Icon** - Illuminates when there is an active error shown on the information display panel. May be accompanied by a display message.

**30 - PTO Speed** - This symbol is associated with the display of PTO speed.

**31 - Kilometers/Miles Per Hour** - Shows the kilometers / miles per hour the tractor is traveling.


UP00731,0000983-19-17MAR20

## Information Display and Display Mode Switch

### Normal Operation



LV25014—UN—22APR16  
Left-Hand Switch Module

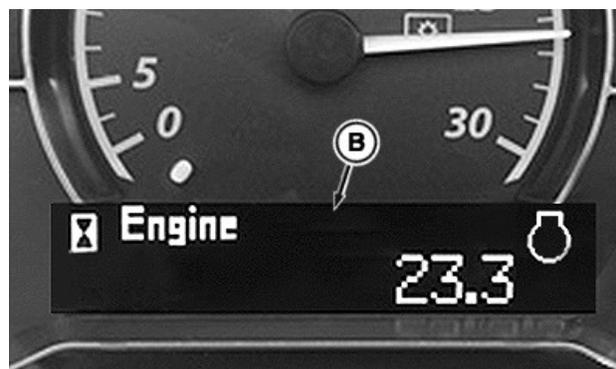

LV25660—UN—23JUN16  
Engine Hours

**A—Display Mode Switch**  
**B—Information Display Screen**

Press Display Mode Switch (A) to navigate through or select information in the Information Display (B).

Information display screen (B) shows normal operational information in the following order:

*Engine Hours ⇒ Vehicle Hours ⇒ PTO Hours ⇒ Soot Level ⇒ Hours since last Regeneration*

**IMPORTANT: Machine damage will occur if a machine operation continues after STOP indicator is displayed. Shut off engine immediately and call your John Deere dealer for assistance before machine operation continues.**

Stop, service alert, information messages, and diagnostics are also provided on the information display screen. This information overrides normal operation. Press display mode switch (A) to acknowledge this information and return to the normal operational information.

For additional information on codes, icon descriptions, messaging, and diagnostics, see the On Board Diagnostic Display section.

### Programming Mode (If Equipped)

Programming of the machine can be performed with the display mode switch.



LV28765—UN—19DEC17

Release Message

#### C—Release Message

To enter programming mode, press and hold the Display Mode Switch until Release (C) appears on the display screen.

Programming mode shows programmable feature screens in the following order:

*Brightness Mode ⇒ Dimmer Mode ⇒ Language*

For more information on Instrument Cluster Display settings, see Electrical and Lighting Operation section.

WS68074,00016C0-19-01MAY23

# Engine Operation

## Operate Key Switch



Key Switch

LV24878—UN—02MAY16

- A—Accessories Position
- B—Off Position
- C—Run Position
- D—Start Position

**Position (A)**—Provides power to the electrical accessories only, not the engine.

**Position (B)**—Switched power is off and engine is off.

**Position (C)**—The engine oil pressure light and battery charge light illuminates on initial activation. Glow plugs will be activated if there is a need for engine pre-heating.

**Position (D)**—Start position. Release the key after the engine has started to return to the run position (C). Engine oil pressure and battery charge lights turn off.

RD47322.0000AF2-19-19DEC17

## Operate Throttle Lever



Throttle Lever

LV28766—UN—19DEC17

- A—Throttle Lever

Use the throttle to change engine speeds. Use the

throttle in conjunction with the tachometer to set engine speeds.


**Increase Engine Speed** - Push throttle lever (A) towards the front of machine.

**Decrease Engine Speed** - Pull throttle lever (A) towards the rear of machine.

GS25068,0003DE5-19-01FEB18

## Operate eThrottle

*NOTE: The use of eThrottle is not recommended during PTO applications. With eThrottle engaged, constant PTO rpm cannot be maintained, which results in reduced performance of implement.*

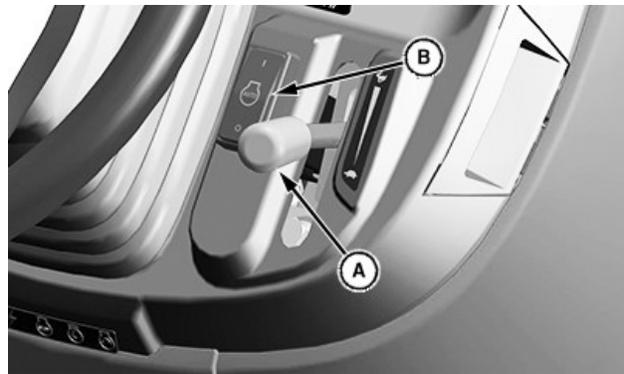

Throttle Lever

LV24879—UN—27JUL16

- A—Throttle Lever
- B—eThrottle Switch

eThrottle enables the operator to increase or decrease the speed of the engine and tractor by using the forward and reverse travel pedals.


1. To set engine speed to low idle, pull throttle lever (A) towards rear of the machine.
2. Push eThrottle switch (B) to the “I” position to engage.
3. Push eThrottle switch to the “O” position to disengage.

GS25068,0003DE6-19-01FEB18

## Operate Fuel Shut-Off Valve

**⚠ CAUTION: Avoid Injury! Close fuel shut-off valve when performing any type of engine service, during transport of the machine, and during storage.**

Locate fuel shut-off valve on the left-hand side of the machine on the fuel sediment filter.

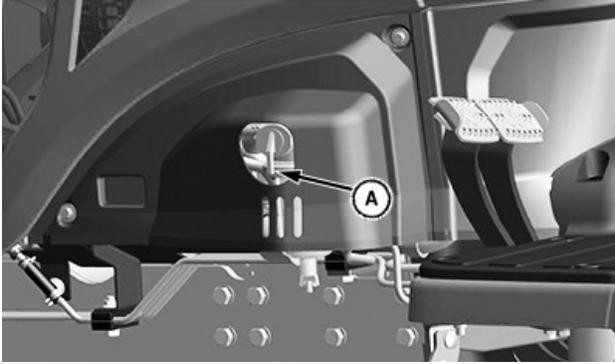

LV24957—UN—15JUN16

Fuel Shut-Off Valve

**A—Fuel Shut-Off Valve Lever**

Open or close fuel shut-off valve lever (A) as required:

- **Open Valve:** Rotate valve lever pointer to the vertical position marked “ON”.
- **Close Valve:** Rotate valve lever pointer to the horizontal position marked “OFF”.


GS25068,0003DE7-19-01FEB18

**Start the Engine**

**⚠ CAUTION: Prevent asphyxiation by providing adequate ventilation. If operating indoors, use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to ventilate the area.**

*NOTE: If operating machine in temperatures below -18° C (0°F), installation of an optional engine block heater and hydraulic oil heater is recommended.*

*If temperature is below 0°C (32°F), see Cold Weather Starting procedure in this section.*

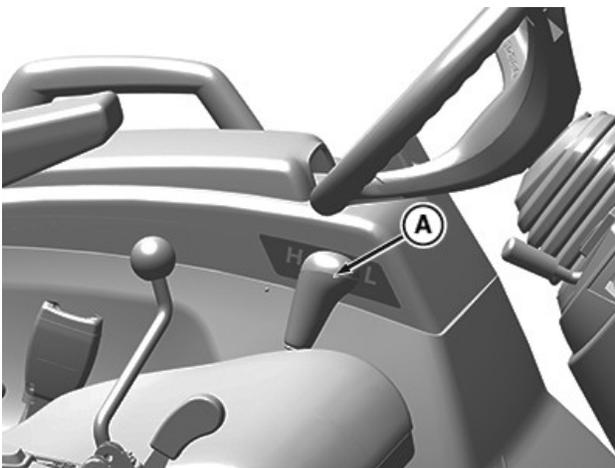


LVP15923—UN—19JUL22

**A—Range Shift Lever**

1. Apply park brake.

2. Move the transmission range-shift lever (A) to the neutral (N) position.

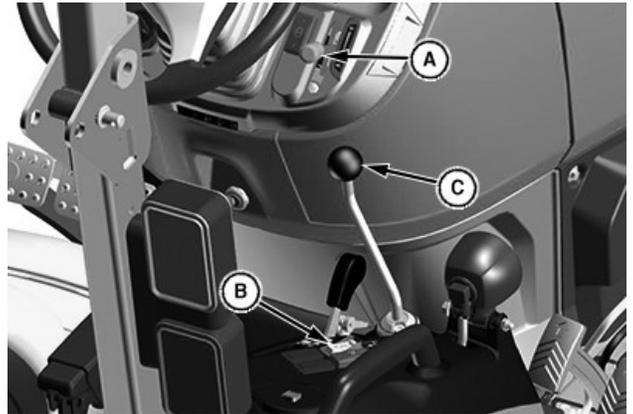

LV24951—UN—15JUN16

PTO Engagement Switch and Throttle Lever

- A—Throttle Lever**
- B—PTO Engagement Switch**
- C—SCV Lever**

3. Make sure PTO engagement switch (B) is in disengaged/off position.

**⚠ CAUTION: Avoid Injury! Check to be sure that area is clear of any bystanders before lowering implements to the ground.**

4. Lower any rear mount implement to the ground by pushing the rockshaft control lever forward.
5. Lower any front-mounted implement to the ground using the SCV lever (C).
6. Set throttle lever (A) to the 1/2-3/4 throttle position.
7. Turn ignition key switch to the run position.
8. Check indicator lights and gauges:
  - All indicator lights illuminates.
  - All gauges do a full sweep and return to normal.

**IMPORTANT: Starter may be damaged if operated for more than 20 seconds at a time:**

- **Wait two minutes before trying again if engine does not start.**

*NOTE: It is normal for the engine to be louder and for blue-white exhaust smoke to be present during the engine warm-up. The amount of exhaust smoke depends on air temperature. Higher elevation affects the amount of exhaust smoke.*

9. Turn key to start position to start engine. Release key after engine has started. If attempting to start engine when it is already running, “Engine Run” is displayed.

10. Check indicator lights:

**IMPORTANT: If oil pressure light does not go out within 5 seconds, shut off the engine and check for cause.**

- Oil pressure light goes out within 5 seconds.

*NOTE: If battery charging light does not go out after 10 seconds, set engine speed at full throttle and then back to normal.*

- Battery charging light goes out within 10 seconds.
- If indicator lights stay on longer than the given time interval, stop engine and check for cause.

11. Set engine speed control lever to the 1/2 throttle position for 1 minute without load to warm the engine.

ywvrhfr,1658238564845-19-19JUL22

## Cold-Weather Start

**IMPORTANT: Avoid engine damage! The glow plugs and air heater are operational during starting. Damage to the engine results from using ether or starter fluid.**

**IMPORTANT: Starter damaged results if operated for more than 20 seconds at a time:**

- If the engine does not start, wait two minutes before trying again.

**IMPORTANT: Run the engine for several minutes to allow the engine and transmission oil to reach operating temperature to avoid damage in cold weather.**

*NOTE: It is normal for the engine to be louder and for blue-white exhaust smoke to be present during the engine warm-up procedure. The amount of exhaust smoke depends on air temperature.*

1. Turn the ignition key switch to the run position.
2. When the glow plug light turns off, turn the key to the start position. Release the key after the engine has started. If the engine does not start, wait two minutes before trying again.
3. Check the indicator lights:

**IMPORTANT: If oil pressure light does not go out within 5 seconds, shut off the engine and check for cause.**

- Oil pressure light turns off within 5 seconds.

*NOTE: If battery charging light does not turn off after 10 seconds, set engine speed at full throttle and then back to normal.*

- Charging light turns off within 10 seconds.
- If indicator lights stay on longer than the given time interval, stop engine and check for cause.

4. To warm the engine, set the hand throttle to 1/2 throttle position for 5 minutes without load.

UP00731,0000215-19-11NOV19

## Warm and Idle the Engine

### Warm the Engine

1. Lock the park brake.
2. Set the hand throttle to the 1/2 throttle position for 5 minutes without load.

### Idle the Engine

*NOTE: Allowing the engine to idle for long periods of time wastes fuel and causes carbon buildup.*

1. Set the hand throttle to the low idle position.
2. Apply the park brake.

GS25068,0003DF0-19-14FEB18

## Start a Stalled Engine

**IMPORTANT: Avoid engine damage! Start the engine immediately after stalling to prevent abnormal heat buildup.**

1. Disengage the forward and reverse travel pedals.
2. Move the transmission range lever to the neutral (N) position.
3. Start the engine. Set the engine at low idle for 2 minutes before stopping the engine, or continue with normal operation.

JC48530,0000446-19-27MAR20

## Stop Machine

### Normal Stop

 **CAUTION: Avoid crushing injury. Couple the brake pedals together when driving at higher speeds.**

1. Position the machine on a firm, level surface.
2. Stop motion by smoothly removing pressure from forward or reverse travel pedals.

3. Disengage the PTO switch.

**⚠ CAUTION: Avoid crushing injury! Check that the area is clear of bystanders before lowering implements to the ground.**

4. Lower implements to the ground.

**IMPORTANT: Avoid Damage! Do not stop the engine immediately after a hard or extended operation. Prevent heat buildup by running the engine at low idle for 2 minutes.**

5. Set hand throttle to the low idle position. Allow the engine to idle for 2 minutes.

**⚠ CAUTION: Avoid crushing injury! Engage the park brake and move the transmission range lever to a position other than N (neutral) before leaving the machine unattended.**

6. Apply the park brake.
7. Turn the key switch to the stop position.
8. Remove the key.
9. Wait for the engine and all moving parts to stop before leaving the operator station.

#### **Emergency Stop**

1. Remove pressure from the forward or reverse pedal.
2. Depress the brake pedal.
3. Turn the key switch to the stop position. Do not release the brake pedal until all moving parts have stopped.
4. Apply the park brake.

---


GS25068,0003DE9-19-14FEB18

# Air Intake, Fuel, Coolant, and Exhaust Operation

## Using Fuel Shutoff Valve

**⚠ CAUTION: Avoid injury! Close fuel shutoff valve when performing any type of engine service, during transport of the machine, and during storage.**

Locate fuel shutoff valve on the left side of machine on fuel sediment filter.

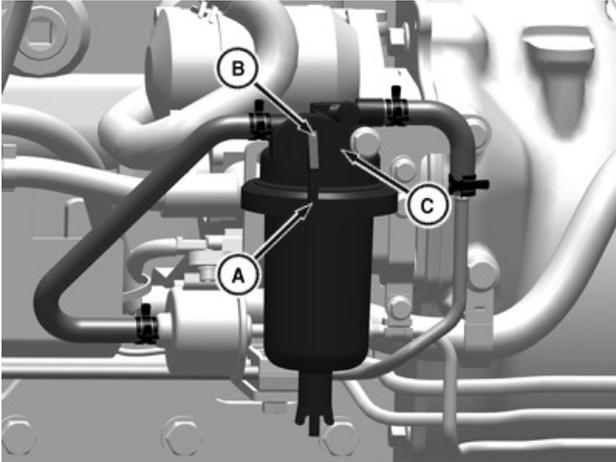

APY20372—UN—10SEP19

**A—Fuel Shutoff Valve Lever**  
**B—Vertical Position**  
**C—Horizontal Position**

Open or close fuel shutoff valve lever (A) as required:

- **Open Valve:** Rotate valve lever pointer to the vertical position (B).
- **Close Valve:** Rotate valve lever pointer to the horizontal position (C).

PS75950,00008D6-19-28AUG19

- Use clean, fresh, stabilized fuel.
- Fill the fuel tank at the end of each day's operation to keep condensation out of the fuel tank.
- Use a non-metallic funnel with a plastic mesh strainer when filling the fuel tank or container.

Fill fuel tank at the end of each day's operation to prevent condensation and freezing during cold weather.

1. Park machine safely.
2. Allow engine to cool.
3. Remove any trash from area around fuel tank cap.



LV25665—UN—29JUN16

**A—Fuel Tank Cap**

4. Remove fuel tank cap (A) slowly to allow any pressure built up in tank to escape.
5. Fill fuel tank only to bottom of filler neck. Do not overfill.
6. Install fuel tank cap.

GS25068,0003DEA-19-01FEB18

## Fill Fuel Tank

**⚠ CAUTION: Avoid injury! Fuel vapors are explosive and flammable:**

- Shut engine off before filling fuel tank.
- Allow engine to cool before refueling.
- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Fill fuel tank outdoors or in well ventilated area.
- Clean up spilled fuel immediately.
- Use clean approved non-metal container to prevent static electric discharge.

**IMPORTANT: Avoid damage! Dirt and water in fuel can cause engine damage:**

- Clean dirt and debris from the fuel tank opening.

## Exhaust Filter System Overview



LV23936—UN—24AUG16  
Exhaust Filter Cleaning Mode Switch

- A—Parked Exhaust Filter Cleaning Switch
- B—Exhaust Filter Cleaning Disable Switch

Your machine is equipped with an emission compliant engine, which cleans and filters the engine exhaust. Please read the Air, Fuel, Coolant and Exhaust Maintenance sections to understand when and where operator interaction is required.

**IMPORTANT: Soot builds up during times when engine exhaust gas temperature is lower (lower engine speed, lower engine load). Performing extended operations at either low engine speed (below 1500 rpm) or low engine load (such as backhoe work) could result in needing a parked exhaust cleaning. Periodically monitor the machine display during these operations to determine if parked exhaust cleaning is required.**

*NOTE: Under normal machine operation the system is in Automatic mode, and requires minimal operator interaction.*

To avoid unnecessary buildup of diesel particulates or soot in the exhaust filter system:


- Avoid unnecessary idling.
- Use proper engine oil. (See Fuel, Lubricants, and Coolant section for recommendations.)

- Use only ultra low sulfur fuel. (See Fuel, Lubricants, and Coolant section for recommendations.)

**IMPORTANT: When vehicle use is not suited for higher temperatures created by exhaust filter cleaning, use the Disable mode (B). Be sure to deactivate disable mode as soon as possible to avoid unnecessary soot built up in exhaust filter.**

**Remember to select Disable mode (B) when temporarily connected to an indoor ducted exhaust system during vehicle diagnostic and repair activities.**

## Exhaust Filter Indicators

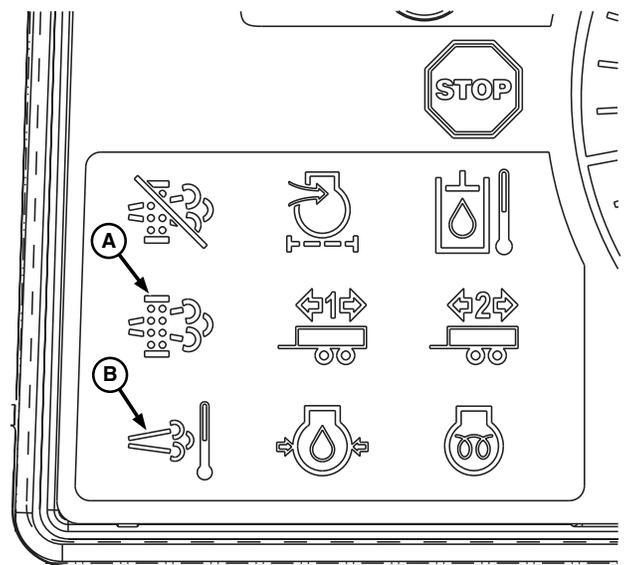


LV17596—UN—01MAY13  
Exhaust Filter Indicators

- A—Exhaust Filter Indicator
- B—High Exhaust Temperature Indicator

**Exhaust Filter Indicator (restriction) (A)** — Indicates that buildup in the exhaust filter requires cleaning.

**High Exhaust Temperature Indicator (B)** — Illuminates when the exhaust filter system is actively performing exhaust filter cleaning.


## Operator Information

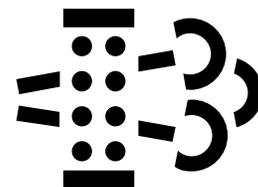

H94828—UN—13OCT09

### 1. Exhaust Filter cleaning Indicator

Description	Recommended Procedure
High level of soot at exhaust filter; the exhaust filter requires cleaning. <i>NOTE: If no cleaning is carried out, engine power is reduced .</i>	Exhaust filter cleaning with tractor parked may be carried out; see <b>Parked Exhaust Filter Cleaning</b> .

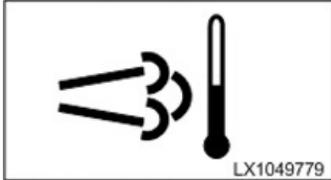

LX1049779—UN—22JUL10

## 2. High Exhaust Temperature Indicator


Description	Recommended Procedure
Exhaust filter cleaning is taking place. Exhaust temperatures are high.	Do not interrupt automatic exhaust filter cleaning unless absolutely necessary.



LX1049777—UN—22JUL10

## 3. Parked Exhaust Filter Cleaning Required

Description	Recommended Procedure
Very high level of soot at exhaust filter; the exhaust filter requires cleaning. "Parked Regen Required" will display on information display. <i>NOTE: Engine power is reduced.</i>	Perform <b>Parked Exhaust Filter Cleaning</b> .

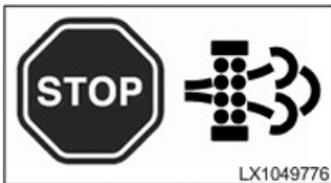


LX1049776—UN—22JUL10

## 4. Service Exhaust Filter Cleaning Required

Description	Recommended Procedure
Extreme level of soot in exhaust filter. When this level of contamination is reached, service cleaning must be performed. <i>NOTE: Note: Engine power is reduced.</i>	Contact your John Deere dealer and get the dealer to service-clean the exhaust filter. See <b>Service Exhaust Filter Cleaning</b> .


UP00731,00001FB-19-19DEC17

## Aftertreatment Indicators Overview

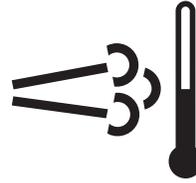


RG22488—UN—21AUG13

Engine Emissions Temperature Indicator

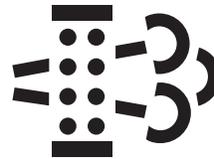


RG22489—UN—21AUG13

Exhaust Filter Indicator

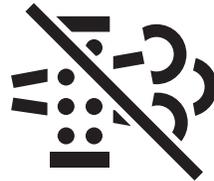

RG22490—UN—21AUG13

Auto Cleaning Disabled Indicator

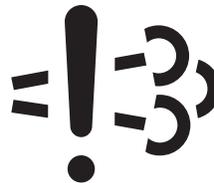

RG22491—UN—21AUG13

Engine Emissions System Malfunction Indicator



RG22492—UN—21AUG13

Warning Indicator



Engine Stop Indicator

RG22493—UN—21AUG13

fault. Follow DTC procedure or see your authorized servicing dealer.

PS75950,00008CA-19-21AUG19

---

**IMPORTANT: The operator will be informed by the operator warning system when the emission control system does not function correctly and/or an engine malfunction is detected by the engine control unit. Ignoring the operator warning signals will lead to an emission related derate, resulting in an effective disablement of non-road mobile machinery operation.**

It is essential to take prompt action to rectify any incorrect operation, use or maintenance of the emissions control system in accordance with the rectification measures indicated by the warnings referenced below.

When engine emissions temperature indicator illuminates exhaust gas temperature is high, exhaust filter cleaning is in process. The machine can be operated as normal unless the operator determines the machine is not in a safe location for high exhaust temperatures and disables auto cleaning.

When the exhaust filter indicator illuminates the exhaust filter cleaning is in process, aftertreatment system has a fault, or the exhaust filter is in need of cleaning and the operator has disabled auto exhaust filter cleaning. If conditions are safe, the operator should enable the auto exhaust filter clean setting or perform manual service regeneration or follow DTC procedure.

The auto cleaning disabled indicator illuminates when the operator has engaged the request to disable the auto exhaust filter cleaning function. This icon remains illuminated until the operator re-engages automatic exhaust filter cleaning from the diagnostic gauge. Disabling auto mode is not recommended for any situation unless it is safety-related or if the fuel tank lacks the required fuel to complete the cleaning process.

The engine emissions system malfunction indicator illuminates when engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

When the engine emissions system malfunction indicator is combined with the warning indicator or engine stop indicator, engine performance is reduced by the ECU because the engine emissions are outside of normal operating range or engine emissions system

# Electrical and Lighting Operation

## Turn Signal and Hazard Lights



LV24993—UN—27APR16

Turn Signal Lights and Hazard Lights			
Activated Switch on Module	Use	Right Amber Light	Left Amber Light
A - Left Turn Signal	On Road, Day Time, Night Time	On	Flashing
B - Right Turn Signal	On Road, Day Time, Night Time	Flashing	On
C - Hazard Lights	On Road, Day Time, Night Time	Flashing	Flashing

- To activate or deactivate left turn signal press (A).
- To activate or deactivate right turn signal press (B).
- To activate or deactivate hazard lights press (C).

GS25068,0003DC1-19-31JAN18



LV25017—UN—26APR16

Tractor Lights				
Activated Switch on Module	Use	Tail Lights Red	Work Lights	Head Lights
A - Off	Field, Day Time	Off	Off	Off
B - Road Lights	On Road, No Traffic, Night Time	On	Off	On
C - Work Lights	Off Road, Night Time	On	On	On

To view the hour meter in the instrument panel with the key switch in the off position, push the light switch to the (B) or (C) position.

GS25068,0003DC2-19-31JAN18

## Road, Work, and Warning Lights

**CAUTION:** Avoid injury! Do not operate on roads with light switch in the field position. Front or Rear work lights may blind or confuse operators of oncoming or following vehicles.

## Use Display Mode Switch



### A—Display Mode Switch

LV22250—UN—23JUN14

The display mode switch (A) can be used to scroll through hour meter and active error codes display on all machines. The display information changes automatically as long as the display mode switch is pressed in the current cycle.

By repeatedly pressing the display mode switch you can scroll through the functions in the following order.

- 1.Engine hour meter
- 2.Vehicle hour
- 3.PTO hour
- 4.Soot percentage
- 5.Hour since last regeneration

### Adjust Backlighting

*NOTE: Both brightness and dimmer settings can be adjusted. Brightness is the term used when the light switch is "OFF". When the light switch is "ON", the backlight is referred to as dimmer. The backlight reflects the stored settings as the light switch is operated.*

1. Press and hold the display mode switch for approximately 5 seconds until "Release" appears on the display. Display is now in command mode.

2. Use the turn signals to toggle to "Brightness" or "Dimmer".
3. Press the display mode switch again to accept.
4. To toggle to the desired setting, press the left or right turn signal. The range for illumination is 1—9.
5. Press the display mode switch again to exit command mode.

### Change Display Language

1. Press and hold the display mode switch for approximately 5 seconds until "Release" appears on the display. Display is now in command mode.
2. Use the turn signals to toggle to "Language".
3. Press the display mode switch again to accept.
4. Use the left or right turn signal to toggle between available languages.
5. Press the display mode switch again to exit command mode. Selected language will appear after key switch is cycled OFF/ON.

JC48530,0000443-19-18MAR20

# Drivetrain Operation


## Drive Machine

**⚠ CAUTION: Avoid injury! Always check area around machine for bystanders and obstacles before operating the machine.**

**IMPORTANT: Avoid damage! To prevent transmission damage, stop machine motion completely before shifting the transmission range shift lever.**

3. Choose L or H speed range on transmission range shift lever (B) to match work application.
4. Move throttle lever (C) to desired operating speed.
5. Slowly depress forward travel pedal (D) downward to move forward. Slowly depress reverse travel pedal (E) downward to move in reverse.
6. Release travel pedal to stop machine and change speed range.
7. Fully stop machine motion before turning ignition key switch to off position.

ycwrhfr,1658238735604-19-19JUL22

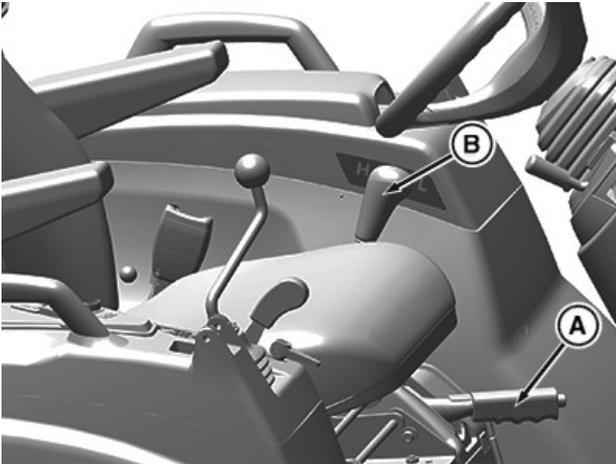

LVP15924—UN—19JUL22

*Park Brake, Range Lever*



LV25079—UN—29APR16

*Throttle Lever, Forward, Reverse Pedals*

- A—Park Brake Lever
- B—Transmission Range Shift Lever
- C—Throttle Lever
- D—Forward Pedal
- E—Reverse Pedal


1. Start machine engine.
2. Unlock park brake (A).

# Transmission Operation


## Operate Transmission

**IMPORTANT: Avoid damage! Select the proper speed range for the job:**

- Never overload engine by lugging machine at low idle speeds.
- Raise engine speed to match expected loads. If a slight increase in engine rpm occurs simultaneously with moving throttle lever (B) forward, engine is not overloaded.

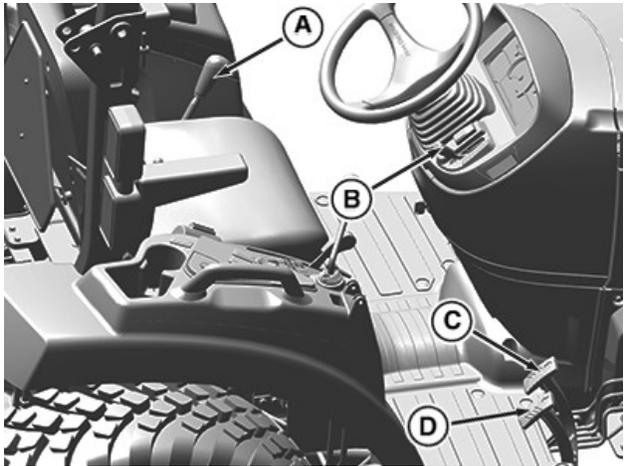

LVP15925—UN—19JUL22

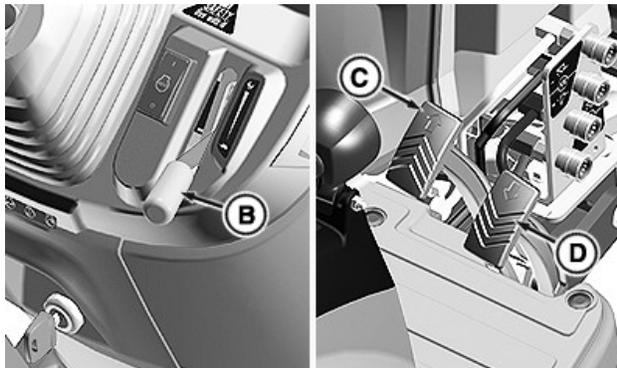

LV25081—UN—26JUL16

- A—Transmission Range Shift Lever**  
**B—Throttle Lever**  
**C—Forward Travel Pedal**  
**D—Reverse Travel Pedal**

1. The transmission range shift lever (A) provides two-speed ranges and is used in conjunction with the forward travel pedal (C), and reverse travel pedal (D).
2. Choose a speed range to match work application.
  - L – Low speed operations such as tilling hard soil, mowing long grass, or heavy hauling. Machine speed is decreased, but machine power is increased.
  - N – Neutral position. Lever must be in the N (neutral) position when starting the engine.
  - H – High speed operations such as light tilling and hauling, mowing short grass and transport.

Machine speed is increased, but machine power is decreased.

Stop machine to change speed range.

ycwrhfr,1658406801868-19-21JUL22

## Operate Cruise Control

**⚠ CAUTION: Avoid injury! Use cruise control only in large, open areas. Shut off before turning or when in areas with many obstacles.**

*NOTE: The cruise control is only operational when the machine is traveling forward.*



LV24953—UN—07SEP16

### A—Cruise Control Switch

1. Depress forward travel pedal until desired travel speed is reached.
2. Fully depress top of the cruise switch (A) to engage cruise control.
3. Release forward travel pedal.
4. To adjust travel speed, disengage cruise control and engage cruise control again at a different speed.

*NOTE: The machine stops if cruise control is disengaged while the machine is in motion. To maintain forward motion, maintain the forward travel pedal while disengaging cruise control.*

5. Fully depress the bottom of cruise switch (A), or depress the brake pedal to disengage.

GS25068,0003DED-19-18MAR20

# MFWD and Front Axle Operation

---

## Operate Mechanical Front Wheel Drive (MFWD)


**⚠ CAUTION: Avoid Injury!** Use extra caution when driving on slopes. To increase traction and provide four-wheel braking, engage mechanical front wheel drive (MFWD) when driving on slopes. Be aware that MFWD can improve access to dangerously sloped terrain, thereby increasing the possibility of tipover.

To improve braking on sloped, icy, wet, or graveled surfaces, engage the MFWD. Add ballast to the tractor and travel at a reduced speed to avoid skidding and loss of steering control.

**IMPORTANT: Avoid Damage!** Always disengage MFWD when driving on a paved surface.

Put the transmission levers in neutral to move the machine when the engine is not running.

Mechanical front wheel drive (MFWD) enables the powertrain to drive both front and rear axles for improved traction on difficult ground conditions and provides 4-wheel braking. MFWD can be engaged and disengaged on-the-go with light loads and on low traction surfaces.

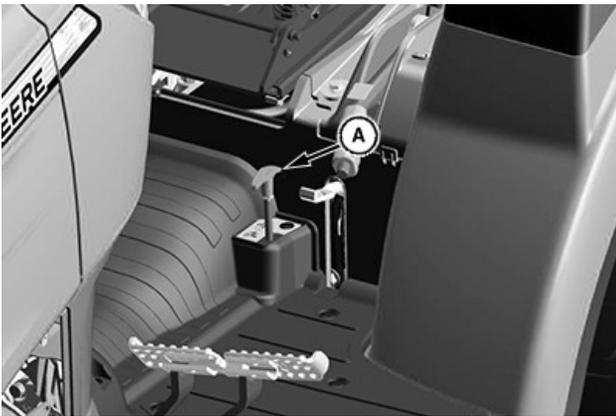

LV24989—UN—15JUN16

A—MFWD Lever Shown

*NOTE: It may be necessary to reduce engine load to disengage front wheel drive.*

Pull up on MFWD lever (A) to engage. Push down MFWD lever to disengage.

### Tips for Operating MFWD:

- Maintain front tire pressure at maximum allowable level to ensure proper tire performance in all field conditions.
- Engage MFWD to provide four-wheel braking.
- Disengage MFWD when driving machine to or from work site to increase front tire life.

GS25068,0003DEE-19-01FEB18

# Differential and Rear Axle Operation

## Operate Differential Lock (Traction Assist)

**⚠ CAUTION: Avoid Injury!** Driving at high speeds with the traction assist engaged may result in loss of steering control. Do not engage traction assist or turn with the traction assist engaged while operating machine at high speeds or on slopes.

2. The rear wheel slippage will keep the differential lock engaged. The lock will automatically disengage when the traction equalizes.

GS25068,0003DEF-19-05FEB18


**IMPORTANT: Avoid Damage!** Using the traction assist function improperly can damage the transaxle:

- Reduce speed and allow drive wheels to rotate at same speed before engaging or disengaging traction assist.
- Disengage traction assist when driving on dry asphalt or concrete.
- Use traction assist only when necessary for improved ground engagement.

*NOTE: Turning radius is increased when the differential lock is engaged.*

The differential lock is used to provide better traction when rear wheels start to slip. Engaging differential lock will lock right and left side rear axles together and cause both rear wheels to turn at equal speeds for maximum traction.

## Engage Differential Lock

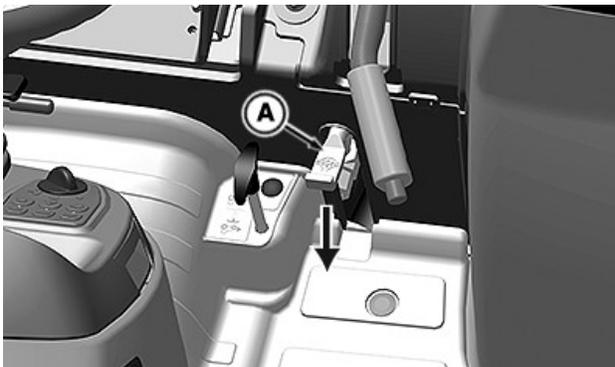

LV24992—UN—22APR16

**A—Differential Lock Pedal**

1. Stop or slow machine movement.

*NOTE: Differential lock will remain engaged as long as rear wheel slippage occurs. If tires slip and regain traction repeatedly, hold down pedal with foot so differential lock remains engaged. Remove foot from differential lock pedal once traction is regained.*

2. Depress differential lock pedal (A) 20 - 25mm (3/4-1 in.) to operate differential lock.

## Disengage Differential Lock

1. Remove foot from differential lock pedal.

# Power Take Off (PTO) Operation


## Operate Rear and Mid Power-Take-Off (PTO)

**IMPORTANT: Avoid Damage! Use rear mounted equipment rated for 540 rpm. Do not operate the rear PTO over 540 rpm on the display bar graph.**

*NOTE: Mid PTO operation for this machine is not intended to be used when the operator is off the seat. Rear PTO operation is possible out of seat provided proper sequence is followed.*

### Engage the PTO—Operator on Seat

1. Start the engine.
2. Set engine speed to 1500 rpm or less.

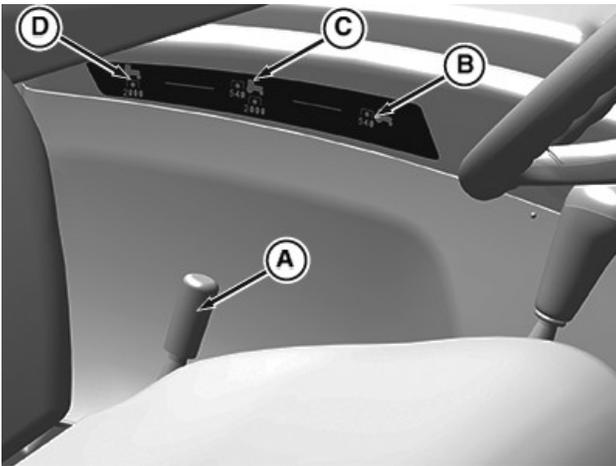

LVP15926—UN—19JUL22

A—PTO Control Lever  
B—Rear PTO Only  
C—Mid and Rear PTO  
D—Mid PTO Only

3. Move the PTO control lever (A) to desired operating position.
  - Position (B) - Rear PTO only.
  - Position (C) - Mid and Rear PTO
  - Position (D) - Mid PTO only.
4. Engage the PTO.
5. Adjust the throttle lever forward to the desired speed for the implement used.



LV30716—UN—26MAR20

PTO Speed Display

- At 2500 engine rpm the mid PTO speed is 2000

rpm and the rear PTO speed is 540 rpm as indicated on the information display.

- If the engine overheats during the PTO operation “Engine Overheat” displays on the information display and the PTO will automatically shutoff. Disengage the PTO/RIO switch, engage the park brake and the shut the engine off. Allow sufficient time for the engine to cool. Check coolant level and add coolant if necessary. Clean debris away from radiator cooling fins and front grill. If PTO does not engage after the engine has cooled, see your local John Deere Dealer for service.

### Operate Rear Power-Take-Off (PTO)—Operator off Seat

1. Sit on the operator seat,
2. Lock the park brake.
3. Move range-shift lever to the N position.
4. Start the engine.
5. Set engine speed to 1500 rpm or less.
6. Move the PTO control lever (A) to Position (B) - Rear PTO only.
7. Engage the PTO.
8. Push and hold the PTO switch in the engaged position for at least 2 seconds. “Hold” is shown in the display.
9. Exit the seat. “Exit Seat” is shown in the display followed by “Stationary PTO Active”.

*NOTE: After exiting the seat, if the seat switch is reengaged (operator sits in the seat) and then disengaged (operator leaves the seat), the PTO automatically disengages. “Operator Out of Seat” displays on the information display.*

10. Adjust the throttle lever forward to the desired speed for the implement used.

### Disengage the PTO

1. Adjust engine rpm to low idle.
2. Push PTO switch rearward to the disengaged/off position.

ycwrhfr,1658238864895-19-19JUL22

### Operate Reverse Implement Option (RIO)

**⚠ CAUTION: Avoid Injury! Rotating blades are dangerous. Children or bystanders may be injured by runover and rotating blades.**

**Before backing up, carefully check the area around the machine.**

**NOTE:** Backing up while mower is engaged is strongly discouraged. The Reverse Implement Option should be used only when operating another attachment or when operator deems it necessary to reposition machine with mower engaged.

1. Stop machine forward travel with attachment engaged.
2. Look behind machine to be sure there are no bystanders.

**NOTE:** If attachment stops while repositioning machine, return PTO/RIO switch to off position. Begin again with Step 2 in procedure.

If reverse pedal is depressed without engaging the PTO/RIO switch, "RIO Shutdown" will be displayed in the information display.



LV25653—UN—16JUN16

**A—PTO/RIO Switch**

3. Press PTO/RIO switch (A) down past PTO engagement position to activate the reverse implement option. Then depress reverse travel pedal. "RIO Active" is shown in the display.
4. As machine begins to move backward, release PTO/RIO switch and reposition machine.
5. Resume forward travel. The attachment should continue operating.
6. Repeat Steps 1 through 5 to reposition machine again.

GS25068,0003DF5-19-31MAR20



LV24958—UN—15JUN16

**Mower Height of Cut Dial Shown**

**A—Mower Height of Cut Dial**

Use mower height of cut dial (A) to adjust mower cutting height, and lock mower lift kit rear draft arms in raised or transport lock position. See your mower deck operator's manual for instructions.

GS25068,0003E2D-19-02FEB18

## Adjust Height of Cut—If Equipped


**IMPORTANT: Avoid Damage!** To avoid machine damage when operating without a mower, fully raise the mower lift kit rear draft arms, and turn mower height control knob clockwise to the transport position to lock the arms in raised position.

# Steering and Brake Operation

## Brake Operation


**CAUTION:** Avoid possible injury from losing control of tractor, lock brake pedals together with pedal lock tab when operating on roads or at high speeds.

- Lock pedals together when not using the turning brakes or for road travel or transport.
- Slow down before making a turn.

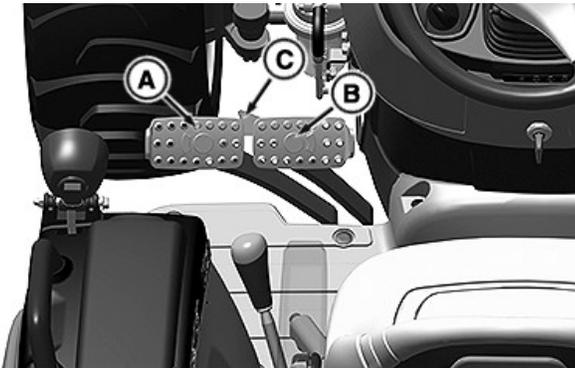

Brake Pedals

LV24988—UN—20APR16

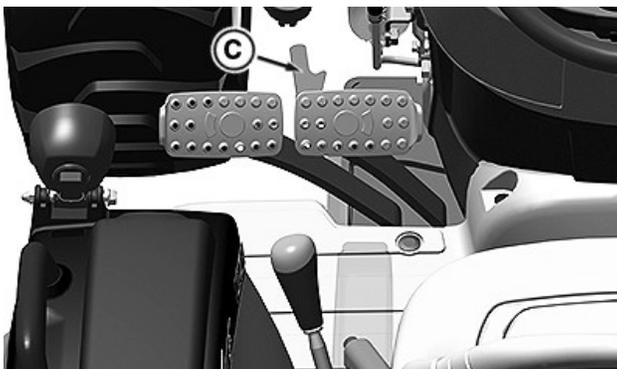

Brake Pedal Lock Tab

LV24987—UN—20APR16

- A—Left Brake Pedal
- B—Right Brake Pedal
- C—Brake Pedal Lock Tab

To stop tractor, depress both left (A) and right (B) brake pedals together with brake pedal lock tab (C) secured.

## Using Brake Pedals to Assist in Turning

**IMPORTANT:** Avoid damage! Do not apply turn brakes while an implement is engaged with the ground. Damage to the 3-point hitch and implement may occur.

*NOTE:* Turning brake pedals can be used to make tighter turns and may reduce unnecessary backing.


Rotate brake lock tab (C) clockwise to unlock left and right brake pedals. Brake pedals will now function independently.

- To make a tighter left turn, depress left turning brake pedal (A) while turning to the left.
- To make a tighter right turn, depress right turning brake pedal (C) while turning to the right.

RD47322,0000B06-19-25AUG16

## Park Brake Operation

**CAUTION:** Avoid Injury! Engage park brake and move transmission range shift lever to a position other than N (neutral) before leaving machine unattended. Transmissions will not prevent machine motion without the park brake engaged.

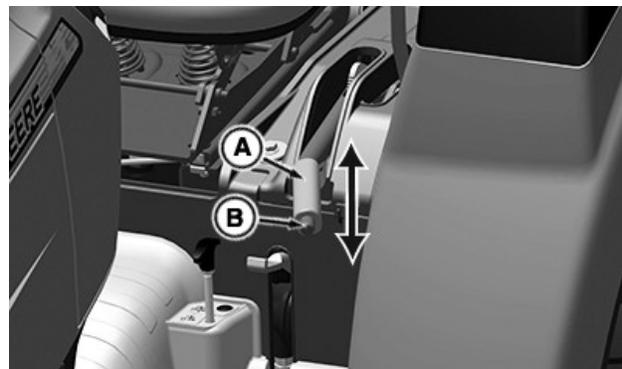

Park Brake Location Shown

LV24990—UN—26JUL16

- A—Park Brake Lever
- B—Park Brake Release Button

To engage park brake, lift up on park brake lever (A) ensuring that it ratchets up and stays in position.

To release park brake, lift up on park brake lever and depress park brake release button (B). To fully disengage park brake, lower park brake lever completely, while park brake release button (B) is depressed.

RD47322,0000B07-19-25AUG16

## Adjust Tilt Steering Wheel

**CAUTION:** Avoid Injury! Do not attempt to adjust the steering wheel while the machine is moving. The operator can lose control of the machine.

- Stop the machine before adjusting the steering wheel.
- Lock the steering wheel in position before driving the machine.

1. Stop machine.

- 
2. Pull tilt steering control lever (A) up to release steering wheel.



LV24991—UN—26JUL16

*Tilt Steering Control Lever Location Shown*

**A—Tilt Steering Control Lever**

- 
- 
3. Adjust steering wheel to desired position.
4. Release tilt steering control lever to lock steering wheel in position.

GS25068,0003DF7-19-01FEB18

---

# Hydraulics Operation

---

## Warm Hydraulic System Oil

**IMPORTANT: Avoid damage to the hydraulic system. Do not exceed 2 to 3 minutes of warm-up time.**

During cold weather, oil does not flow easily through the filter screen or the hydraulic system filter. This results in slow functionality of the hydraulic system. The hydraulic system functions normally after the oil warms up.

1. Start the machine and idle at low idle.
2. Turn and hold steering wheel in full left or right turn.

---

WS68074,00022B2-19-20DEC17

## Hydraulics Information

For hydraulic operation of components, see specific component section. For example, operating the selective control valve (SCV) is in the Selective Control Valve Operation section.

---

UP00731,00002DC-19-14JAN19

# Hitch and Drawbar Operation


## Operate Attachments

When operating attachments, check full range of three point hitch travel each time a new attachment or implement is mounted. Watch for hoses and attachment parts throughout the 3-point hitch travel range. Adjust the depth stop as needed. Some attachments with short driveshafts require an up-stop. See your John Deere dealer. If attachments are operated at too high an angle, the driveshaft can be damaged.

RD47322,0000B0C-19-27AUG18

## Operate 3-Point Hitch

**NOTE:** The 3-point hitch on your machine is classified as a category 1 hitch.

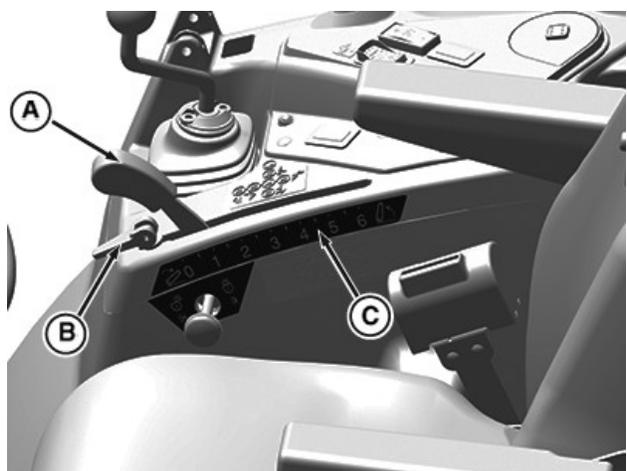

LVP15927—UN—19JUL22

**A—Rockshaft Control Lever**  
**B—Rockshaft Depth Stop**  
**C—Rockshaft Position Identifiers**

Use rockshaft control lever (A) to raise and lower equipment attached to 3-point hitch.

The nine rockshaft position identifiers (C) do not signify specific operating depths. When rockshaft control lever is moved forward, draft arms lower closer to ground.

**Lower Implement:** Push rockshaft control lever forward.

**Raise Implement:** Pull rockshaft control lever rearward.


The adjustable rockshaft depth stop (B) can be adjusted to maintain a particular implement operating depth. To use the depth stop knob:

1. Operate implement for a few minutes to determine the desired operating depth.
2. Pull up on rockshaft depth stop lever (B).
3. Move lever against rockshaft control lever.
4. Push lever down to keep the depth stop in position. Implement will operate in same position each time

rockshaft control lever is pushed against the depth stop.

ycwrhfr,1658239030812-19-19JUL22


## Position Center Link

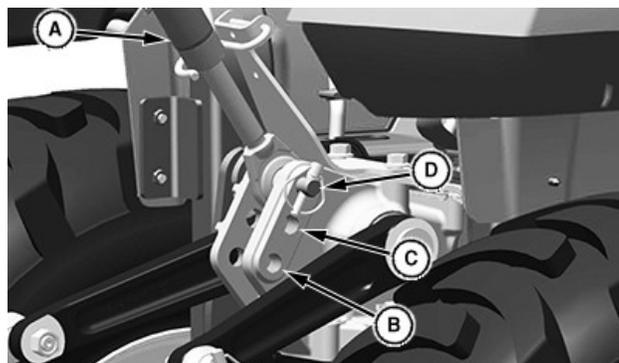

LV25423—UN—01JUN16

**A—Center Link**  
**B—Light to Medium Draft Loads**  
**C—Medium to Heavy Draft Loads**  
**D—Very Heavy Draft Loads**

- **For light and medium draft loads:** Install center link (A) in bottom hole (B) of mounting bracket. Example of light and medium draft load implements include a landscape rake. A category 1 implement tilts forward while raising in this position.
- **For medium and heavy draft loads:** Install center link in middle hole (C) of mounting bracket. Example of medium and heavy draft load implements include a tiller or box blade. A category 1 implement tilts forward slightly while raising in this position.
- **For very heavy draft loads:** Install center link in top hole (D) of mounting bracket. Example of very heavy draft load implements include a plow or ripper. A category 1 implement raises, but angle remains constant.

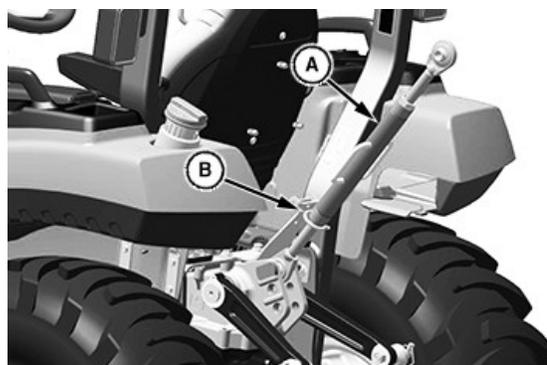

LV25422—UN—01JUN16

**A—Center Link**  
**B—Storage Hook**

Place center link (A) in storage hook (B) when the hitch is not in use.


GS25068,0003DF9-19-01FEB18

## Operate Rate of Drop/Lock Valve

**⚠ CAUTION: Avoid Injury! Excessive rate-of-drop may cause injury or damage. Fully lowering implement should take at least 2 seconds.**

### IMPORTANT:

- To prevent overheating hydraulic oil and damaging tractor, do not raise rockshaft when drop/lock valve is closed.
- Do not use implements or controls with valve locked, damage to tractor could occur.

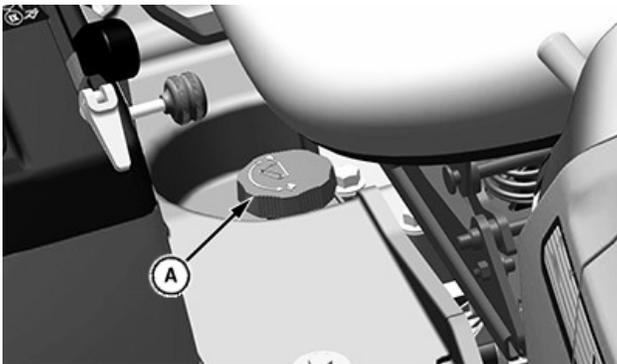

A—Rate-of-Drop/Lock Valve Knob

LV25425—UN—01JUN16

The rate of drop/lock valve controls the rate of rockshaft drop when rockshaft control lever is operated. This valve provides direct rate of drop control for 3-point hitch mounted implements. The valve can also be used to hydraulically lock rockshaft (3-point hitch) in a desired position. The tractor can be operated with rate of drop valve closed. With this valve closed, the rockshaft can be raised but not lowered.

**Increase Rate-of-Drop:** Rotate rate-of-drop/lock valve knob (A) counterclockwise to make drop faster.

**Decrease Rate-of-Drop:** Rotate rate-of-drop/lock valve knob (A) clockwise to make drop slower.

**⚠ CAUTION: Avoid Injury! Do not use the rockshaft drop/lock valve for holding an attachment in raised position for service work. Loss of hydraulic pressure could result in sudden drop of attachment. Lower attachment onto blocks or remove from machine before servicing.**


**Lock 3-Point Hitch:** Rotate drop/lock rate valve knob (A) clockwise until tight.

**Unlock 3-Point Hitch:** Rotate drop/lock rate knob (A) counterclockwise.

GS25068,0003DFA-19-01FEB18

## Use Draft Links

**⚠ CAUTION: Avoid Injury! Look down and behind before and while backing. Clear area of all bystanders before backing machine.**

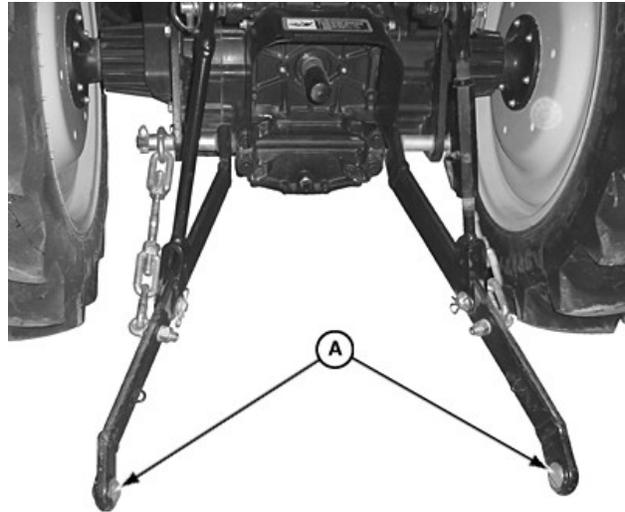


A—Draft Links

LV16780—UN—05MAR13

1. Slowly back machine into position to align draft links with implement lift brackets.
2. Park machine safely.
3. Connect draft links (A) to the implement.
4. Secure implement with lynch pins.

GS25068,0003DFB-19-01FEB18

## Level Implement Front-to-Rear

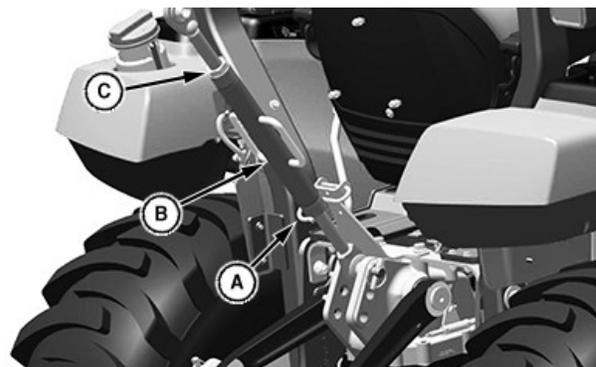

A—Storage Hook  
B—Center Link Body  
C—Locknut

LV25426—UN—01JUN16

1. Park machine safely.

**NOTE:** When the 3-point hitch is not being used, return center link to storage hook (A).

2. Lower implement to ground to relieve pressure on center link.
3. Loosen locknut (C).


**IMPORTANT: Avoid Damage! Do not turn center link body past the stops, or threads may be damaged.**

4. Rotate center link body (B) to lengthen or shorten the center link as needed.
5. Tighten locknut (C).

GS25068,0003DFC-19-01FEB18

### Level Implement Side-to-Side

Use turnbuckle (A) on the right adjustable lift link (C) to level a 3-point hitch implement side-to-side.

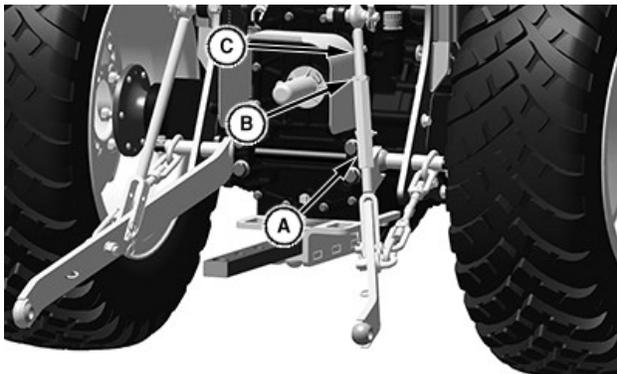

LV26204—UN—13SEP16

A—Turnbuckle  
B—Locknut  
C—Lift Link

1. Park machine safely.
2. Lower any rear mount implement to the ground.
3. Rotate turnbuckle (A) to raise or lower draft link until 3-point hitch mounted implement is level from side-to-side.
4. Tighten locknut (B) to secure position.


GS25068,0003DFD-19-01FEB18

### Adjust Implement Side-to-Side Sway

**IMPORTANT: Make sure sway chains are tightened properly. When using certain implements, damage can occur to the sway link anchor point if not properly tightened.**

*NOTE: Check implement operator's manual procedure for adjusting sway links. When sway links have been properly adjusted, side sway of implement is controlled by position of links. A small amount of sway, 13—25 mm (1/2 - 1 in.), is needed for many implements.*

Use left and right sway links (A) to adjust 3-point hitch implement side-to-side sway:

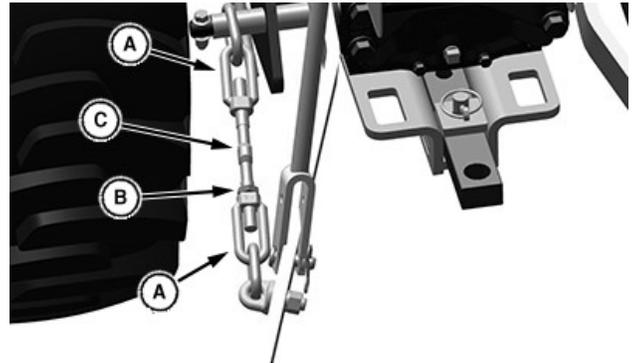

LV25428—UN—01JUN16

A—Sway Link  
B—Locknut  
C—Sway Link Adjusting Rod

1. Park machine safely.
2. Lower any rear mount implement to the ground.
3. Loosen locknut (B).
4. Rotate sway link adjusting rod (C) to adjust 3-point hitch implement side-to-side sway.
5. Tighten locknut (B).

GS25068,0003DFE-19-01FEB18

### Operate Drawbar Hitch (If Equipped)

**⚠ CAUTION: Avoid Injury! Use only the drawbar that was provided with the machine. Do not install or use any other type drawbar.**

**To avoid rearward upset, all towed loads must be attached to the drawbar, not just to the center link or draft arms.**

**IMPORTANT: Avoid damage! Maximum static vertical load on drawbar not to exceed maximum recommendations. Drive slowly with heavy loads.**


### Maximum Drawbar Loads

Certain heavy equipment such as a loaded single-axle trailer can place excessive strain on the drawbar. Strain is greatly increased by speed and rough ground. Do not exceed the maximum static vertical loads on drawbar, see Specifications section.

### Adjust Drawbar Length

**IMPORTANT: Avoid damage! For drawn PTO-driven implements, the drawbar must be in the operating position.**

The drawbar is equipped with three adjusting holes for changing drawbar length and one hole for storage.

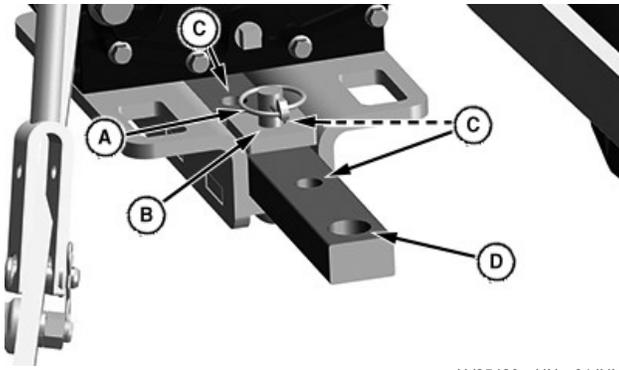


LV25429—UN—01JUN16

- A—Lock Pin
- B—Drilled Pin
- C—Operating Position
- D—Storage Position

1. Remove lock pin (A) and drilled pin (B).
2. Adjust drawbar to one of the three operating positions (C), or to storage position (D).
3. Install drilled pin (B) up from bottom of tractor. Secure with lock pin (A).

GS25068,0003DFF-19-05DEC19

3. Park machine safely.

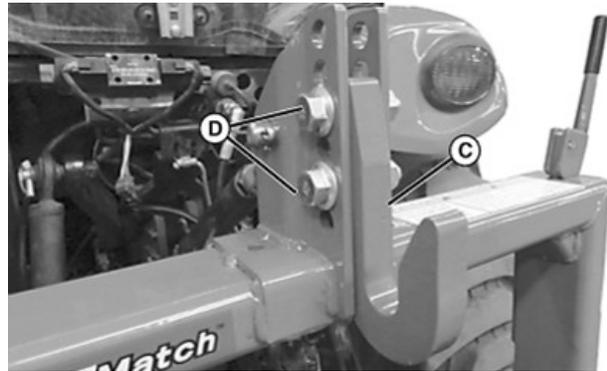

LVAL38291—UN—21AUG12

- C—Center Link Hook
- D—Nut and Bolt

4. Center link hook (C) is set from the factory at standard height to accommodate most implements. Adjust center link hook, if necessary.

- Remove nuts and bolts (D).
- Raise or lower center link hook as required.
- Install nuts and bolts. Torque bolts to specification before use of iMatch assembly.


**Specification**

iMatch Bolts—Torque. . . . . 245—318 N·m

**Operate Optional iMatch Quick-Attach Hitch System**

The optional iMatch™ quick-attach hitch fits all Category I implements designed to the ASABE Cat I standard for quick-attach hitches.

**Install iMatch Quick-Attach Hitch**

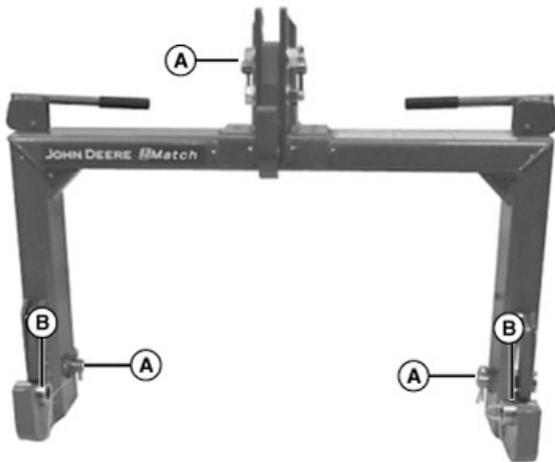

LVAL38290—UN—21AUG12


- A—Drilled Pin (3 used)
- B—Bushing (2 used)

1. Remove three drilled pins (A) and two bushings (B) from iMatch quick-attach hitch.
2. Use machine rockshaft lever to fully lower 3-point hitch draft links.

5. Position iMatch quick-attach hitch near draft links and adjust 3-point hitch sway links to align draft links with quick-attach hitch.
6. Install iMatch quick-attach hitch on the draft links using drilled pins.
7. Install 3-point hitch center link on iMatch quick-attach hitch using quick-lock pin and drilled pin.

**Connect Implement**

1. Install two bushings, included with iMatch quick-attach hitch, on drilled pins in implement draft link brackets.

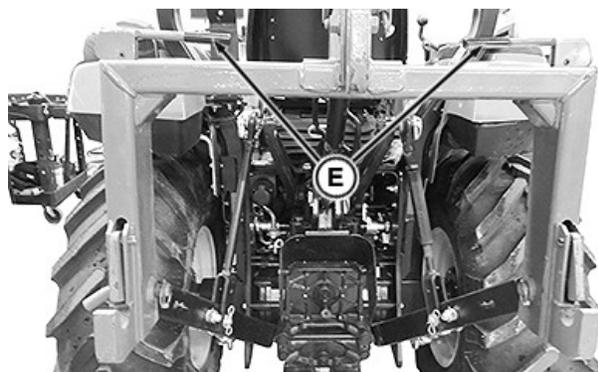

LV25907—UN—26JUL16

- E—Levers

2. Move levers (E) on iMatch quick-attach hitch up to the unlocked position.


*iMatch is a trademark of Deere & Company*

3. Back machine into position and align iMatch quick-attach hitch with implement lift brackets.
4. Use rockshaft lever to position iMatch quick-attach hitch under lift brackets and lift implement from ground.
5. Fully raise implement. Move levers (E) on iMatch quick-attach hitch down to the locked position.

GS25068,0003E04-19-30MAY19

## Operate and Install Front 3-Point Hitch—If Equipped

### Installing Lift Arms

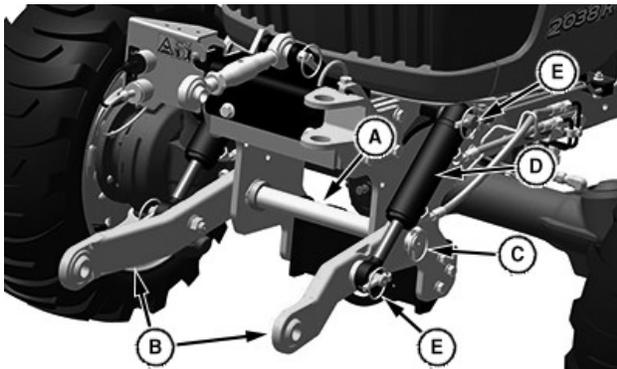

LV25758—UN—27JUL16

- A—Front Shaft
- B—Lift Arms
- C—Quick Lock Pin
- D—Hitch cylinder
- E—Quick Lock Pin


1. Slide front shaft (A) through bushings on bracket.
2. Install lift arms (B) and secure using quick lock pin (C).
3. Install front hitch cylinder (D) onto lift arms and secure with quick lock pin (E).

### Operating Front Hitch

#### Raising and Lowering Hitch

1. Check to be sure hitch is not in transport lock position.
2. Review instructions on using hydraulic dual selective control valve (SCV) and dual selective control valve lock lever included in your tractor operator's manual.
3. Move the tractor dual SCV lever:
  - a. To raise the hitch, move the lever rearward.
  - b. To lower the hitch, move the lever forward.

#### Adjusting Hitch Control Valve

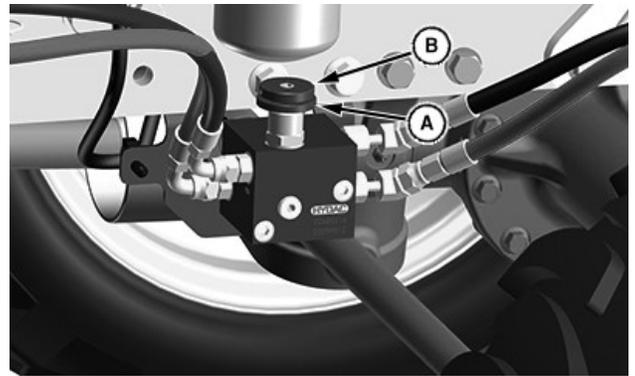

LV25803—UN—11JUL16

- A—Knob
- B—Locking Disc


1. To adjust the speed of raising and lowering the hitch, rotate knob (A).
  - a. Turning the knob clockwise—hitch raises and lowers slower.
  - b. Turning the knob counterclockwise—hitch raises and lowers faster.
2. Once correct speed is achieved, rotate the locking disc (B) clockwise to lock into place.

GS25068,0003E00-19-01FEB18

## Assemble and Install A-Frame—If Equipped

### Assemble A-Frame

List of parts for reference:

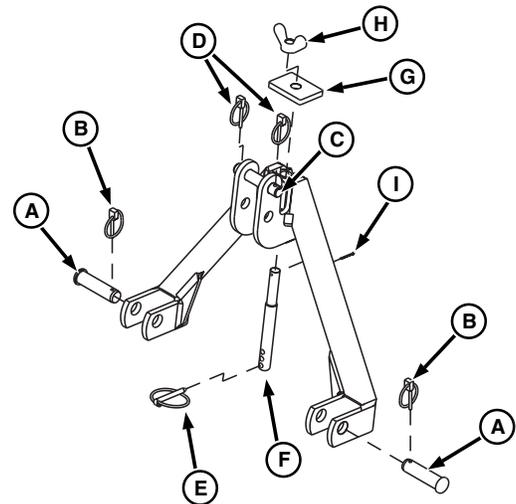


LV25809—UN—14JUL16

- A—Cylinder Pin
- B—Lynch Pin
- C—Hinge Pin
- D—Lynch Pin
- E—Quick Lock Pin
- F—Retainer Rod
- G—Retainer Plate
- H—Wing Nut
- I—Cotter Pin

1. Install cylinder pins (A) in frame with lynch pins (B).
2. Install hinge pin (C) in middle hole in frame with lynch pins (D).
3. Install quick-lock pin (E) in retainer rod (F). Install retainer rod on frame with retainer plate (G), wing nut (H), and cotter pin (I).

**Install A-Frame**

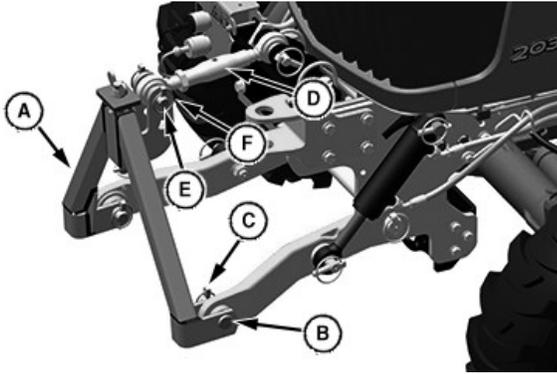


LV25759—UN—07JUL16

- A—A-Frame
- B—Pin
- C—Quick Lock Pin
- D—Center Link
- E—Quick Lock Pin

1. Install A-Frame (A) on lift arms as shown.
2. Secure with pin (B) and quick lock pin (C).
3. Install front hitch center link (D) on A-Frame with hinge pin (E) and quick lock pins (F).

GS25068,0003E13-19-01FEB18

**Install Implements on Front Hitch with A-Frame—If Equipped**

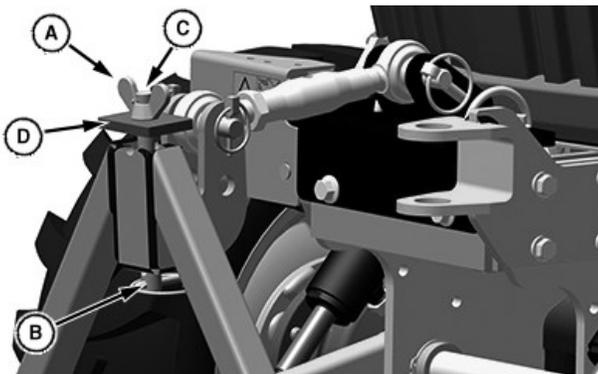


LV25760—UN—07JUL16

- A—Wing Nut
- B—Quick Lock Pin
- C—Retainer Rod
- D—Retainer Plate

1. Loosen wing nut (A) and remove quick-lock pin (B).
2. Remove retainer rod (C) with wing nut and retainer plate (D) from A-Frame.

3. Check to be sure that the implement hydraulic hoses are out of the way if applicable.

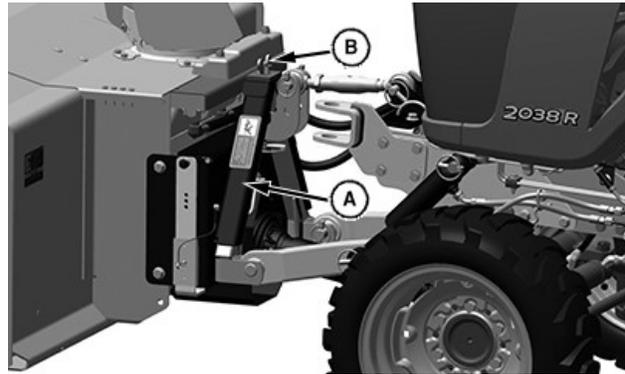

LV25810—UN—21JUL16

- A—Mount
- B—Wing Nut

4. Drive tractor forward slowly and align A-Frame with mount (A) on implement.
5. Raise hitch to install A-Frame on mount.
6. Install retainer rod with wing nut and retainer plate through mount and A-Frame. Position wing nut (B) as needed to install quick-lock pin in retainer rod.
7. Tighten wing nut to secure implement to A-Frame.

GS25068,0003E14-19-01FEB18

**Use Front Hitch Lock Switch—If Equipped**



LVP11620—UN—18FEB21

- A—Front Hitch Lock Switch

The front hitch lock switch (A) is used to lock/unlock the front hitch hydraulic. Locking front hitch while transporting implement on the front hitch prevents leak of hydraulic oil.

1. Pressing switch forward (ON) locks the front hitch.
2. Pressing switch backward (OFF) unlocks the front hitch.

DN39857,000035A-19-25MAR21

## **Install and Remove Mid-Mount Mower with Front Hitch Installed—If Equipped**

### **Install Mid-Mount Mower::**

1. Remove any front implement, if installed.
2. Park machine safely.
3. Raise hitch fully before driving over mid-mower deck.
4. Remove the front PTO drive shaft.
5. Follow installing instructions in mid-mount mower operator's manual.

### **Remove Mid-Mount Mower:**

1. Remove any front implement, if installed.
2. Park machine safely.
3. Ensure hitch is fully raised before removing mid-mower deck.
4. Following removing mower instructions in mid-mount mower operator's manual.

ycwrhfr,1658239490852-19-19JUL22

---

# Selective Control Valve Operation

## Connect Implement Hydraulic Hoses

**CAUTION:** Avoid injury! Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve hydraulic system pressure by moving hydraulic controls in all directions before connecting or disconnecting hydraulic lines.


1. Park machine safely.
2. Lower all implements to the ground.
3. Turn machine off.
4. Relieve all hydraulic pressure by moving SCV lever rearward-to-forward and side-to-side several times.
5. Refer to implement operator's manual for instructions on connecting hydraulic hoses to couplers.

GS25068,0003E05-19-01FEB18

## Operate Hydraulic Selective Control Valve (SCV)

**IMPORTANT:** To prevent the contamination of female quick-couplers, color-coded dust plugs are installed in the couplers when not being used.

This machine series is equipped with a hydraulic Selective Control Valve (SCV) and hydraulic outlets to operate hydraulically driven implements.

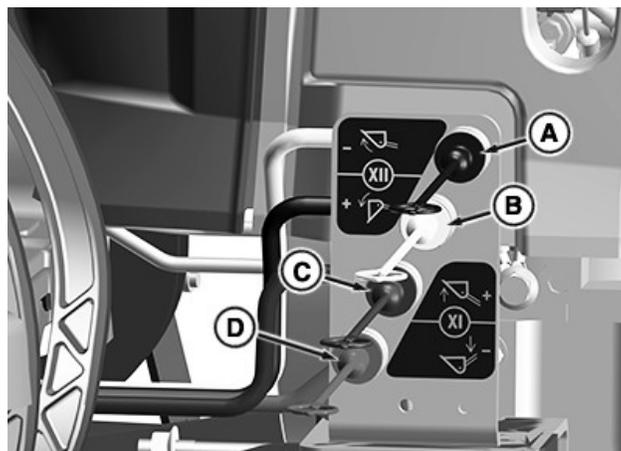

LV25090—UN—02MAY16


Selective Control Valve (SCV) Shown

- A—Bucket Cylinder—Retract (black)
- B—Bucket Cylinder—Extend (yellow)
- C—Boom Cylinder—Extend (blue)
- D—Boom Cylinder—Retract (red)

The machine-mounted hydraulic outlets are female quick-couplers which is color coded for the easy hookup.

Implement hydraulic hoses are also color coded. Match

the color coded hose ends to the color coded hydraulic couplers on the machine when making connections.

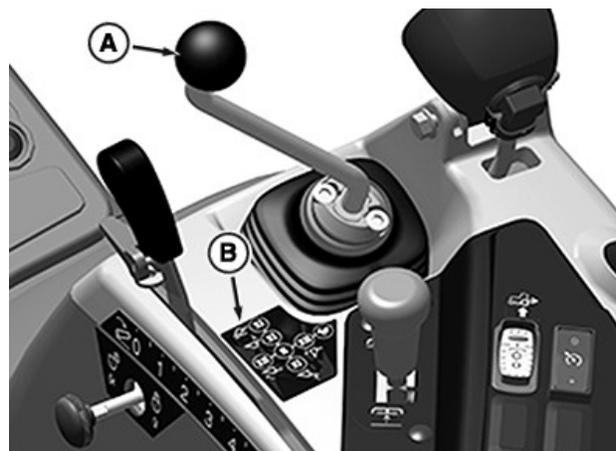

LV25091—UN—02MAY16

Using Hydraulic Dual Selective Control Valve (SCV)

- A—Dual SCV Lever
- B—Information Label

The dual SCV lever (A) controls the oil flow to the corresponding selective control valve (SCV) couplers at the front of the tractor. Refer to the information label (B) for assistance during operation.


- SCV lever left—bucket curl
- SCV lever right—bucket dump
- SCV lever forward—boom lower
- SCV lever rearward—boom raise

**Regenerative Bucket Dump**—Move the lever to the full right or “detent position” for a faster dump when returning to the dig position.

**Boom Float**—Move the lever to the full forward or the “float” position to remove the pressure in both connector lines. It allows the loader to follow the contour of the ground without downforce pressure.

PR59899,0000FE3-19-06MAY21

## Operate Selective Control Valve (SCV) Lock Lever

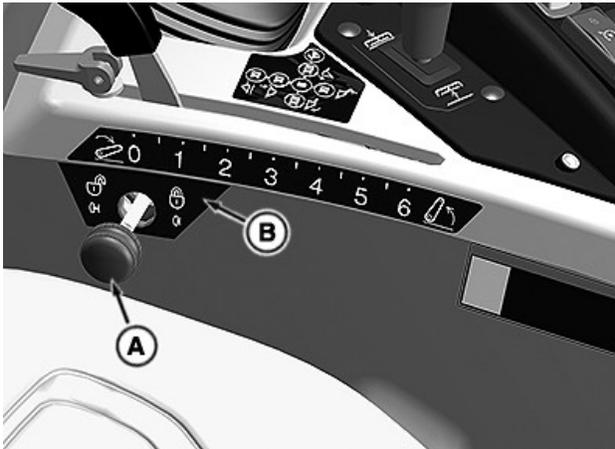

LV25092—UN—02MAY16

A—Lock Lever  
B—Label

- Pull the lock lever (A) to allow SCV lever movement in all directions. Operation of the SCV is unlocked.
- Push the lock lever (A) to prevent SCV lever movement in all directions. Operation of the SCV is locked.
- Operation of the lock lever is indicated on label (B).


PR59899,0000FE4-19-06MAY21

## Operate Dual Rear Selective Control Valve (SCV)—If Equipped


This machine can be equipped with the optional dual rear selective control valve kit to operate hydraulically driven implements from outlets at the rear-mount position.

The machine-mounted hydraulic outlets are female quick-couplers.

### Rear Outlet Selective Control Valve I

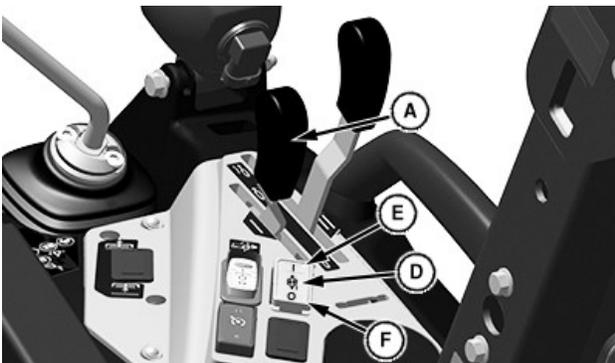

LV25999—UN—15AUG16

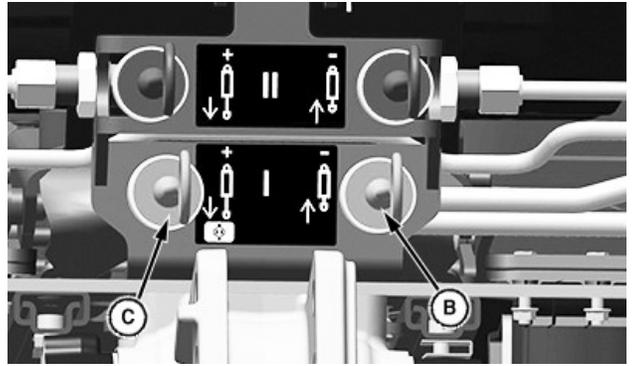

LV26000—UN—15AUG16

A—Rear Selective Control Valve I Lever  
B—Retract Outlet  
C—Extend Outlet  
D—Continuous Flow Switch  
E—On Position  
F—Off Position


- **Cylinder Extend** — Pull rear selective control valve I lever (A) rearward to allow flow from the circuit out through outlet (C) and return to the machine through outlet (B).
- **Cylinder Retract** — Push rear selective control valve I lever (A) forward to allow flow from the circuit out through outlet (B) and return to the machine through outlet (C).

### Operate the Continuous Flow Switch (Rear Outlet SCV I)


The rear outlet SCV I can be operated in a momentary condition to operate attachments such as extending or retracting a hydraulic cylinder. The attachment receives full hydraulic flow in direct response to the use of the control switch.

- The continuous flow switch (D) supplies continuous flow to the rear selective control valve I. To operate the continuous flow:
  - Depress the continuous flow switch to the on position (E) to activate. Pull rearward on the control lever (A). Once activated, “Continuous Flow On” is displayed in the information display screen.
  - Depress the continuous flow switch to the off position (F) or move control lever to deactivate.

### Rear Outlet Selective Control Valve II

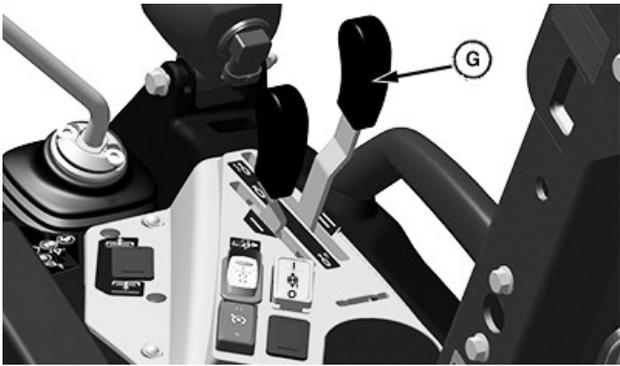

LV26001—UN—15AUG16

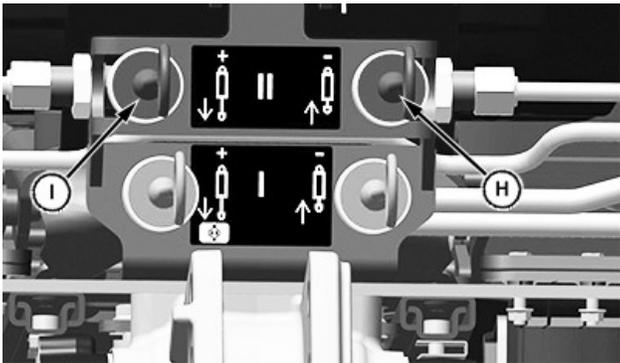

LV26002—UN—15AUG16

G—Rear Selective Control Valve II Lever  
H—Retract Outlet  
I—Extend Outlet

- **Cylinder Extend** — Pull rear selective control lever II (G) rearward to allow flow from the circuit out through outlet (I) and return to the machine through outlet (H).
- **Cylinder Retract** — Push the rear selective control lever II (G) forward to allow flow from the circuit out through outlet (H) and return to the machine through outlet (I).

### Float Position (Rear Outlet SCV II)

“Float” operation allows the cylinder to extend and retract freely, such as when an implement follows ground contour.


- To operate the “float” feature, push the lever forward, through the retract position into the detent to operate.
- Manually return the lever to the center position when “float” is no longer required.

PR59899,0000FE5-19-06MAY21

### Use Power Beyond Outlet—If Equipped

**IMPORTANT:** Avoid damage to the hydraulic system. The power beyond hydraulic circuit must be routed to tank at all times during machine operation. **DO NOT** operate the machine without the power beyond hose connected to “+P” Port or without a suitable hydraulic attachment installed that connects to the “+P” port and tank “T” port.

Power beyond is designed for applications where continuous high volume hydraulic oil flow is needed.

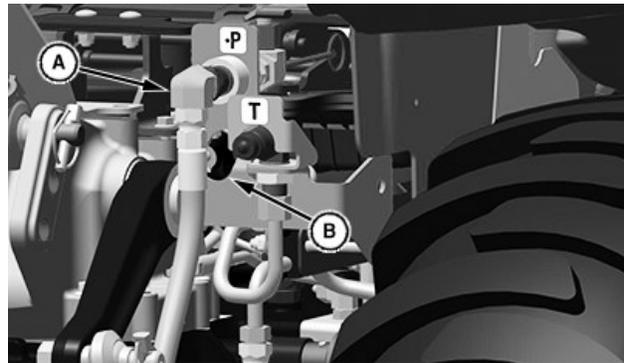

LV26003—UN—16AUG16


A—Power Beyond Hose  
B—Storage Location

1. Shut off engine.
2. Disconnect power beyond hose (A) from quick connect coupler.
3. Remove cover from port “T” and place cover on hose (A).
4. Place hose (A) in storage location (B).
5. Connect implement pressure supply hose to port “P”.
6. Connect implement return hose to port “T”.

GS25068,0003E09-19-01FEB18

### Operate Third Function Selective Control Valve (If Equipped)

**⚠ CAUTION:** To avoid injury from escaping fluid under pressure, stop engine and relieve the pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.

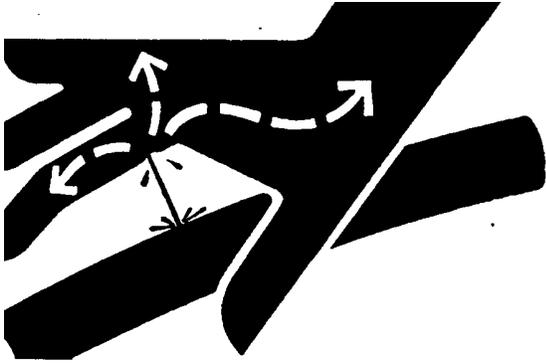


X9811—UN—23AUG88

**⚠ CAUTION:** Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene can result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.


**IMPORTANT:** Avoid damage! To prevent contamination of female quick couplers, install color-coded hose ends on the couplers when not in use.

The third function (SCV) outlet can be operated in a momentary condition to operate attachments such as extending or retracting a hydraulic cylinder. The attachment receives full hydraulic flow in direct response to the use of the control switch.

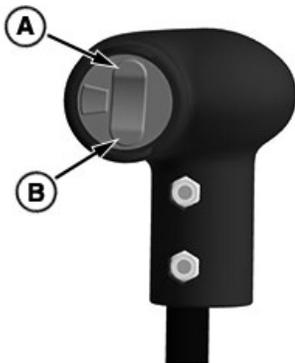

LV30098—UN—07JUN18

Third Function SCV Control Switch

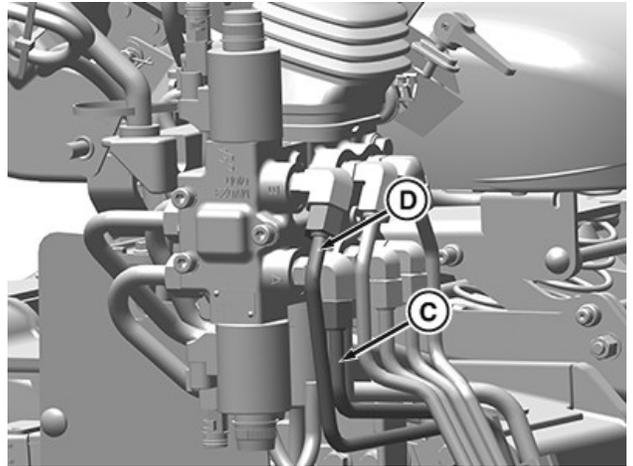

LVP15931—UN—19JUL22

A—Top of the Third Function SCV Control Switch  
B—Bottom of the Third Function SCV Control Switch  
C—Cylinder Extend Outlet  
D—Cylinder Retract Outlet

1. **Cylinder Extend**—Depress the bottom of the third SCV control switch (B) to allow flow from the circuit out through the extend outlet (C) and return to the machine through the retract outlet (D).
2. **Cylinder Retract**—Depress the top of the third SCV control switch (A) to allow flow from the circuit out through the retract outlet (D) and return to the machine through the extend outlet (C).


ycwrhfr,1658239607160-19-19JUL22

# Wheels and Tires Operation

## Tire Labeling, Ascertain the Load Capacity of Tires

**CAUTION:** Load capacity of tires and permissible axle loads must not be exceeded under any circumstances.

Tire load capacities stated in the Operator's Manual apply for a ground speed of 40 km/h (25 mph).

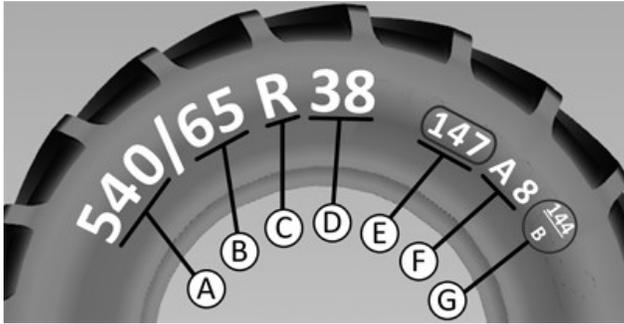

LX299192—UN—18NOV16  
Example of Manufacturer's Information on Sidewall of Tires

Manufacturer's Information on Sidewall of Tires		
A	Tire Width	Width in millimeters
B	Tire Section	Ratio of tire height to tire width
C	Type	"R" = Radical "—" = cross-ply (example: 18.4-38)
D	Rim Diameter	Diameter in inches
E	Tire Load Index (LI)	Maximum permissible load capacity per tire, in relation to speed index (F)
F	Speed Index	Maximum permissible ground speed at which (E) applies
G	Tire Load Index (LI)	Tire load capacity at an alternative permitted ground speed
	Speed Index	

Apply to your tire dealership or directly to the tire manufacturer for more information on tires and tables concerning load index and ground speed.

### Tire load capacity at a specific ground speed:

On the sidewall of the tire can be seen details of its load capacity (E) at maximum permissible ground speed (F).

If the tire manufacturer has approved the same tire for another ground speed, additional information (G) is provided. In this case, note especially that tire load capacity may change in relation to the maximum permissible ground speed.

Speed Index	A6	A8	B	C	D
km/h	30	40	50	60	65
mph	19	25	31	37	40

Example: Tire 540/65R38 147A8 (144/B)		
Tire Load Index (LI)	147	3075 kg (6780 lb) load capacity per tire
Speed Index	A8	40 km/h (25 mph)
+		
Tire Load Index (LI)	(144)	2800 kg (6175 lb) load capacity per tire
Speed Index	(B)	50 km/h (31 mph)

Permissible deviation in load capacity in relation to speed index, in percent:					
Speed Index	Permissible Ground Speed		Permissible deviation in load capacity of tires at:		
	km/h	mph	30 km/h (19 mph)	40 km/h (25 mph)	50 km/h (31 mph)
A6	30	19	± 0%	- 10%	—
A8	40	25	+ 7%	± 0%	- 9%
D	65	40	+ 15%	+ 9.5%	+ 5%

GS25068,0003D8D-19-23JAN18

## Select Tire Inflation Pressure

**IMPORTANT:** Any tire inflation quoted in this Operator's Manual is binding.

Tires must never be inflated to a pressure higher than the maximum value stated on the tire.

Use a tire pressure of 2 bar (29 psi) if no other pressure value is available.

Particular attention must be paid to inflation pressures for row-crop tires, special tires, and tires with liquid ballast. If in doubt, obtain the correct inflation pressure from the tire manufacturer.

Tire inflation pressure plays a vital role in determining vehicle behavior, tractive force, and fuel consumption.

Since the correct tire pressure is dependent on many different factors, it is not possible to make a general recommendation.

**When selecting inflation pressure, take the following into account:**

- Tire manufacturer
- Tire size
- Axle load of machine

- Ballast on machine
- Whether tire is used on a front or rear wheel
- Nature of the work to be done
- Soil conditions
- Expected travel speed

Rear Tires—Capacity			
Tire Size	Tread	kg	lb
12.4-16 6PR	R1	1000	2205

GS25068,0003DBF-19-24JAN18

To ascertain the pressure for specific applications, refer to the inflation pressure tables provided by the tire manufacturers. Many tire manufacturers provide apps on their Internet portals which allow the recommended tire pressure to be calculated.

GS25068,0003D8E-19-23JAN18

### Tire Combinations

In order to achieve maximum drawbar pull, maintain proper steering ability, and reduce tire wear and fuel consumption, comply with the correct tire combinations.

Tire Combinations	
Rear	14-17.5 6PR R4 GA Marathoner
Front	23x8.50-14 6PR R4 GA Marathoner
Rear	14-17.5 6PR R3 GA Mighty Mow
Front	23x8.50-14 6PRR3 GA Mighty Mow
Rear	300/70R20 R3+ GA Garden Pro radial
Front	200/60R15R3+ GA Garden Pro radial
Rear	12.4-16 6PR R1 Titan
Front	7.00-12 6PR R1 Titan

GS25068,0003DBE-19-24JAN18

### Front and Rear Tire Capacity

Front Tires—Capacity			
Tire Size	Tread	kg	lb
23x8.50-14 6PR	R4	445	981
23x8.50-14 6PR	R3	445	981
200/60R15	R3	455	1003
7.00-12 6PR	R1	455	1003

Rear Tires—Capacity			
Tire Size	Tread	kg	lb
14-17.5 6PR	R4	1570	3462
14-17.5 6PR	R3	1570	3462
300/70R20	R3	1180	2602

# Ballast

## Ballast Machine

**⚠ CAUTION: Avoid injury! Ballasted machine becomes unstable when attachment is raised. Always drive slowly over uneven ground and when turning with raised attachment.**

**IMPORTANT: Avoid damage! Do not overload tires. Do not exceed maximum inflation pressure or maximum load capacity of tire.**

**Avoid damage! Remove ballast from the machine when no longer needed.**

- Add weight to the machine front end if needed for stability. Heavy pulling and heavy rear mounted implements tend to lift front wheels. To maintain steering control and prevent tip over, ensure that enough ballast has been added. Remove weight when it is no longer needed.
- See tire maximum inflation pressure and maximum load capacities in the Specifications section.
- Verify maximum tire inflation pressure and maximum load information if embossed into the tire side wall.

GS25068,0003D95-19-23JAN18

## Implement Codes

Use the following tables to determine the number of front weights to use with John Deere implements. Implement code data can be found in the ballasting section of the implement operator's manual.

Match the implement code from the implement manual with the codes for your machine and type of hitch. If the code falls between two numbers in the table, use the next higher number for the number of front weights to use with that implement.

These codes are for ideal conditions. Actual field conditions can require additional ballast. Some John Deere implements require using a certain number of front weights rather than giving implement codes.

Maximum recommended implement codes:

- Base tractor: 33

2032R and 2038R				
Implement Code	Minimum Number of 19 kg (42 lb.) Weights	Minimum Number of 19 kg (42 lb.) Weights when using iMatch™	Minimum Number of 32 kg (70 lb.) Weights	Minimum Number of 32 kg (70 lb.) Weights when using iMatch
31	0	1	0	0
33	0	1	0	1
35	1	2	0	1
37	1	3	1	2
39	2	3	1	2

2032R and 2038R				
Implement Code	Minimum Number of 19 kg (42 lb.) Weights	Minimum Number of 19 kg (42 lb.) Weights when using iMatch™	Minimum Number of 32 kg (70 lb.) Weights	Minimum Number of 32 kg (70 lb.) Weights when using iMatch
41	2	4	2	3
43	3	5	2	3
45	4	6	2	3
47	4	7	3	4
49	5	7	3	4
51	6	8	4	5
53	6	8	4	5
55	7	9	5	6
57	8	10	5	6
59	8	10	5	6
61	9	Not recommended	6	7
63	10	Not recommended	6	7
65	10	Not recommended	6	8
67	Not recommended	Not recommended	7	8
69	Not recommended	Not recommended	7	9
71	Not recommended	Not recommended	8	9
73	Not recommended	Not recommended	8	9
75	Not recommended	Not recommended	8	Not recommended
77	Not recommended	Not recommended	9	Not recommended

iMatch is a trademark of Deere & Company

Loader	Bucket	iMatch™	Implement Code
220R NSL	Yes	Yes	68
220R NSL	Yes	No	75
220R NSL	No	Yes	54
220R NSL	No	No	60
220R MSL	Yes	Yes	76
220R MSL	Yes	No	83
220R MSL	No	Yes	61
220R MSL	No	No	67

iMatch is a trademark of Deere & Company

ycwrhfr,1658409953630-19-22JUL22

## Tire Capacities

**IMPORTANT: Avoid damage! Do not overload tires. Do not exceed tire maximum inflation pressure or maximum load capacity.**

**If necessary ballast exceeds tire load capacity, reduce load or install other tires.**

See tire maximum inflation pressure in the Wheels and Tires Maintenance section.

See maximum load capacities in the Wheels and Tires Operation section.

Verify maximum tire inflation pressure and maximum load information if embossed into the tire side wall.

GS25068,0003DBA-19-01FEB18

## Use Optional Rear Cast Iron Wheel Weights

**CAUTION: Avoid Injury! Machine component or attachment is heavy. Use a safe lifting device or get an assistant to help lift, install, or remove component or attachment.**

**IMPORTANT: Avoid damage! Do not overload tires. Do not exceed tire maximum inflation pressure or maximum load capacity.**

Mount rear wheels in the wide position for improved stability.

Fasten weight to each rear wheel using a safe lifting device. A total of three weights per wheel can be used. See your implement operator's manual for installation and number of weights to use.

Rear wheel weights are available from your John Deere Dealer.

GS25068,0003DB6-19-24JAN18

## Use Optional Rear Ballast Box

**CAUTION: Avoid Injury! To improve front loader-machine stability, use of ballast box is recommended. Use ballast as recommended in loader operator's manual.**

The rear ballast box is used for carrying ballast on the 3-point hitch. Approximate weight of different materials is given in the implement operator's manual.

GS25068,0003DB7-19-24JAN18

## Use Liquid Weight in Tires

**CAUTION: Avoid Injury! Installing liquid ballast requires special equipment and training. Injury can occur from exploding tire. Have the job done by your John Deere dealer or a tire service store.**

**IMPORTANT: Avoid Damage! Cover rim completely with solution to avoid corrosion, but never more than 90 percent full. More solution would leave too little air space to absorb shocks. Damage to tire could occur.**

*NOTE: Use of alcohol as ballast is not recommended. Calcium chloride solution is heavier and more economical.*

A solution of water and calcium chloride provides safe economical ballast, and prevents freezing. If used properly, it will not damage tires, tubes, or rims.

A mixture of 0.4 kg of calcium chloride per liter of water (3.5 lb./gal.), prevents freezing solid above -45 °C (-50 °F).


Fill tubeless tires at least to valve stem level (minimum 75% full). Less solution would expose part of rim, possibly causing corrosion.

Tube-type tires can be filled to any level below 90%.

GS25068,0003DB8-19-24JAN18

## Use Optional Front Weights

**IMPORTANT: Avoid Damage! Do not install weights on front bumper plate, damage to can occur to the front grille. Use optional bolt-on weight bracket for front weights.**

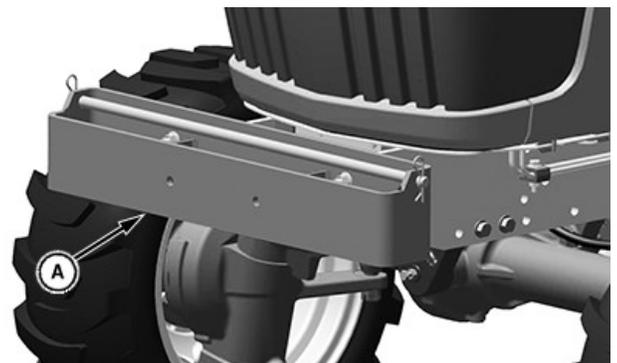

LV26018—UN—25AUG16

**A—Front Weight Bracket**

Quik-Tatch™ weights and attaching hardware are available at your John Deere dealer. Each weight is 19 kg (42 lb.) or 32 kg (70 lb.).

An optional front weight bracket extension kit (A) is

*Quik-Tatch is a trademark of Deere & Company*

available at your John Deere dealer. This optional front weight bracket extension kit holds up to ten Quik-Tatch weights.

GS25068,0003DB9-19-24JAN18

---


# Additional Equipment Operation

## Additional Equipment Operation

To operate attachments or implements, refer to relevant Operator's Manual.

UP00731,0000206-19-26MAY17

## Front Loader Mounting Frames, Installation

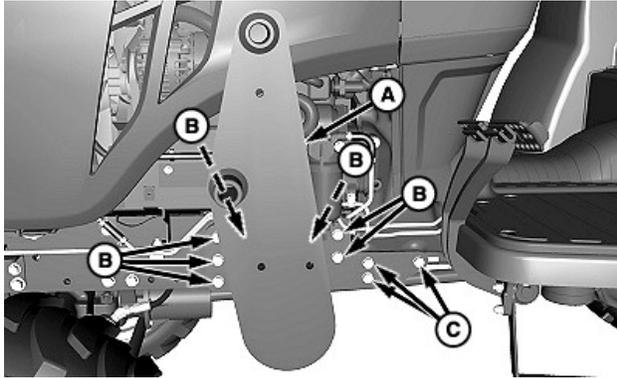

W27097—UN—27OCT15

*Left-Hand Side Shown*

**A—Mounting Frame**

**B—Cap Screw and Washer, M12 x 70 (7 per side)**

**C—Cap Screw and Washer, M12 x 40 (3 per side)**

1. Install mounting frame (A) with cap screws and washers (B and C).
2. Tighten all cap screws to specification.

### Specification

Cap Screws (B and C)—Torque. . . . . 140 N·m  
(103 lb-ft)

3. Repeat procedure on the opposite side.

UP00731,0000300-19-06SEP16

# Operator Station Operation

## Enter and Exit Machine



LV25484—UN—01JUN16


A—Step

## Using Step

Step (A) is located on the left side of machine. Use step for entering and exiting the operator station. Face machine when getting on and off and maintain 3-point contact with steps, handholds, and handrails.

GS25068,0003E0B-19-01FEB18

## Adjust Seat

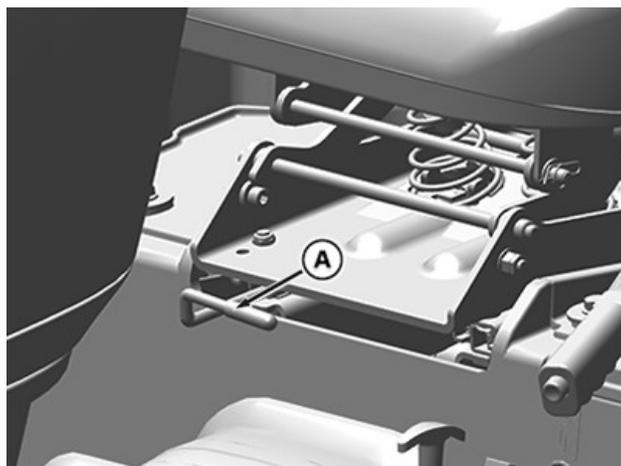

LVP15929—UN—19JUL22

A—Seat Lever


1. Sit on seat.
2. Pull seat lever (A) up to unlock seat position.
3. Slide seat forward or rearward to desired position where all controls can be easily reached.
4. Release lever to lock seat in position.

ycwrhfr,1658239177737-19-19JUL22

## Use Seat Belt

**⚠ CAUTION: Avoid Injury! Always wear seat belt when operating machine with folding roll-over protective structure (ROPS) in upright position. Do not jump from machine if machine tips.**

If ROPS must be folded to operate in a low clearance area, do not use seat belt. Raise ROPS and use seat belt as soon as conditions permit.

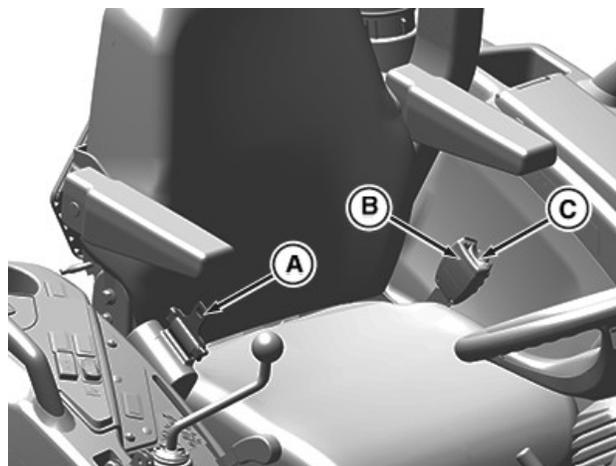

LVP15928—UN—19JUL22

A—Seat Belt  
B—Latch  
C—Red Button

1. **To fasten the seat belt:** Extend self-retracting seat belt (A) and insert into latch (B) on opposite side of seat. Seat belt is self-retracting and will automatically adjust to fit operator.
2. **To release the seat belt:** Press red button (C) on latch (B) to release seat belt end.


ycwrhfr,1658239202056-19-19JUL22

## Raise and Lower Roll-Over Protective Structure (ROPS)


**⚠ CAUTION: Avoid injury! Always wear seat belt when operating machine with folding roll-over protective structure (ROPS) in upright position. Do not jump from machine if machine tips.**

If ROPS must be folded to operate in a low clearance area, do not use seat belt. Raise ROPS and use seat belt as soon as conditions permit.

**⚠ CAUTION: If canopy or sunshade is attached to the ROPS structure, the weight MUST be limited to 100 lb (45 kg) or less.**

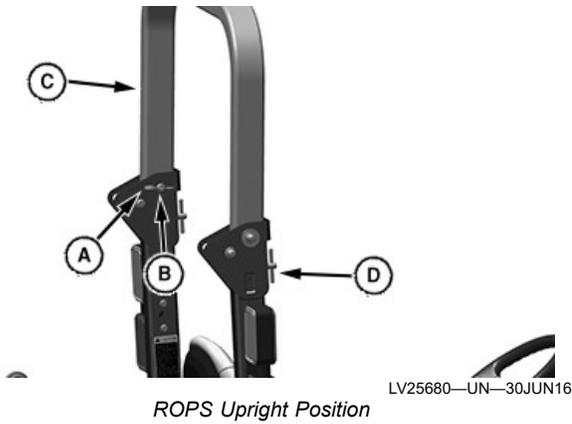

ROPS Upright Position

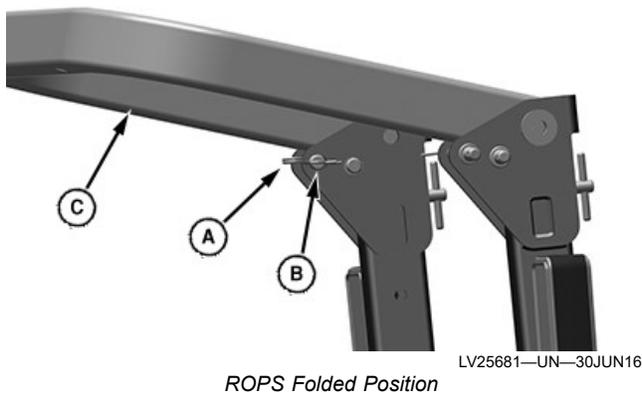

ROPS Folded Position

- A—Spring Locking Pin
- B—Drilled Pin
- C—ROPS Crossbar
- D—Anti-Rattle T-Handle

### Lower ROPS Crossbar

1. Turn anti-rattle t-handle (D) counterclockwise to relieve tension.
2. Remove spring locking pin (A) and drilled pin (B) on each side of the ROPS.
3. Install drilled pins (B) and spring locking pins (A) and lower crossbar (C) onto drilled pins (B).

### Raise ROPS Crossbar

1. Carefully raise ROPS crossbar (C) to the operating position.
2. Align crossbar bracket holes with support bracket holes on each side of the ROPS.
3. Install drilled pins (B) and spring locking pins (A) to lock crossbar (C) in the raised position.
4. Tighten anti-rattle t-handle (D). Repeat for other side of ROPS.

GS25068,0003E0E-19-02FEB18

# Transport and Storage

---

## Transport Machine on Trailer

**⚠ CAUTION: Avoid injury! Use extra care when loading or unloading the machine into a trailer or truck.**

Close fuel shutoff valve, if the machine is equipped.

**IMPORTANT: Avoid damage! Transporting a machine on a trailer at high speeds can result in hood raising and possibly coming off machine if not secured.**

- **Position machine on trailer so hood or engine cover opens from rear of trailer to prevent wind from blowing hood or cover open.**
- **Secure hood with existing machine locks or latches.**
- **If no locks or latches exist, secure hood with tie-down straps.**

*NOTE: Use a heavy-duty trailer to transport the machine.*

1. Drive or back machine onto trailer so hood or engine cover opens from rear of trailer.
2. Lower any implements to the trailer deck.
3. Lock the park brake.
4. Stop the engine.
5. Remove the key.
6. Close the fuel shutoff valve.
7. Remove or cover up the slow moving vehicle (SMV) sign.

*NOTE: Both front and rear straps must be directed down and outward from machine. Trailer must have signs and lights as required by law.*

8. Fasten machine to trailer with heavy-duty straps, chains, or cables.

GS25068,0003E2E-19-02FEB18

---

## Transport Machine

### Drive Machine Safely on Roads

**⚠ CAUTION: Avoid injury! Use caution when operating machine at transport speeds. Reduce speeds if towed load weighs more than machine. Consult towed equipment operator's manual for recommended transport speeds.**

**Use additional caution when transporting towed loads under adverse surface conditions, especially when turning, and on inclined surfaces.**

**Use of warning lights and turn signals are recommended when traveling on public roads unless prohibited by state or local regulations. Lighting kits are available from a John Deere dealer.**

Observe the following precautions when operating the machine on a road:

- Make sure SMV (Slow Moving Vehicle) emblem and warning lights are clean and visible. If towed or rear-mounted equipment obstructs these safety devices, install SMV emblem and warning lights on equipment.
- Turn on the warning lights and headlights, except if prohibited by law.
- Drive slowly enough to maintain safe control at all times. Slow down for hillsides, rough ground, and sharp turns, especially when transporting heavy, rear-mounted implements.
- To provide maximum stability, adjust tread width position of rear wheels.
- If equipped, disengage the MFWD to reduce tire wear.
- Never coast a machine downhill.

JZ81662,0000FC8-19-15JAN19

---

## Push or Tow Machine

**⚠ CAUTION: Avoid injury! Never tow machine faster than 10 km/h (6 mph). If possible, have someone operate steering and brakes of towed tractor.**

**IMPORTANT: Avoid damage! Push or tow machine for short distances only.**

1. Push the PTO switch to the disengaged/off position.
2. Disengage the differential lock.
3. Disengage park brake.
4. Move the transmission range lever to the N (neutral) position.
5. Disengage the MFWD.

JC48530,000044C-19-31MAR20

---

## Tow Loads

**⚠ CAUTION: Avoid Injury!** Stopping distance increases with speed and weight of towed load, and on slopes. Towed loads with or without brakes that are too heavy for the machine or are towed too fast can cause loss of control. Consider the weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the machine weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for machine, lighten the load, or get a heavier towing unit. The machine must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

1. Hitch the towed load only to the rear drawbar.
2. Connect safety chains to the lower draft arm crossbar and to the towed load. Provide only enough slack to permit turning.
3. Before descending a hill, make sure speed is low enough to control machine without having to use the brake pedal to brake the machine and any installed implements.

GS25068,0003E31-19-02FEB18

## Safety Chain


**⚠ CAUTION: Avoid injury!** Hitch towed loads only to the drawbar to avoid rearward upset. Do not use the safety chain for towing loads.

**IMPORTANT: Avoid damages!** Secure the towed load to the drawbar. The safety chain is designed to help control the towed load in case of separation from the drawbar.

Use a chain with a strength rating greater than the gross weight of the towed load.

Replace the safety chain if one or more links or fittings are broken, stretched, or otherwise damaged or deformed.

Do not use an intermediate support as the primary attaching point.

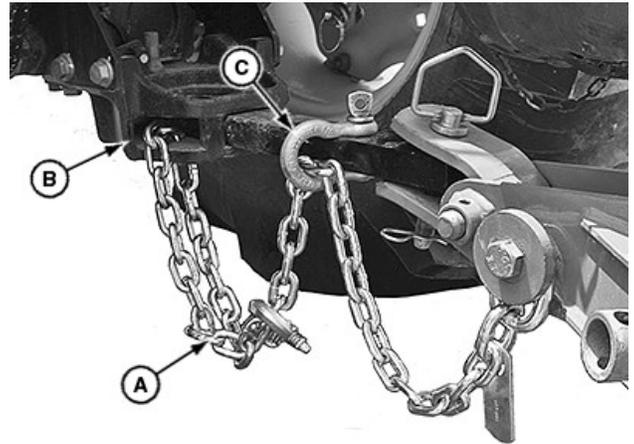

LV17806—UN—15MAY13

A—Safety Chain  
B—Attachment Point  
C—Intermediate Support

1. Attach safety chain (A) to attachment point (B) and to towed load. Provide only enough slack to permit turning.
2. Install additional intermediate support point (C) for chain on drawbar to reduce slack in chain when necessary.
3. Remove safety chain and store when not in use.

UP00731,000020F-19-24AUG16

## Store Safety

**⚠ CAUTION: Avoid injury!** Fuel vapors are explosive and flammable. Engine exhaust contain carbon monoxide and cause serious illness or death:

- Run the engine only long enough to move the machine to or from storage.
- Do not store vehicle with fuel in the tank inside a building where fumes may reach an open flame or spark.
- Allow the engine to cool before storing the machine in any enclosure.

KN52281,1003F62-19-29NOV16

## Prepare Machine for Storage

1. Repair any worn or damaged parts. Replace parts if necessary. Tighten loose hardware.
2. To prevent rust, repair scratched or chipped metal surfaces.

3. Wash the machine and apply wax to metal and plastic surfaces.
4. To dry belts and pulleys, run machine for five minutes.
5. To prevent rust, apply a light coat of engine oil to pivot and wear points.
6. Lubricate grease points.
7. Check tire pressure.

KN52281,1003F63-19-15JAN19

6. Clean the battery and battery posts.
7. Close fuel shutoff valve, if your machine is equipped.
8. To avoid the battery freezing, store it in a cool, dry place.

*NOTE: Recharge the stored battery every 90 days.*

9. Charge the battery.
10. Store the vehicle in a dry, protected place. If vehicle is stored outside, put a waterproof cover over it.

UP00731,00001A5-19-15JAN19

---

## Prepare Fuel and Engine for Storage

### Fuel:

If you have been using stabilized fuel, add stabilized fuel to the tank until the tank is full.

*NOTE: Filling the fuel tank reduces the amount of air in the fuel tank and helps reduce deterioration of fuel.*

If you are not using stabilized fuel:

1. Park machine safely in a well-ventilated area.

*NOTE: Leave as little fuel in the fuel tank as possible for the season.*

2. Turn on engine and allow to run until it runs out of fuel.
3. Turn key to OFF position.

**IMPORTANT: Avoid damage! Stale fuel can produce varnish and plug injector components and affect engine performance.**

- **Add fuel conditioner or stabilizer to fresh fuel before filling tank.**

4. Mix fresh fuel and fuel stabilizer in a separate container. Follow stabilizer instructions for mixing.
5. Fill fuel tank with stabilized fuel.
6. Run engine for a few minutes to allow fuel mixture to circulate through the fuel system.
7. Turn key to OFF position.

### Engine:

Use engine storage procedure when vehicle is not to be used for longer than 60 days.

1. Change engine oil and filter while engine is warm.
2. Service air filter if necessary.
3. Clean debris from the air intake screen.
4. Clean the engine and engine compartment.
5. Remove the battery.

## Remove Machine from Storage

1. Check tire pressure.
2. Check engine oil level.
3. Charge battery if necessary.
4. Install battery.
5. Lubricate all grease points.
6. Open fuel shutoff valve, if your machine is equipped.
7. Run the engine 5 minutes without any attachments running to allow oil to be distributed throughout engine.
8. Be sure all shields and guards or deflectors are in place.

KN52281,1003F65-19-29NOV16

---

## Remove Front A-Frame—If Equipped Remove Implement

1. Park machine safely.
2. Loosen wing nut.
3. Remove quick-lock pin in retainer rod.
4. Remove retainer rod with retainer plate.
5. Lower the hitch to remove A-Frame from implement mount, and slowly back tractor away from implement.
6. Install retainer rod with retainer plate on A-Frame with the quick-lock pin.

## Remove A-Frame

1. Remove pin and quick lock pins in front hitch lift arms.
2. Remove front hitch center link from A-Frame by removing quick lock pin and hinge pin.
3. Remove A-Frame.


4. Install pin and quick lock pins in front hitch lift arms for storage.

GS25068,0003E12-19-01FEB18

## Remove Front 3-Point Hitch—If Equipped

### Remove Hitch

- Front hitch can be left on tractor when not in use.
- Lift arms are to be removed when front hitch is not in use, and must be removed for loader operation.
- Lift arms and center link are to be removed and stored.

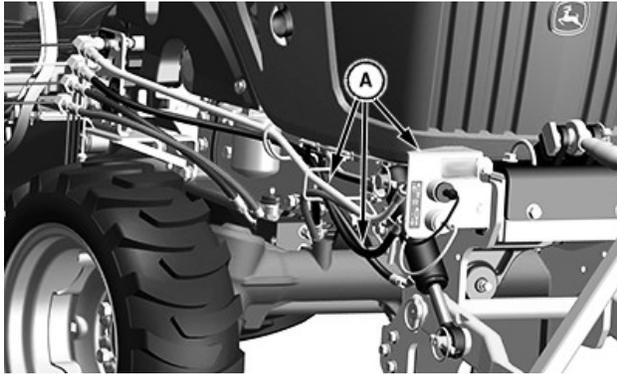

LV25901—UN—25AUG16

### A—Auxiliary Coupler Kit


- Auxiliary coupler kit (A) must be removed for loader operation.

GS25068,0003E0F-19-01FEB18


## Store Front 3-Point Hitch—If Equipped

*NOTE: Lift arms are to be removed when front hitch is not in use.*

*The front hitch should be put into storage position when the front loader is being used.*

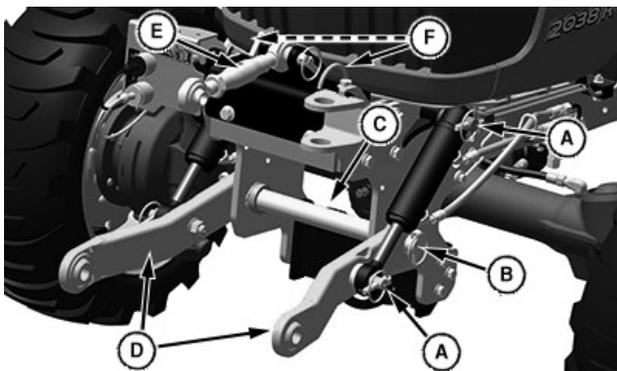

LV25802—UN—27JUL16

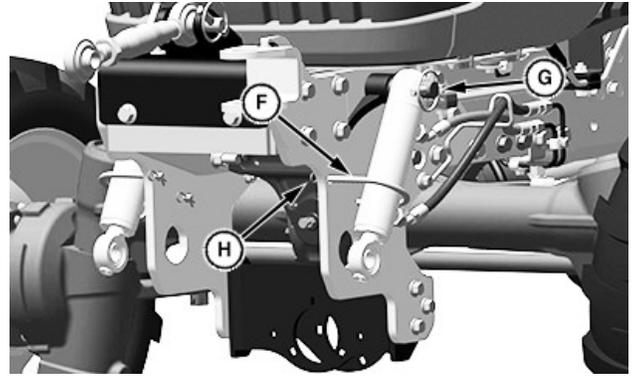

LV25801—UN—27JUL16

- A—Quick Lock Pin
- B—Quick Lock Pin
- C—Front Shaft
- D—Lift Arms
- E—Center Link
- F—Front Hitch Storage Bracket
- G—Hitch Pin
- H—Spring Clip

1. Remove cylinder from lift arms by removing quick lock pins (A).
2. Remove quick lock pin (B).
3. Remove front shaft (C) from brackets.
4. Remove lift arms (D).
5. Remove center link (E) from bracket.
6. Remove front hitch storage bracket (F).
7. Replace hydraulic cylinder on hitch pin (G) and secure with quick lock pin.
8. Retain hydraulic cylinder to the front bracket using storage bracket (F) and spring clips (H).

GS25068,0003E10-19-01FEB18

# Maintenance Intervals

## Service Your Machine

**IMPORTANT: Avoid damage! Operating in extreme conditions require more frequent service intervals:**

- Engine components become dirty or plugged when operating in extreme heat, dust, or other severe conditions.
- Engine oil can degrade if machine is

operated constantly at slow or low engine speeds or for frequent short periods of time.

Use the following timetables to perform routine maintenance on your machine.

Park the vehicle safely.

UP00731,0000223-19-29NOV16

## Maintenance Interval Chart—Daily to Every 400 Hours

Item	Daily	Every 10 Hrs.	Every 50 Hrs.	Every 200 Hrs.	Every 400 Hrs.
Test safety system.	•	•			
Check the engine oil level.	•	•			
Check and drain water separator.	•				
Check the transmission oil level.	•	•			
Check the air filter rubber dust valve.		•			
Check radiator coolant level.	•	•			
Check front grill screen.	•				
Check the front axle oil level.			•		
Check cab mounting bolt torque.			•		
Clean or replace cab air filters.			•		
Lubricate the 3-point hitch.			•		
Change engine oil and filter.					•
Inspect alternator belt.				•	
Check the wheel bolt torque.				•	
Change transmission oil and filters. <sup>a</sup>					•
Drain water from the fuel tank and replace the fuel filter.					•
Lubricate grease points (normal conditions).			•		
Lubricate grease points (wet conditions).		•			

Maintenance Interval Chart—Daily to Every 400 Hours

<sup>a</sup>Transmission oil can be changed every 1200 hrs. or 3 years if the specific requirements are met, see Transmission Maintenance for the additional information.

PR59899,0000FF6-19-22APR22

## Maintenance Interval Chart—Every 600 Hours to Every 6000 Hours

Item	Every 600 Hrs.	Yearly	Every 1000 Hrs.	Every 2000 Hrs. or Annually <sup>a</sup>	Every 6000 Hrs./6 Years <sup>a</sup>
Service air filter element and hoses.	•				
Check all hoses and clamps.		•			
Change the front axle oil.	•				
Check the axle thrust bolt torque.	•				
Clean front axle breather valve.	•				
Change engine oil and filter.		•			
Check the wheel bolt torque.		•			
Drain water from the fuel tank and replace the fuel filter.		•			
Check all hoses and clamps.		•			
Check the engine valve clearance. See your John Deere dealer.			•		
Drain, flush, and refill engine cooling system. <sup>b</sup> When coolant is NOT checked annually or NOT				•	

## Maintenance Intervals

Item	Every 600 Hrs.	Yearly	Every 1000 Hrs.	Every 2000 Hrs. or Annually <sup>a</sup>	Every 6000 Hrs./6 Years <sup>a</sup>
serviced with the pre-diluted John Deere COOL-GARD II™.™ <sup>c</sup>					
Drain, flush, and refill engine cooling system. <sup>b</sup> When coolant is checked annually and serviced with the pre-diluted John Deere COOL-GARD II™.™.					•

Maintenance Interval Chart — 600 Hrs. to 6000 Hrs.

COOL-GARD II™ is a trademark of Deere & Company

<sup>a</sup>If COOL-GARD II™ is not used and coolant is not tested annually, service interval is 2000 hrs./annually.

<sup>b</sup>See your John Deere dealer for service.

<sup>c</sup>Service interval can be extended to 6 years and 6000 hrs. thereafter if the tractor coolant has been checked annually and serviced with pre-diluted John Deere COOL-GARD II™.

PR59899,0000FF8-19-21MAY21

### Test the Safety Interlock System Before Startup

#### Test the Neutral Start Switch

1. Sit on operator's seat.
2. Disengage PTO.
3. Move the transmission range shift lever to the H (high) or L (low) position.
4. Turn key switch to START position.


**Result:** Engine must not start. Display shows "Shift to Neutral".

#### Test Reverse Implement Option (RIO)

##### Test 1


**⚠ CAUTION: Avoid Injury! Rotating blades are dangerous. Children or bystanders may be injured by runover and rotating blades.**

**Before backing up, carefully check the area around the machine.**

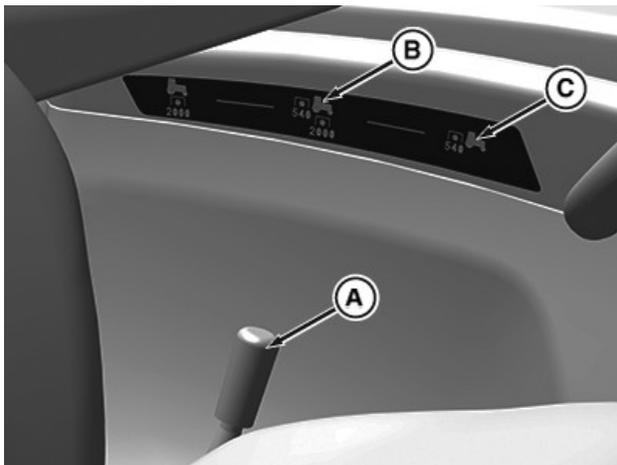

PTO Shift Lever

LVP15930—UN—19JUL22

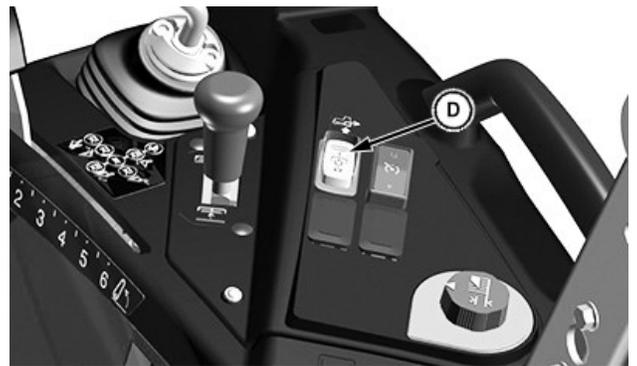

PTO/RIO Switch


LV25022—UN—15JUN16

- A—PTO Selector Lever
- B—Mid/Rear PTO
- C—Rear PTO
- D—PTO / RIO Switch

1. Park machine safely.
2. Start engine.
3. Set engine speed to 1600 rpm or less.  
Set PTO selector lever (A) to mid/rear PTO (B) or mid PTO (C).
5. Press PTO/RIO switch (D) to start attachment.
6. Look behind and down before backing up to be sure that there are no bystanders and there is a clear path.
7. Begin reverse travel by depressing reverse travel pedal.


**Result:** Attachment and engine should stop operation. If attachment or engine continues to operate while machine travels in reverse, do not continue operation.

##### Test 2

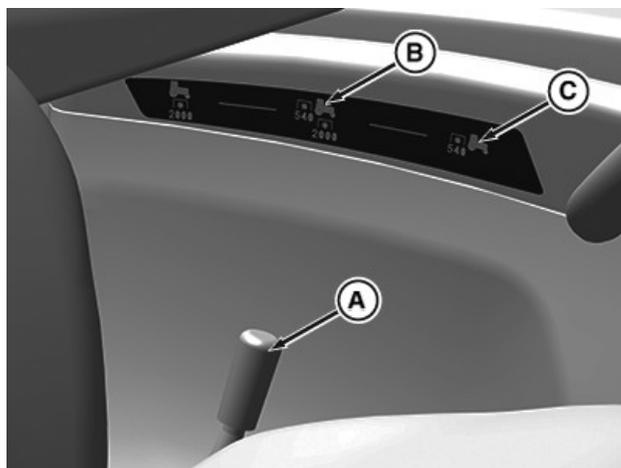

LVP15930—UN—19JUL22

PTO Shift Lever

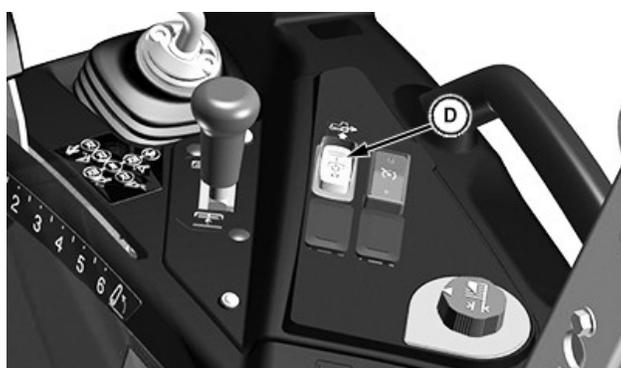

LV25022—UN—15JUN16

PTO/RIO Switch

- A—PTO Selector Lever
- B—Mid/Rear PTO
- C—Rear PTO
- D—PTO / RIO Switch

1. Park machine safely.
2. Start engine.
3. Set engine speed to 1600 rpm or less.
4. Set PTO selector lever (A) to mid/rear PTO (B) or mid PTO (C).
5. Press PTO/RIO switch (D) to start attachment.
6. Look behind and down before backing up to be sure that there are no bystanders and there is a clear path.
7. Press PTO/RIO switch (D) to the momentary position (RIO) to activate the reverse implement option.
8. Begin reverse travel by depressing reverse travel pedal.

**Result:** Machine should begin to travel in reverse and attachment should remain in operation.

#### Test the Seat Switch

1. Sit on operator's seat.

2. Do not depress the hydrostatic travel pedals.
3. Lock the park brake.
4. Start the engine.
5. Engage the rear PTO.
6. Raise up slightly from the seat. Do not dismount machine.

**Result:** Rear PTO must shut down within 3 seconds and engine remains running. Display shows "Out of Seat".

**NOTE:** If the Mid PTO is engaged, both the PTO and engine shuts down when operator leaves the seat.

ycwrhfr,1658239377195-19-19JUL22

### Avoid Damage to Plastic and Painted Surfaces

- Rinse the machine before wiping plastic parts. Using a dry cloth causes scratches.
- Insect repellent spray damages plastic and painted surfaces. Do not spray insect repellent near machine.
- Be careful not to spill fuel on the machine, it damages the surface. Wipe up spilled fuel immediately.
- Prolonged exposure to sunlight damages the hood surfaces.

KN52281,1003EA4-19-15JAN19

### Clean Plastic Surfaces

**IMPORTANT:** Avoid damage! Improper care of machine plastic surfaces can damage that surface:

- Do not wipe plastic surfaces when they are dry. Dry wiping results in minor surface scratches.
- Use a soft, clean cloth (bath towel, diaper, automotive mitt).
- Do not use abrasive materials, such as polishing compounds, on plastic surfaces.

1. To remove the dirt and dust that scratches the surface, rinse hood and entire machine with clean water.
2. Wash surface with clean water and a mild liquid automotive washing soap.
3. Dry thoroughly to avoid water spots.
4. Wax the surface with a liquid automotive wax. Use products that specifically say "contains no abrasives."

**IMPORTANT: Avoid damage! Do not use a power buffer to remove wax.**

5. Buff applied wax by hand using a clean, soft cloth.

---

KN52281,1003F50-19-29NOV16

## Clean and Repair Metal Surfaces

### Clean:

To care for the painted metal surfaces of the machine, follow automotive practices. To maintain the factory look of the machine painted surfaces, use a high-quality automotive wax regularly.

### Repair Minor Scratches (Surface Scratch):

1. Clean area to be repaired thoroughly.

**IMPORTANT: Avoid damage! Do not use rubbing compound on painted surfaces.**

2. Use automotive polishing compound to remove surface scratches.
3. Apply wax to the entire surface.

### Repair Deep Scratches (Bare Metal or Primer Showing):

1. Clean area to be repaired with rubbing alcohol or mineral spirits.
2. To fill scratches, use a paint stick with factory-matched colors. Paint sticks are available from an authorized dealer. Follow directions included on the paint stick for use and for drying.
3. Smooth out surface using an automotive polishing compound. Do not use power buffer.
4. Apply wax to the entire surface.

---

KN52281,1003F51-19-15JAN19

# Fuel, Lubricants, and Coolant

## Diesel Fuel

Use the proper diesel fuel to help prevent decreased engine performance and increased exhaust emissions. Failure to follow the fuel requirements listed below can void your engine warranty.

Consult your local fuel distributor for properties of the diesel fuel in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to ISO EN 590 or ASTM D975 are recommended.

### Required fuel properties

In all cases, the fuel shall meet the following properties:

**Cetane number of 45 minimum.** Cetane number greater than 50 is preferred, especially when temperatures are below -20°C (-4°F) or elevations above 1500 m (5000 ft).

**Cold Filter Plugging Point (CFPP)** should be at least 5°C (9°F) below the expected lowest temperature or **Cloud Point** below the lowest ambient temperature.

**Fuel lubricity** should comply with ISO EN 590 or ASTM D975.

**IMPORTANT: Avoid damage! Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.**

If a fuel of low or unknown lubricity is used, addition of John Deere PREMIUM DIESEL FUEL CONDITIONER at the specified concentration is recommended.

### Sulfur content

- Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.
- Use only ultra low sulfur diesel (ULSD) fuel with a maximum of 0.0015% (15mg/kg) sulfur content.

**IMPORTANT: Avoid damage! Do not mix diesel engine oil or any other type of lubricating oil with diesel fuel.**

### Using BioDiesel Fuel

BioDiesel fuels may be used only if the BioDiesel fuel properties meet the latest edition of ASTM D6751, ASTM D7467, EN14214, or equivalent specification.

The current maximum allowable BioDiesel concentration is a 20% blend (also known as B20) in petroleum diesel fuel.

Use of B6-B20 fuel will require special procedures for fuel handling and machine storage.

To learn of any changes to the recommendations for

BioDiesel usage with your diesel engine, ask your John Deere dealer.

### Handling and Storing Diesel Fuel

**CAUTION: Avoid injury! Handle fuel carefully. Do not fill the fuel tank when engine is running.**

**Do not smoke while you fill the fuel tank or service the fuel system.**

**IMPORTANT: Avoid damage! Do not use galvanized containers—diesel fuel stored in galvanized containers reacts with zinc coating in the container to form zinc flakes. If fuel contains water, a zinc gel will also form. The gel and flakes will quickly plug fuel filters and damage fuel injectors and fuel pumps.**

- Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.
- When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel and to prevent water condensation. Contact your fuel supplier for recommendations.

UP00731,0000023-19-06SEP18

### Handling and Storing Diesel Fuel

**CAUTION: Reduce the risk of fire. Handle fuel carefully. DO NOT fill the fuel tank when engine is running. DO NOT smoke while you fill the fuel tank or service the fuel system.**

To prevent water condensation and freezing during cold weather, fill the fuel tank at the end of operation each day.

Keep all storage tanks as full as practical to minimize condensation.

Ensure that all fuel tank caps and covers are installed properly to prevent moisture from entering. Monitor water content of the fuel regularly.

When using biodiesel fuel, the fuel filter requires more frequent replacement due to premature plugging.

Check engine oil level daily before starting the engine. Rising oil level indicates fuel dilution of the engine oil.

**IMPORTANT: The fuel tank pressure is relieved through the filler cap. If a new filler cap is required, always replace it with an original John Deere replacement cap.**

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel and prevent water condensation. Contact your

fuel supplier or John Deere dealer for recommendations.

UP00731,0000158-19-17JAN19

---

## Testing Diesel Fuel

A fuel analysis program can help to monitor the quality of diesel fuel. The fuel analysis can provide critical data such as calculated cetane index, fuel type, sulfur content, water content, appearance, suitability for cold weather operations, bacteria, cloud point, acid number, particulate contamination, and whether the fuel meets ASTM D975 or equivalent specification.

Contact your John Deere dealer for more information on diesel fuel analysis.

DX,FUEL6-19-13JAN18

---

## Minimizing the Effect of Cold Weather on Diesel Engines

John Deere diesel engines are designed to operate effectively in cold weather.

However, for effective starting and cold-weather operation, a little extra care is necessary. The following information outlines steps that can minimize the effect that cold weather may have on starting and operation of your engine. See your John Deere dealer for additional information and local availability of cold-weather aids.

### Use Winter Grade Fuel

When temperatures fall below 0°C (32°F), winter grade fuel (No. 1-D in North America) is best suited for cold-weather operation. Winter grade fuel has a lower cloud point and a lower pour point.

**Cloud point** is the temperature at which wax begins to form in the fuel. This wax causes fuel filters to plug.

**Pour point** is the lowest temperature at which movement of the fuel is observed.

*NOTE: On average, winter grade diesel fuel has a lower Btu (heat content) rating. Using winter grade fuel may reduce power and fuel efficiency, but should not cause any other engine performance effects. Check the grade of fuel being used before troubleshooting for low-power complaints in cold-weather operation.*

### Air Intake Heater

An air intake heater is an available option for some engines to aid cold weather starting.

### Coolant Heater

An engine block heater (coolant heater) is an available option to aid cold weather starting.

## Seasonal Viscosity Oil and Proper Coolant Concentration

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes and a proper concentration of low silicate antifreeze as recommended. (See DIESEL ENGINE OIL and ENGINE COOLANT requirements in this section.)

### Diesel Fuel Cold Flow Additive

Use John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula), which contains anti-gel chemistry, or equivalent fuel conditioner to treat non-winter grade fuel (No. 2-D in North America) during the cold-weather season. This generally extends operability to about 10° C (18°F) below the fuel cloud point. For operability at even lower temperatures, use winter grade fuel.

**IMPORTANT: Treat fuel when outside temperature drops below 0°C (32°F). For best results, use with untreated fuel. Follow all recommended instructions on label.**

### Biodiesel

When operating with biodiesel blends, wax formation can occur at warmer temperatures. Begin using John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula) or equivalent at 5°C (41°F) to treat biodiesel fuels during the cold-weather season. Use B5 or lower blends at temperatures below 0°C (32°F). Use only winter grade petroleum diesel fuel at temperatures below -10°C (14°F).

### Winterfronts

Use of fabric, cardboard, or solid winterfronts is not recommended with any John Deere engine. Their use can result in excessive engine coolant, oil, and charge air temperatures. This can lead to reduced engine life, loss of power and poor fuel economy. Winterfronts may also put abnormal stress on fan and fan drive components potentially causing premature failures.

If winterfronts are used, they should never totally close off the grill frontal area. Approximately 25% area in the center of the grill should remain open at all times. At no time should the air blockage device be applied directly to the radiator core.

### Radiator Shutters

If equipped with a thermostatically controlled radiator shutter system, this system should be regulated in such a way that the shutters are completely open by the time the coolant reaches 93°C (200°F) to prevent excessive intake manifold temperatures. Manually controlled systems are not recommended.

If air-to-air aftercooling is used, the shutters must be completely open by the time the intake manifold air temperature reaches the maximum allowable temperature out of the charge air cooler.

For more information, see your John Deere dealer.

JC48530,00000AA-19-02OCT19

## Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.


Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to John Deere branded fluids or fluids that have been tested and/or approved for use in John Deere equipment.

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER-19-13JAN18

## Engine Oil

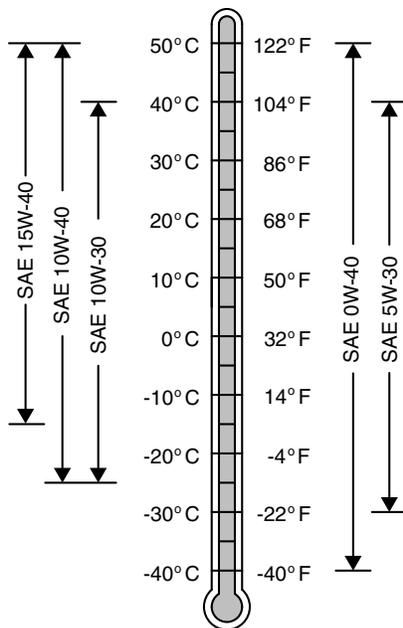

TS1691—UN—18JUL07

Oil Viscosities for Air Temperature Ranges

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following John Deere oils are preferred:

- John DeerePlus-50™ II

Plus-50 is a trademark of Deere & Company

- John DeereTorq-Gard™ Supreme

**Other oils may be used if John Deere oils are not available, provided they meet one of the following specifications:**

- API Service Classification CJ-4, or CK-4
- ACEA Specification E6 or E9
- JASO Specification DH-2

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

UP00731,1004800-19-12JAN17

## Diesel Engine Coolant

**Preferred coolants:**

The following pre-mix engine coolants are preferred:

- John Deere Cool-Gard™ II
- John Deere Cool-Gard™ II PG

Not all Cool-Gard™ II pre-mix products are available in all countries.

Use Cool-Gard™ II PG when a non-toxic coolant formulation is required.

**Additional Recommended Coolants**

The following engine coolant is also recommended:

- John Deere Cool-Gard™ II Concentrate in a 40—60% mixture of concentrate with quality water.

**IMPORTANT: Avoid damage! When mixing coolant concentrate with water, do not use less than 40% or greater than 60% concentration of coolant. Less than 40% gives inadequate additives for corrosion protection. Greater than 60% can result in coolant gelation and cooling system problems.**

**Other Coolants**

Other ethylene glycol or propylene glycol base coolants may be used if they meet one of the following specifications:

- Pre-mix coolant meeting ASTM D6210 requirements
- Coolant concentrates meeting ASTM D6210 requirements in a 40% to 60% mixture of concentrate with quality water
- Pre-mix coolant meeting ASTM D3306 requirements
- Coolant concentrates meeting ASTM D3306

Torq-Gard is a trademark of Deere & Company  
Cool-Gard is a trademark of Deere & Company

requirements in a 40% to 60% mixture of concentrate with quality water

If coolant meeting one of these specifications is unavailable, use a coolant concentrate or pre-mix coolant that has a minimum of the following chemical and physical properties:

- Is formulated with a quality nitrite-free additive package.
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion.

### Water Quality

Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended for mixing with ethylene glycol base engine coolant concentrate.

### Coolant Drain Intervals

Drain and flush the cooling system and refill with fresh coolant at the indicated interval, which varies with the coolant used.

When Cool-Gard™ II or Cool-Gard™ II PG is used, the drain interval is 6 years or 6000 operating hours.

If a coolant other than Cool-Gard™ II or Cool-Gard™ II PG is used, reduce the drain interval to 2 years or 2000 operating hours.

### IMPORTANT: Avoid Damage!

- **Do not use cooling system sealing additives or antifreeze that contains sealing additives.**
- **Do not mix ethylene glycol and propylene glycol base coolants.**
- **Do not use coolants that contain nitrites.**

UP00731.0000022-19-17JAN19

### Operating in Warm Temperature Climates

John Deere engines are designed to operate using recommended engine coolants.

Always use a recommended engine coolant, even when operating in geographical areas where freeze protection is not required.

### IMPORTANT: Water may be used as coolant *in emergency situations only.*

**Foaming, hot surface aluminum and iron corrosion, scaling, and cavitation occur when water is used as the coolant, even when coolant conditioners are added.**

**Drain cooling system and refill with recommended engine coolant as soon as possible.**

DX,COOL6-19-17FEB20

### Additional Information About Diesel Engine Coolants and John Deere COOL-GARD™ II Coolant Extender

Engine coolants are a combination of three chemical components: ethylene glycol (EG) or propylene glycol (PG) antifreeze, inhibiting coolant additives, and quality water.

### Coolant Specifications

John Deere COOL-GARD™ II Premix either EG or PG, are fully formulated coolants that contain all three components in their correct concentrations. **DO NOT** add an initial charge of John Deere COOL-GARD II Coolant Extender to COOL-GARD II Premix. **DO NOT** add any other supplemental coolant additive or water to COOL-GARD II Premix.

John Deere COOL-GARD II Concentrate contains both ethylene glycol and inhibiting coolant additives. Mix this product with quality water, but **DO NOT** add an initial charge of John Deere COOL-GARD II Coolant Extender or any other supplemental coolant additive.

### Replenish Coolant Additives

Some coolant additives will gradually deplete during engine operation. Periodic replenishment of inhibitors is required, even when John Deere COOL-GARD II Premix or COOL-GARD II Concentrate is used. Follow the recommendations in this manual for the use of John Deere COOL-GARD II Coolant Extender.

### Why use John Deere COOL-GARD II Coolant Extender?

Operating without proper coolant additives will result in increased corrosion, cylinder liner erosion and pitting, and other damage to the engine and cooling system. A simple mixture of ethylene glycol or propylene glycol and water will not give adequate protection.

John Deere COOL-GARD II Coolant Extender is a chemically matched additive system designed to fortify the proprietary additives used in John Deere COOL-GARD II Premix and COOL-GARD II Concentrate and to provide optimum protection for up to six years or 6000 hours of operation.

### Avoid Automotive-type Coolants

Never use automotive-type coolants (such as those meeting ASTM D3306). These coolants do not contain the correct additives to protect heavy-duty diesel engines. Do not treat an automotive engine coolant with

*COOL-GARD is a trademark of Deere & Company*

supplemental coolant additives because the high concentration of additives can result in additive fallout.

### Water Quality

Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate. All water used in the cooling system should meet the following minimum specifications for quality:

Chlorides	<40 mg/L
Sulfates	<100 mg/L
Total dissolved solids	<340 mg/L
Total hardness	<170 mg/L
pH	5.5 to 9.0

### Freeze Protection

The relative concentrations of glycol and water in the engine coolant determine its freeze protection limit.

Ethylene Glycol	Freeze Protection Limit
40%	-24°C (-12°F)
50%	-37°C (-34°F)
60%	-52°C (-62°F)
Propylene Glycol	Freeze Protection Limit
40%	-21°C (-6°F)
50%	-33°C (-27°F)
60%	-49°C (-56°F)

DO NOT use a coolant-water mixture greater than 60% ethylene glycol or 60% propylene glycol.

DX,COOL17-19-20APR11

### Testing Diesel Engine Coolant

Maintaining adequate concentrations of glycol and inhibiting additives in the coolant is critical to protect the engine and cooling system against freezing, corrosion, and cylinder liner erosion and pitting.

Test the coolant solution at intervals of 12 months or less and whenever excessive coolant is lost through leaks or overheating.

### Coolant Test Strips

Coolant test strips are available from your John Deere dealer. These test strips provide a simple, effective method to check the freeze point and additive levels of your engine coolant.

### When Using John Deere COOL-GARD II

John Deere COOL-GARD II Premix™, COOL-GARD II PG Premix and COOL-GARD II Concentrate are maintenance free coolants for up to six years or 6000

hours of operation, provided that the cooling system is topped off using only John Deere COOL-GARD II Premix or COOL-GARD II PG premix. Test the coolant condition annually with coolant test strips designed for use with John Deere COOL-GARD II coolants. If the test strip chart indicates that additive is required, add John Deere COOL-GARD II Coolant Extender as directed.

Add only the recommended concentration of John Deere COOL-GARD II Coolant Extender. DO NOT add more than the recommended amount.

### When Using Nitrite-Containing Coolants

Compare the test strip results to the supplemental coolant additive (SCA) chart to determine the amount of inhibiting additives in your coolant and whether more John Deere Liquid Coolant Conditioner should be added.

Add only the recommended concentration of John Deere Liquid Coolant Conditioner. DO NOT add more than the recommended amount.

### Coolant Analysis


For a more thorough evaluation of your coolant, perform a coolant analysis. The coolant analysis can provide critical data such as freezing point, antifreeze level, pH, alkalinity, nitrite content (cavitation control additive), molybdate content (rust inhibitor additive), silicate content, corrosion metals, and visual assessment.

Contact your John Deere dealer for more information on coolant analysis.

DX,COOL9-19-11APR11

### Transmission and Hydraulic Oil

**IMPORTANT: Avoid damage! Transaxle is filled with John Deere HY-Gard™ (J20D) transmission oil at the factory. DO NOT mix oils.**

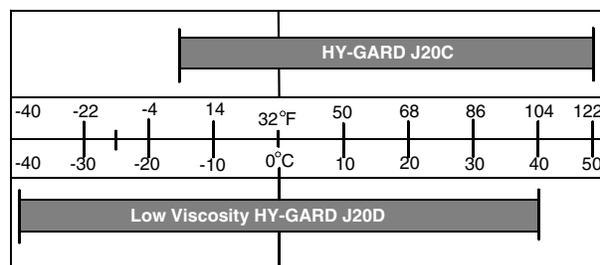

LVAL38329—UN—21AUG12

Do not use type “F” automatic transmission fluid.

Use Low Viscosity Hy-Gard™ (J20D) transmission oil.

John Deere Low Viscosity Hy-Gard transmission oil is specially formulated for operation below -18°C (0)°F to provide maximum protection for the hydraulic system.

COOL-GARD is a trademark of Deere & Company


Use oil viscosity based on the expected air temperature range during the period between oil changes.

**IMPORTANT: Avoid damage! Use recommended oil only. Do not use engine oil or “Type F” automatic transmission fluid.**

Other oils may be used if they meet John Deere standard JDM J20D or J20C.

KN52281,1003F22-19-22AUG12

## Front Axle and MFWD Oil

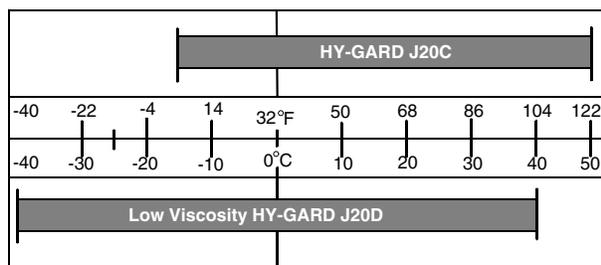

LVAL38329—UN—21AUG12

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following oils are preferred:

- John Deere Hy-Gard™
- John Deere Low Viscosity Hy-Gard™

Other oils may be used if they meet one of the following:

- John Deere Standard JDM J20C
- John Deere Standard JDM J20D

UP00731,000016D-19-11SEP15

## Grease

**IMPORTANT: Avoid Damage! Use recommended John Deere greases to avoid component failure and premature wear.**

The recommended John Deere greases are effective within an average air temperature range of -29 to 135 degrees C (-20 to 275 degrees F).

If operating outside that temperature range, contact your Servicing dealer for a special-use grease.

The following greases are preferred:

- John Deere Multi-Purpose SD Polyurea Grease

- John Deere Multi-Purpose HD Lithium Complex Grease

If not using any of the preferred greases, be sure to use a general all-purpose grease with an NLGI grade No.2 rating.

Wet or high speed conditions may require use of a special-use grease. Contact your Servicing dealer for information.

The following lubricant is preferred:

- SUPER LUBE® lubricant.<sup>1</sup>

JZ81662,0000FD4-19-18MAR13

# Maintenance—As Required

---

## Service—As Required

- Replace alternator belt.
- Replace air filter elements.
- Replace light bulbs.
- Replace fuses.
- Clean and replace battery.
- Replace radiator hoses and clamps.
- Check engine coolant level. Refill with correct coolant and conditioner as required.
- Check and clean radiator fins.
- Check tire air pressure.
- Check primary fuel filter. Drain water and sediment from fuel sediment bowl, and service water separator.
- Check and adjust front wheel toe-in.
- Check and clean front grille and side screens.
- Check and clean radiator cooling screen (If equipped).
- Clean debris from engine compartment.
- Monitor engine exhaust filter and perform cleaning as required.

UP00731,00001AE-19-13JUL16

---

# Controls and Instruments Maintenance

---

## **Controls and Instruments Maintenance**

For controls and instruments maintenance, see specific component in maintenance section.

UP00731.0000224-19-27JUN16

---

# Engine Maintenance

## Required Emission-Related Information

### Service Provider

A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-12JUN15

## Emissions Performance and Tampering

### Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

### Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM-19-12JAN18

## Daily Startup Procedure

- Test safety systems. Perform safety interlock system checkout procedure.
- Check engine oil level.
- Check / drain water separator.
- Check transmission fluid level.
- Check coolant level.
- Clean air intake screen and radiator screen.
- Check air filter elements and dust valve.
- Check wheel bolt torques.
- Check tire pressure.
- Check fuel level.
- Remove grass and debris from machine.
- Check area below machine for leaks.

RD47322,0000AEA-19-15APR16

## Check Engine Oil Level

**IMPORTANT: Avoid damage! Failure to check the oil level regularly could lead to serious engine problems if oil level is low:**

- Check oil level before operating.


- Check oil level when the engine is cold and not running.
- Keep level between the Full and the Add marks.
- Shut off engine before adding oil.

*NOTE: Check engine oil when engine is cold. If engine is warm, allow to cool for at least 5 minutes before checking oil.*

*Check engine oil with machine parked on a level surface.*

1. Park the machine safely.


**IMPORTANT: Avoid damage! Dirt and contamination can enter engine when checking oil level. Clean area around dipstick before loosening or removing.**

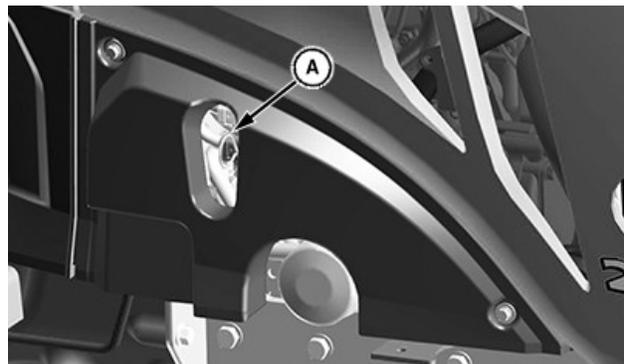

LV25487—UN—01JUN16

A—Dipstick

2. Remove dipstick (A), located at the right side of the engine. Wipe with a clean cloth.
3. Install dipstick.
4. Remove dipstick.

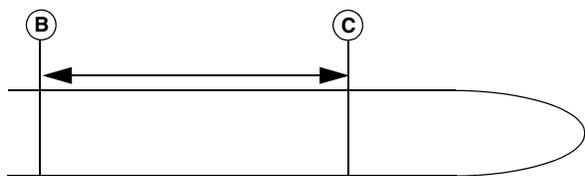


LVAL38308—UN—21AUG12

**B—Oil Level**  
**C—Oil Level**

5. Check oil level on dipstick. Oil level should be between levels (B) and (C) on dipstick.

6. If oil level is low:

- a. Raise hood.
- b. Remove right side panel.

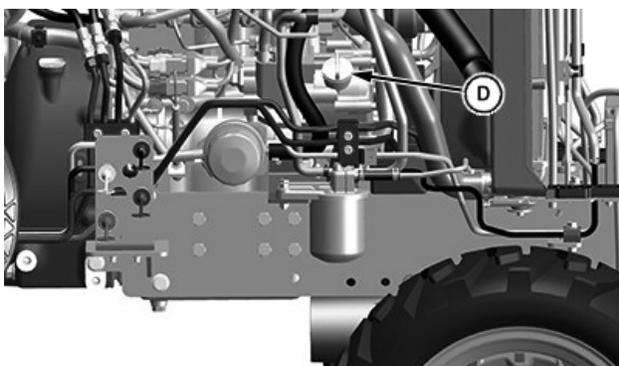


LV25489—UN—02JUN16

**D—Oil Fill Cap**

- c. Remove oil fill cap (D).
  - d. Add recommended engine oil until level is within operating range on dipstick. Do not overfill.
  - e. Install dipstick.
7. If oil is above the specified level on the dipstick, drain to the proper level.
8. Install right side panel.
9. Lower hood.

GS25068,0003E18-19-01FEB18

## Change Engine Oil and Filter

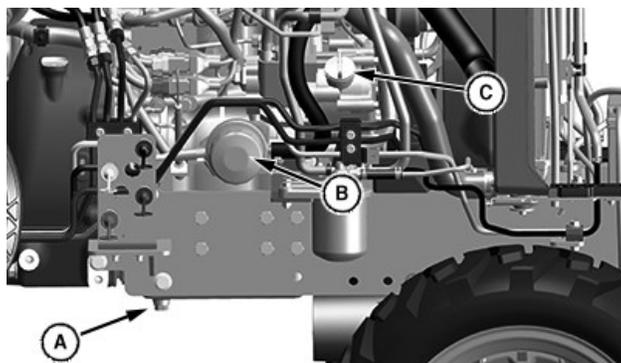

LV25488—UN—30JUN16

**A—Oil Drain Plug**  
**B—Oil Filter**  
**C—Oil Fill Cap**

1. Run engine to warm the oil.
2. Park machine safely.
3. Place drain pan under oil drain plug (A) located on under side of engine.
4. Remove drain plug.
5. Wipe dirt from around oil filter (B).
6. Turn filter counterclockwise to remove.
7. Put a light coat of clean engine oil on gasket of new filter.
8. Install replacement oil filter by turning filter clockwise until gasket contacts filter base. Tighten additional one half turn.
9. Install drain plug. Do not overtighten.
10. Remove oil fill cap (C).
11. Add engine oil.

### Specification

Engine Crankcase—Oil—	
Capacity. . . . .	4.3 L (4.5 qt)

12. Install oil fill cap.
13. Start and run engine at idle to check for leaks.
14. Stop engine. Fix any leaks before operating.
15. Check engine oil level. Add oil if necessary.


GS25068,0003E19-19-01FEB18

## Clean Dust Unloading Valve

**IMPORTANT: Avoid damage! Ensure air cleaner element and rubber dust unloading valve are installed before operating the engine.**

1. Park the machine safely.

2. Allow engine to cool.
3. Access the engine compartment.

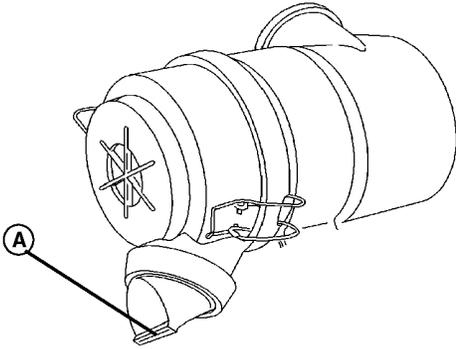

A—Dust Unloading Valve

LVAL38312—UN—21AUG12

4. Squeeze dust unloading valve (A) to clean. Remove and replace if damaged.

KN52281,1003F0E-19-12JUN17


## Service the Alternator Belt

**CAUTION:** Avoid injury! Rotating parts can catch fingers, loose clothing, or long hair. Wait for engine and all moving parts to stop before leaving operator station to adjust or service machine.

*NOTE:* This procedure requires a John Deere belt tension gauge, or equivalent.

### Check Belt Tension

1. Park machine safely. Allow engine to cool.
2. Raise hood.
3. Remove left side panel.

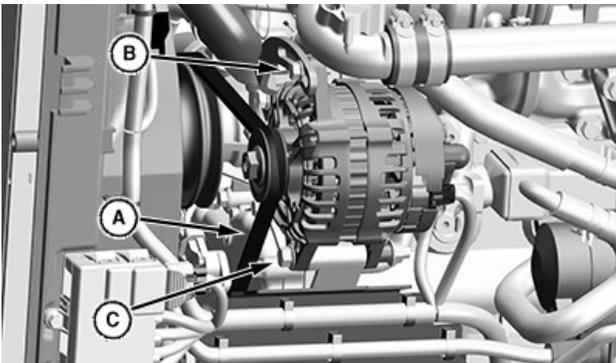

A—Thumb Position  
B—Adjusting Bolt  
C—Pivot Bolt

LV25490—UN—30JUN16

4. Check tension by using the belt tension gauge to apply pressure to the belt (A) halfway between the pulleys.

5. Adjust belt tension if not within specifications.

### Specification

Belt Tension—Force . . . . .	334 N (75 lb)
Belt Tension—Inward Pressure . . . . .	9 mm (3/8 in.)

### Adjust Belt Tension

1. Loosen adjusting bolt (B) and pivot bolt (C).
2. Apply outward pressure to alternator housing until tension is correct.
3. Tighten bolts (B) and (C).
4. Check belt tension.
5. Install left side panel.
6. Lower hood.

### Replace Belt

*NOTE:* Replace alternator belt if excessive wear, damage, or stretching is detected.

1. Park machine safely. Allow engine to cool.
2. Raise hood.
3. Remove left side panel.
4. Loosen adjusting bolt (B) and pivot bolt (C).
5. Apply inward pressure to alternator housing.
6. Remove belt from alternator pulley, fan pulley, and crankshaft pulley.
7. Route belt over fan and remove.
8. Install new belt over fan and onto pulleys.
9. Apply outward pressure to alternator housing until tension is correct.
10. Tighten bolts (B) and (C).
11. Check belt tension. Adjust as necessary.
12. Install left side panel.
13. Lower hood.

GS25068,0003E1A-19-02FEB18

## Clean Front and Side Grille Screens

**IMPORTANT:** Avoid damage! Grille and side screens must be clean to prevent engine from overheating and to allow adequate air intake.

1. Check front and side grille screens for dirt, grass clippings and debris.
2. Raise hood and clean screens with a brush or cloth.

3. Lower hood.

---

GS25068,0003E1B-19-01FEB18

### **Clean Engine Compartment**

Keep all the dirt and debris cleaned from inside of the engine compartment.

1. Park machine safely.
2. Clean all the dirt and debris from inside of the engine compartment.

---

UP00731,00002A1-19-16FEB17

# Air, Fuel, Coolant and Exhaust Maintenance


## Service Air Filter Elements

**CAUTION:** Avoid injury! Touching hot surfaces can burn skin. The engine, components, and fluids will be hot if the engine has been running. Allow the engine to cool before servicing or working near the engine and components.


**IMPORTANT:** Avoid damage! Dirt and debris can enter the engine through a damaged filter element:

### Service Primary Air Filter Element:

*NOTE: Procedure shown for 2038R, it is similar for other model.*

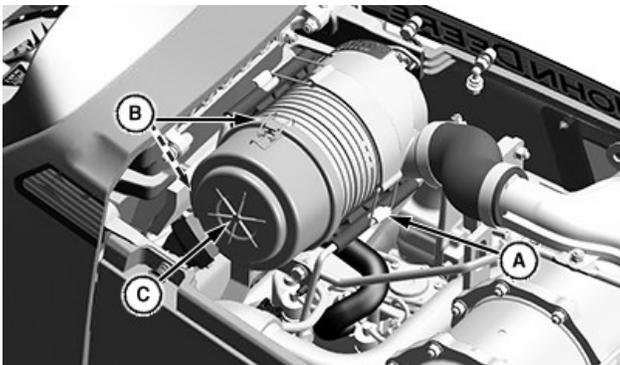

LV25494—UN—02JUN16

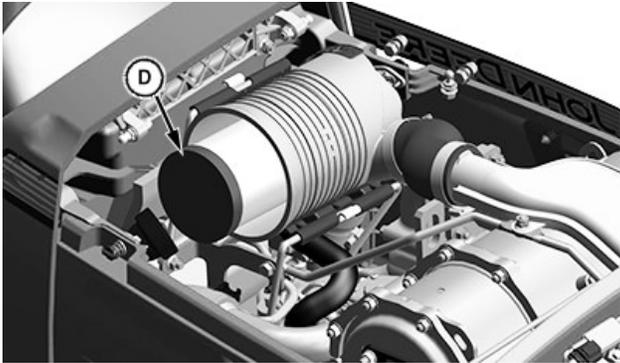

LV25495—UN—02JUN16

A—Hold Down Strap  
B—Latches  
C—Air Filter Canister Cover  
D—Primary Element

1. Park machine safely.
2. Allow engine to cool.
3. Raise hood.
4. Remove hold down strap (A).
5. Tilt canister up and release latches (B) and remove air filter canister cover (C).
6. Remove and discard primary element (D). Clean out any dirt in canister, taking care not to damage secondary filter element. Replace with a new primary filter element.


7. Install air filter canister cover with rubber dust unloading valve pointing downward.
8. Secure latches.
9. Lower hood.

### Service Secondary Air Filter Element:

*NOTE: Procedure shown for 2038R, it is similar for other model.*

**IMPORTANT:** Avoid damage! Secondary element does not need routine replacement. Visually inspect it without removing from canister. Do not attempt to clean secondary element. If secondary element is replaced, install new primary and secondary element immediately to prevent dust from entering air intake system.

1. Remove air filter canister cover.
2. Remove and discard primary air filter element.

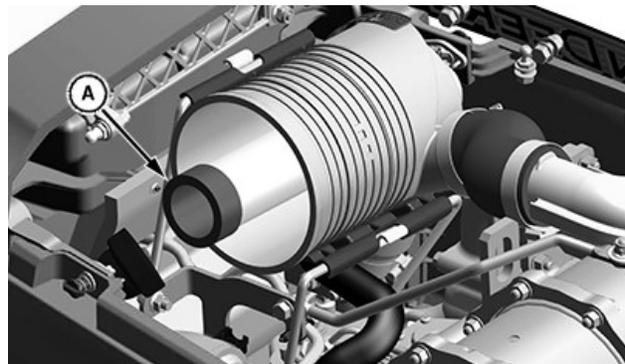

LV25496—UN—02JUN16

A—Secondary Element

3. Remove and discard secondary air filter element (A). Replace with a new secondary air filter element.
4. Install new primary air filter element.
5. Install air filter canister cover.
6. Position canister back in place and install strap.
7. Lower hood.

ycwrhfr,1652685720677-19-16MAY22

## Check Air Filter Hose


*NOTE: Inspect air intake system hoses and connections each time the air filter is changed, or at a minimum yearly.*

*NOTE: Procedure shown for 2038R, it is similar for other model.*

1. Park machine safely.

2. Raise hood.

**NOTE:** Visually inspect hose for cracks and wear. Squeeze hose to check for deterioration. Hose should not be hard and brittle, nor soft or swollen.

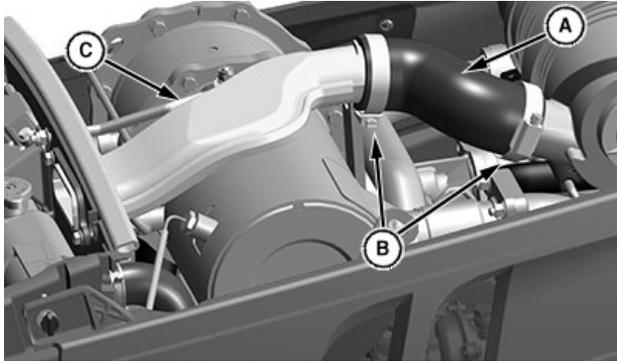

LV25497—UN—03JUN16

- A—Hose
- B—Hose clamps
- C—Air Intake Duct

3. Check air intake hose (A).
4. Tighten hose clamps (B) if necessary.
5. Check for wear on air intake duct (C).
6. Lower hood.

ycwrhfr,1652685736560-19-16MAY22

## Exhaust Filter Maintenance and Service

**IMPORTANT:** Performing recommended exhaust filter cleaning will help to reduce ash build up and extend the life. Refer to the “Operating” section of the OM for exhaust filter cleaning directions.

See your John Deere dealer for exhaust filter maintenance. Ensure that exhaust filter cleaning has been performed first as this may resolve problems. If exhaust filter cleaning has been performed and the service exhaust filter indicator light (Stop and exhaust filter) on the dash turns on after a short period, exhaust filter service may be required.

The Exhaust Filter includes the Diesel Oxidation Catalyst (DOC) and Diesel Particulate Filter (DPF). The DPF retains residual ash, which is the noncombustible result of additives used in crankcase lubrication oils and the fuel. The exhaust filter provides many hours of maintenance free operation. At some point the exhaust filter will require replacement to remove the accumulated ash.

The exact number of hours of operation before replacement or service is required will vary depending upon the engine’s power category, duty cycle and operating conditions, engine oil ash content, and fuel

quality. Adhering to John Deere’s recommended oil and fuel specifications will maximize the hours of operation before service is required.

During normal equipment operation the DPF service interval will depend on the rate at which ash accumulates in it. An ECU will provide an alert when ash cleaning is required. This does not occur until at least 3,000 hours and may be longer depending on usage. As ash levels rise in the DPF, the capacity for soot storage is reduced and the back pressure of the exhaust system will rise more frequently. The exhaust filter indicator will indicate when cleaning or service is needed.


The removal and disposal of DPF ash must be done by a professional, see your John Deere dealer. Do not attempt to remove ash by using water or other chemicals. Removing ash by these methods may damage the material securing the DPF in its canister, resulting in the loosening of the DPF element in the canister and subjecting it to damage from vibration.

Failure to follow the approved ash removal methods may damage the exhaust filter resulting in potential denial of the Exhaust Filter emissions warranty. Take your machine to an authorized John Deere dealer for service.

UP00731,0000177-19-17OCT19

## Automatic (AUTO) Exhaust Filter Cleaning

**CAUTION:** To prevent fires, be sure to routinely clear any combustible materials (crop debris, animal nests, etc.) from the area of the engine and exhaust filter. Exhaust filter cleaning uses extremely high temperature.

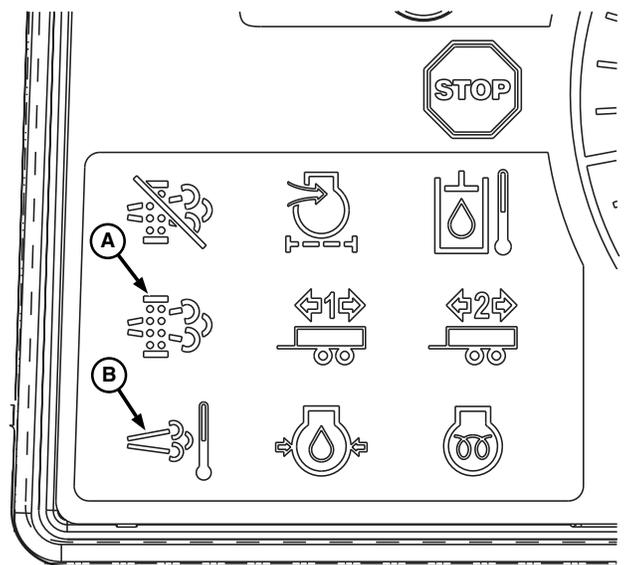

LV17596—UN—01MAY13

- A—Exhaust Filter Indicator
- B—High Exhaust Temperature Indicator

Automatic exhaust filter cleaning is started when soot in

the exhaust filter reaches a certain level. This occurs less frequently if the engine is operated for long periods under conditions where passive exhaust filter cleaning takes place. Automatic exhaust filter cleaning is initiated and performed without any intervention on the part of the operator.

The exhaust filter indicator (A) will illuminate if the system determines that soot buildup in the exhaust filter requires cleaning. The light will remain on until an auto exhaust cleaning process is performed

An exhaust filter cleaning will start automatically unless the disabled switch has been activated. The high exhaust temperature indicator (B) will illuminate and stay on during the cleaning process.

Do not disable automatic exhaust filter cleaning unless it is absolutely necessary.

If there is not sufficient engine speed during an automatic exhaust filter cleaning, the information display will show "Increase Engine Speed". Operator should increase engine speed, so the automatic exhaust filter cleaning can be performed.

UP00731,00001FC-19-21DEC17




LV26014—UN—24AUG16

Exhaust Filter Cleaning Disable Switch

## Disabled Exhaust Filter Cleaning

**IMPORTANT: Operate vehicle with the exhaust filter cleaning mode switch in the AUTO position.**

If your vehicle must be used in a situation not suited for higher temperatures created during exhaust filter cleaning, the system can be temporarily disabled. Be sure to deactivate the disabled exhaust filter cleaning mode as soon as possible to avoid soot buildup in the exhaust filter.

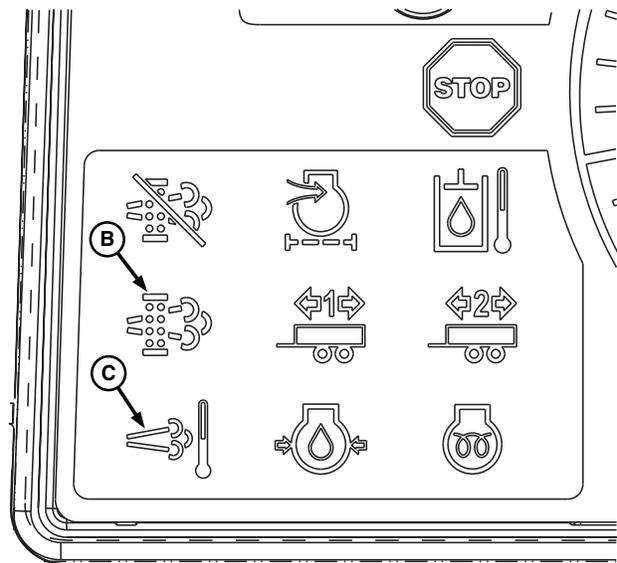

LV17598—UN—01MAY13

- A—Exhaust Filter Cleaning Disable Switch
- B—Exhaust Filter Cleaning Indicator
- C—High Exhaust Temperature Indicator

Activate exhaust filter cleaning disable switch (A) to disable exhaust filter cleaning mode. The LED will illuminate indicating it is disabled. To enable exhaust filter cleaning, select exhaust filter cleaning disable switch (A). The LED will turn off indicating it is enabled

While in disabled mode, if the system determines that soot buildup in the exhaust filter requires cleaning, Exhaust Filter Indicator - Restriction (B) comes on. Press exhaust filter cleaning disable switch (A) to return

to Automatic (AUTO) mode. High Exhaust Temperature Indicator (C) remains illuminated during the exhaust filter cleaning.

Do not disable automatic exhaust filter cleaning unless it is absolutely necessary. If disabled mode is used frequently, the system will eventually activate a parked exhaust filter cleaning. Meaning that the engine performance is reduced and will not return to normal until a park exhaust filter cleaning is performed.

WS68074,00016B5-19-24AUG16

**No other machine functions can be used while exhaust filter cleaning is taking place with the machine parked. Excluded from this are functions that are required for an emergency shutdown of the machine.**

**Make sure the low fuel indicator is not displayed and there is at least 1/8 of a tank of fuel before starting regeneration.**


**Only stop engine if absolutely necessary due to heat build up in the engine compartment.**

## Parked Exhaust Filter Cleaning

**IMPORTANT: If operator disregards indicators and continues to operate machine without allowing an automatic cleaning, engine performance is reduced. A parked exhaust filter cleaning procedure must be performed.**



H94831—UN—13OCT09  
Service Alert Indicator

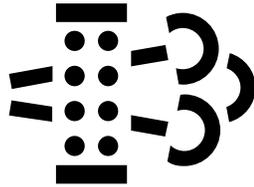

H94828—UN—13OCT09  
Exhaust Filter Cleaning Indicator

The following occurs when exhaust filter becomes restricted:

- Service alert and exhaust filter cleaning indicators (on dash) are illuminated.
- Engine power is reduced.
- Information display will show “Parked Regen Required”

At this time, a parked exhaust filter cleaning is required.


Before a parked exhaust filter cleaning can be completed, the following criteria must be met:

- Set engine rpm at low idle.
- Coolant temperature **must** be above 60 deg°C (140° F).
- Transmission **must** be in neutral.
- Zero ground speed commanded.
- Park brake **must** be engaged.
- PTO **must** be turned off.

**IMPORTANT: Select a suitable space to park the machine and lower all implements to the ground.**



LV26015—UN—24AUG16

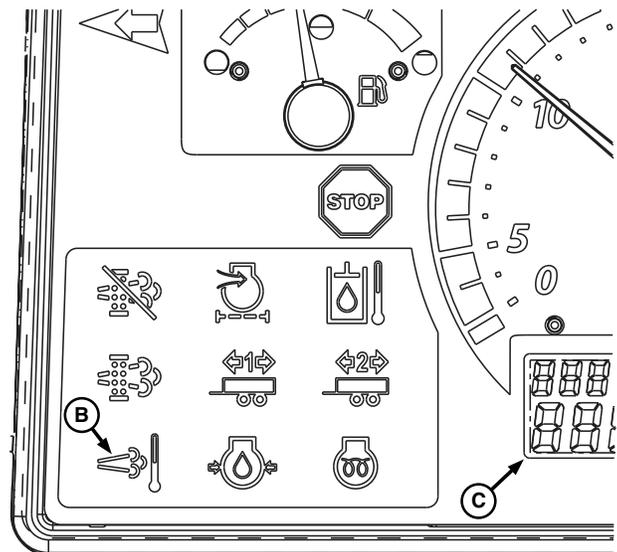

LV17600—UN—01MAY13

A—Parked Cleaning Position



- Avoid unnecessary idling.
- Do not interrupt cleaning process unless absolutely necessary.
- If possible, do not shut off the engine while the indicator light for exhaust filter cleaning is on.
- Take note of information displayed for the operator, and act accordingly.


WS68074,00016B7-19-21DEC17

## Check and Drain Water Separator

**⚠ CAUTION: Avoid injury! Fuel vapors are explosive and flammable:**

- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Shut off engine before servicing.
- Cool engine before servicing.
- Work in a well-ventilated area.
- Clean up spilled fuel immediately.

1. Park machine safely. Allow engine to cool.

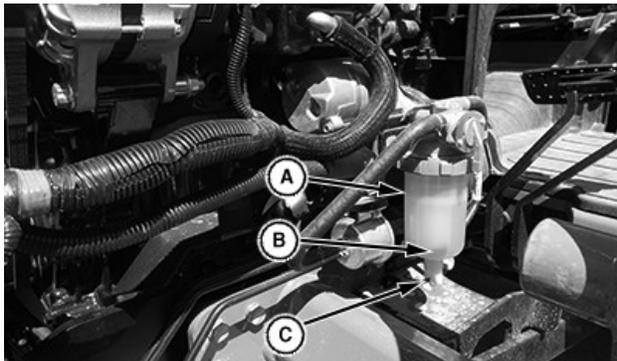

LV25493—UN—02JUN16

Covers removed for clarity

A—Sediment Bowl  
B—Indicator Ring  
C—Drain Cock


2. Check sediment bowl (A). If the orange indicator ring (B) is floating, water is present.
  - a. Place drain pan under sediment bowl.
  - b. Turn drain cock (C) to open position.
  - c. Drain water until the orange indicator ring re-seats back on the bottom of bowl.
  - d. Turn drain cock to closed position.

GS25068,0003D9A-19-23JAN18

## Clean Water Separator and Filter Screen

1. Move the fuel shutoff valve to closed position.

2. Place drain pan under sediment bowl.

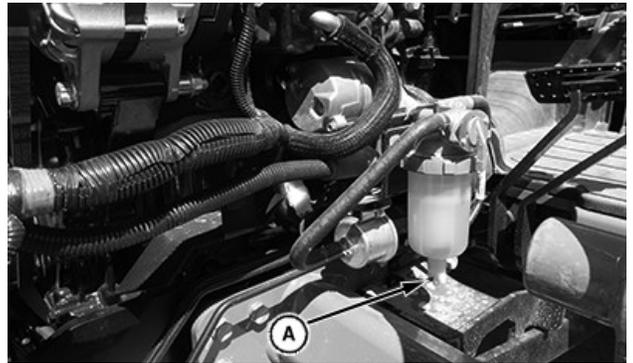

LV25682—UN—30JUN16

A—Drain Cock

3. Turn drain cock (A) to open position.
4. Wipe dirt from around sediment bowl.
5. Turn sediment bowl counterclockwise to remove.
6. Clean the filter screen and bowl.
7. Install sediment bowl.
8. Open fuel shutoff valve.

*NOTE: Fuel system is self bleeding.*


9. Turn key to the ON position for 10—15 seconds before attempting to start, electric pump purges air from water separator.

GS25068,0003D9B-19-23JAN18

## Replace Fuel Filters

- Park machine safely. Allow engine to cool.
- Close fuel shutoff valve.

### Replacing In-line Pre-Fuel Filter

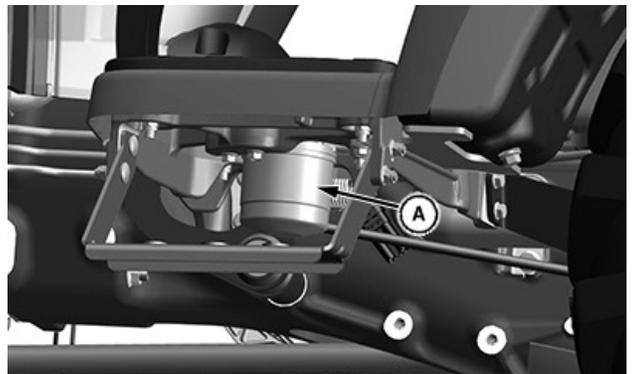


LV25808—UN—13JUL16

A—Fuel Filter

1. Position drain pan under fuel filter (A).
2. Wipe dirt from around filter.
3. Turn filter counterclockwise to remove.

4. Apply fuel to surface of new filter gasket.
5. Install replacement filter by turning filter clockwise until gasket contacts filter base. Tighten an additional 1/2 turn.
6. Start and run engine at idle to check for leaks.

### Replacing Final Fuel Filter

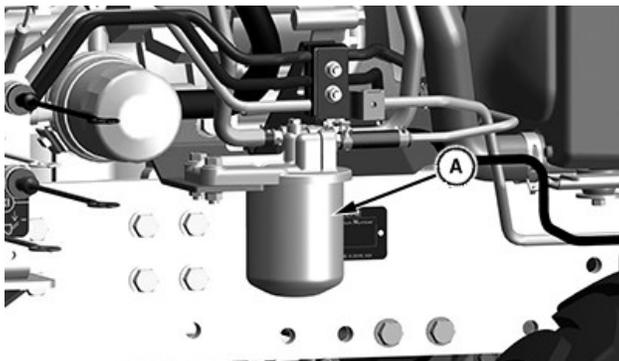

LV25491—UN—02JUN16

#### A—Fuel Filter

1. Position drain pan under fuel filter (A).
2. Wipe dirt from around filter.
3. Turn filter counterclockwise to remove and discard.
4. Apply fuel to surface of new filter gasket.
5. Install new filter to filter head. Tighten to one complete turn after filter contacts head.
6. Open fuel shutoff valve.

GS25068,0003D9C-19-23JAN18

### Fuel Injection Pump

**IMPORTANT: Avoid damage! Do not clean a warm or hot fuel injection pump with steam or water. Clean with compressed air if pump is not cooled.**

*NOTE: The fuel injection pump is calibrated by the engine manufacturer and should not require any adjustments.*

If engine is hard to start, lacks power, or runs rough, see Troubleshooting Section of this manual.

After performing the check in the troubleshooting section and your engine is still not performing correctly, contact your John Deere dealer.

KN52281,1003F19-19-22AUG12

### Fuel Injection Nozzles

**IMPORTANT: Avoid damage! Do not service or remove fuel injection nozzles. Service life of injection nozzles may be shortened by overheating, improper operation, poor fuel quality, or excessive idling.**

If injection nozzles are not working correctly or are dirty, engine will run poorly. See your John Deere dealer for service.

KN52281,1003F1A-19-22AUG12


### Drain and Flush Fuel Tank

See your John Deere dealer for draining and flushing the fuel tank.

UP00731,00002A4-19-29NOV16

### Check Coolant Level

1. Park machine safely.
2. Raise the hood.

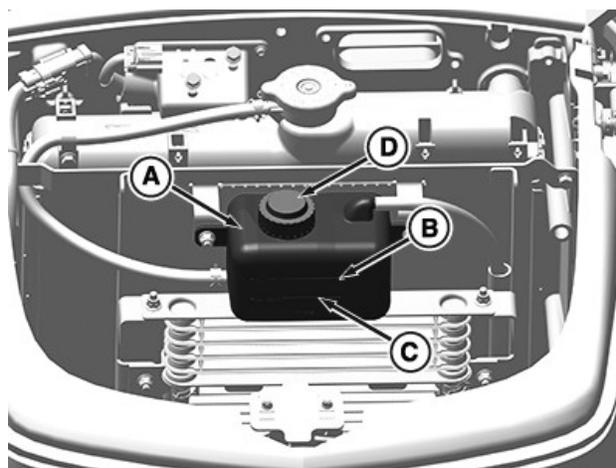

LVP15651—UN—16MAY22

- A—Recovery Tank
- B—FULL HOT Level
- C—FULL COLD Level
- D—Recovery Tank Cap

3. Check recovery tank (A) coolant level:
  - If engine is at operating temperature, coolant level should be at the FULL HOT level (B).
  - If engine is cold, coolant level should be at the FULL COLD level (C) on the recovery tank.
4. Remove recovery tank cap (D) to add coolant.

**IMPORTANT: Avoid damage! Using incorrect coolant mixture can damage the radiator:**

- Do not operate engine with plain water.

- Do not exceed a 50% mixture of coolant and water.
- Aluminum engine blocks and radiators require approved ethylene-glycol based antifreeze.

*NOTE: John Deere COOL-GARD™ coolant is recommended when adding new coolant to the cooling system.*

*Follow the directions on the container for correct mixture ratio.*

5. Add recommended coolant if needed.
6. Install recovery tank cap (D).
7. Lower the hood.


YCWRHFR,000004C-19-21JUN22

## Drain and Flush Cooling System

**⚠ CAUTION:** Explosive release of fluids from pressurized cooling system can cause serious burns.

**Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.**


1. Park machine safely.
2. Allow engine to cool.
3. Raise hood.

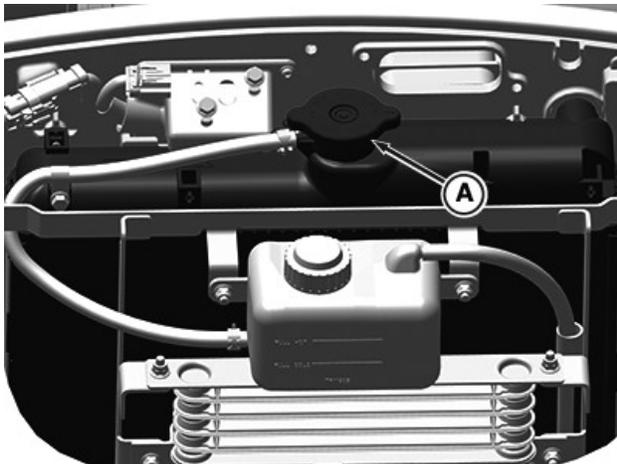

LVP15652—UN—16MAY22

**A—Radiator Cap**


4. Slowly open radiator cap (A) to the first stop to release all pressure.
5. Close radiator cap tightly.

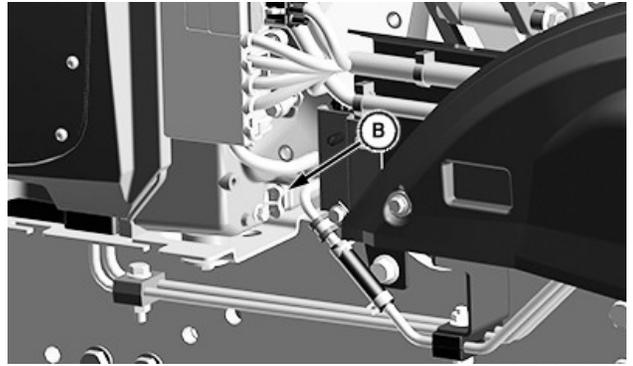

LV25538—UN—15JUN16

**B—Radiator Drain Plug**

6. Position drain pan under radiator drain plug (B) and drain coolant from the system.

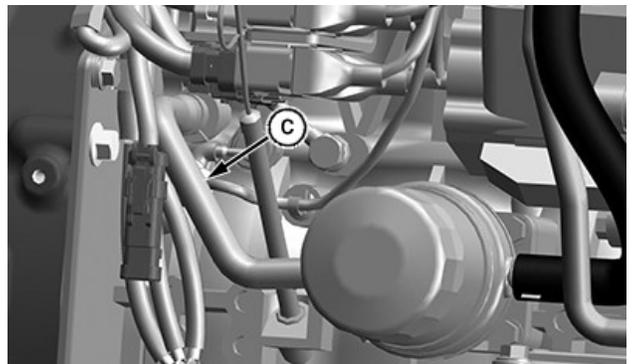

LV25539—UN—03JUN16

**C—Engine Oil Cooler Hose**

7. For engines with engine oil cooler: Position drain pan under hose, remove hose (C) and allow all coolant to drain.
8. When coolant drains from the recovery tank, remove the radiator cap.
9. Close drain plug and install radiator hose, if removed.
10. Fill the cooling system with clean water. Run engine until water passes through the thermostat to stir up possible rust or sediment.
11. Stop engine immediately and drain water from system before rust and sediment settles.
12. Fill cooling system with clean water and John Deere Cooling System Cleaner, or John Deere Cooling System Quick Flush or an equivalent. Follow directions on the container.
13. After cleaning the system, drain cleaner and fill the system with clean water to flush the system.
14. Start and run engine until water passes through the thermostat.
15. Stop engine, and drain flushing water from the system.

*COOL-GARD is a trademark of Deere & Company*

**IMPORTANT: Avoid damage! Using incorrect coolant mixture can damage the radiator:**

- Do not operate engine with plain water.
- Do not exceed a 50% mixture of coolant and water.
- Aluminum engine blocks and radiators require approved ethylene-glycol based antifreeze.

*NOTE: John Deere COOL-GARD™ coolant is recommended when adding new coolant to the cooling system.*

*Follow the directions on the container for correct mixture ratio.*

16. Close all drain orifices and fill cooling system to specification.

YCWRHFR,000004D-19-16MAY22

## Fill Cooling System

**IMPORTANT: Avoid damage! Using incorrect coolant mixture can damage the radiator:**

- Do not operate engine with plain water.
- Do not exceed a 50% mixture of coolant and water.
- Aluminum engine blocks and radiators require approved ethylene-glycol based antifreeze.

*NOTE: John Deere COOL-GARD™ coolant is recommended when adding new coolant to the cooling system.*

*Follow the directions on the container for correct mixture ratio.*

1. Allow radiator to cool.
2. Fill cooling system.
3. Install and tighten radiator cap.
4. Run engine until it reaches operating temperature.
5. Stop engine.
6. Check recovery tank coolant level and add coolant if necessary
7. Lower hood.


GS25068,0003D97-19-23JAN18

## Check Radiator Hoses and Clamps

1. Park machine safely.

2. Raise hood.
3. Remove right and left-hand side panels.


*NOTE: Visually inspect hoses for cracks and wear. Squeeze hoses to check for deterioration. Hoses should not be hard and brittle, nor soft or swollen.*

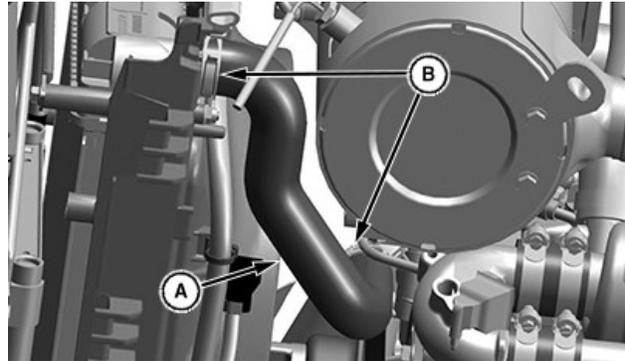

LV25541—UN—03JUN16

A—Upper Radiator Hose  
B—Hose Clamps

4. Check upper radiator hose (A) for damage or cracking. Replace if necessary.
5. Check hose clamps (B) as needed.

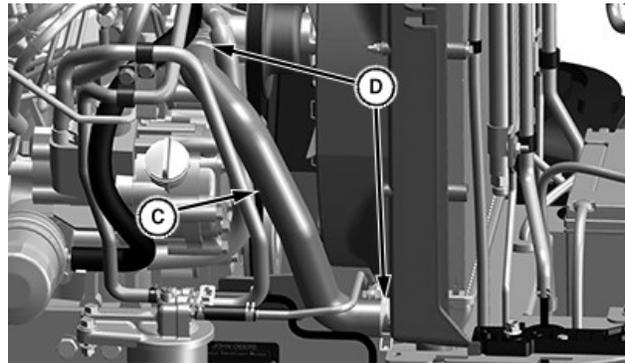

LV25540—UN—03JUN16

C—Lower Radiator Hose  
D—Hose Clamps

6. Check lower radiator hose (C) for damage or cracking. Replace if necessary.
7. Check hose clamps (D) as needed.
8. Install right and left-hand side panels.
9. Lower hood.

GS25068,0003D9F-19-23JAN18

## Clean Radiator, Fuel, and Transmission Cooling Fins

**⚠ CAUTION: Avoid injury! Compressed air can cause debris to fly a long distance.**

- Clear work area of bystanders.

*COOL-GARD is a trademark of Deere & Company*


- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to 210 kPa (2.1 bar) (30 psi).

**IMPORTANT: Avoid damage! Reduced air intake can cause overheating. Keep radiator cooling fins clean.**

Do not use pressure washers to clean radiator cooling fins. The force produced by pressure washers can damage the radiator and cooling fins.

Spray compressed air straight into radiator. Do not spray radiator on an angle or cooling fins can be bent.

1. Park machine safely. Allow engine to cool.
2. Raise hood.

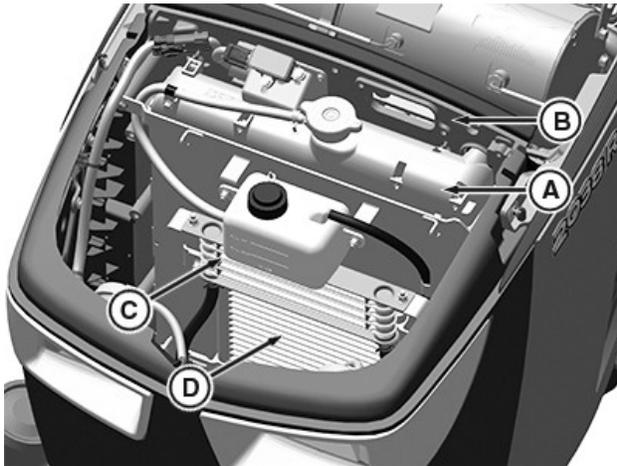

LVP12023—UN—14JUN21

A—Radiator  
B—Fan Shroud  
C—Fuel Cooler  
D—Transmission Oil Cooler

3. Using compressed air or water, remove all dirt and debris from fins at front and rear of the following:
  - Radiator (A), including fan shroud (B).
  - Fuel cooler (C).
  - Transmission oil cooler (D).
4. Lower hood.

DN39857,00003B0-19-14JUN21

---

# Electrical and Lighting Maintenance

## Prevent Battery Explosions



TS204—UN—15APR13

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.


Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

DX,SPARKS-19-03MAR93

## Remove and Install Battery

### Remove:

1. Park machine safely.
2. Raise the hood.
3. Remove side panels.
4. Disconnect headlight harness at fan shroud.
- 5.

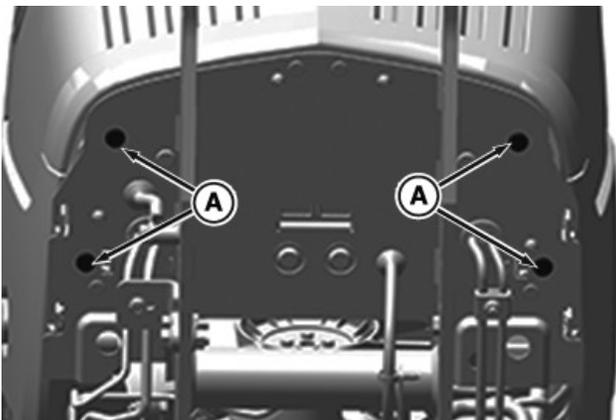


LVP15653—UN—16MAY22

A—Cap Screw and Nut (4 used)

Remove and retain grille mounting cap screws and nuts (A).

6. Slide grill up.
- 7.

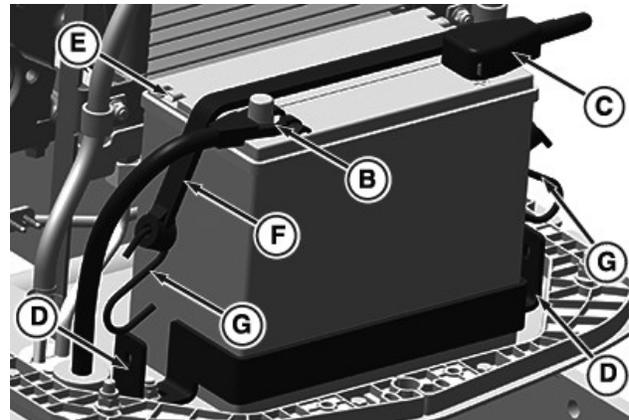

LVP15654—UN—16MAY22

B—Negative (-) Cable  
C—Positive Terminal Cover  
D—Hold Down Bracket  
E—Vent Tube Terminal  
F—Rubber Strap  
G—Hook (2 used)

Disconnect black negative (-) cable (B) from battery terminal first.

8. Slide red positive terminal cover (C) back and disconnect red positive (+) cable from battery terminal.
9. Unhook the hooks (G) from hold down bracket (D) and remove the rubber strap (F).
10. Remove battery vent tube from vent tube terminal (E).
11. Lift and remove battery.

### Install:

1. Position battery in machine.
2. Route battery vent tube through vent tube terminal (E) in battery tray.
3. To secure the battery, install the rubber strap (F) into the hooks (G) and hook them to hold down bracket (D).
4. Connect positive (+) cable to battery first, then connect negative (-) cable to battery.
5. Apply spray lubricant on battery terminals to help prevent corrosion.
6. Position positive battery terminal cover (C) on red positive (+) cable.
7. Slide grill back into position.
8. Install grille mounting cap screws and nuts (A).
9. Connect headlight harness at fan shroud.
10. Install side panels.
11. Lower the hood.

ycwrhfr,1652691174221-19-24MAY22

## Clean Battery and Terminals


1. Park machine safely.
2. Disconnect and remove battery.
3. Wash battery with solution of four tablespoons of baking soda to one gallon of water. Be careful not to get the soda solution into the cells.
4. Rinse the battery with plain water and dry.
5. Clean terminals and battery cable ends with wire brush until bright.
6. Install battery.
7. Attach cables to battery terminals, beginning with the positive cable.
8. Apply spray lubricant to terminal to prevent corrosion.

KN52281,1003F36-19-17FEB17

## Use Booster Battery

**⚠ CAUTION: Avoid injury! The battery produces a flammable and explosive gas. The battery may explode:**

- Do not smoke or have open flame near the battery.
- Wear eye protection and gloves.
- Do not jump-start or charge a frozen battery. Warm battery to 16°C (60°F).
- Do not connect the negative (-) booster cable to the negative (-) terminal of the discharged battery. Connect at a good ground location away from the discharged battery.

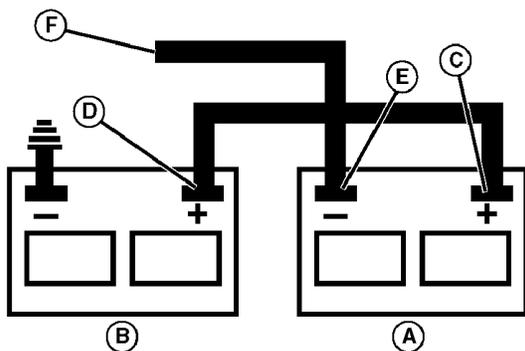

LVAL38352—UN—21AUG12

- A—Booster Battery
- B—Disabled Vehicle Battery
- C—Booster Battery Positive (+) Post
- D—Disabled Vehicle Battery Positive (+) Post
- E—Booster Battery Negative (-) Post
- F—Disabled Vehicle Battery Negative (-) Post

1. Connect positive (+) booster cable to the booster battery (A) positive (+) post (C).

2. Connect the other end of positive (+) booster cable to the disabled vehicle battery (B) positive (+) post (D).
3. Connect negative (-) booster cable to the booster battery negative (-) post (E).

**IMPORTANT: Avoid damage! Electric charge from the booster battery can damage machine components. Do not install negative booster cable to the machine frame. Install only to the engine block.**

**Install negative booster cable away from moving parts in the engine compartment, such as belts and fan blades.**


4. Connect the other end (F) of negative (-) booster cable to a metal part of the disabled machine engine block away from battery.
5. Start the engine of the disabled machine and run machine for several minutes.
6. Carefully disconnect the booster cables in the exact reverse order: negative cable first and then the positive cable.

KN52281,1003F37-19-16FEB17

## Replace Headlight Bulb

**IMPORTANT: Avoid damage! Do not touch glass headlight bulb with bare skin. Contact with bare skin could cause bulb to fail prematurely. Use gloves or a cloth when inspecting or replacing the bulb.**

1. Park machine safely.
2. Raise the hood.

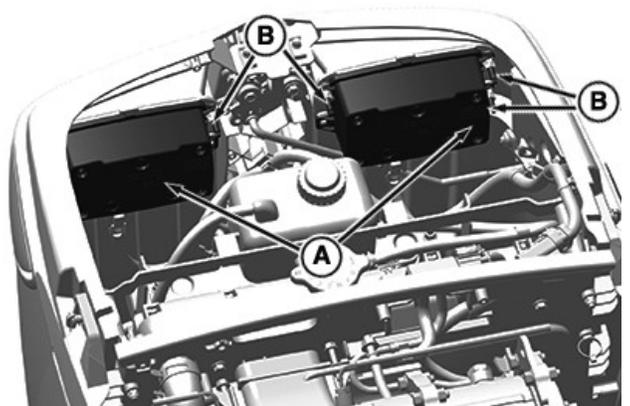

LVP15655—UN—16MAY22

- A—Headlight (2 used)
- B—Stud and Nut (6 used)


3. Remove connectors from base of headlights (A).
4. Remove the studs and nuts (B). Remove headlights (A) from housing.

5. Insert new headlights in housing and install it with studs and nuts (B) to secure.
6. Insert connectors into base of the headlights (A).
7. Lower the hood.
8. Check operation of headlights (A).

ycwrhfr,1652691212925-19-24MAY22

### Replace Tail/Turn Light Bulb

**NOTE:** Taillight can be serviced by removing the rear assembly lens only.

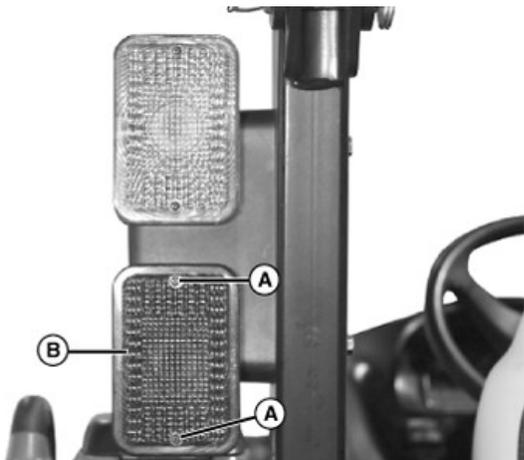

LVAL38748—UN—05OCT12



LVAL38749—UN—05OCT12


**A—Screw**  
**B—Lens**  
**C—Bulb**

1. Park machine safely.
2. Remove two screws (A) and red lens (B).
3. Push down and rotate bulb (C) to remove. Do not twist bulb.
4. Push down and rotate new bulb into socket.
5. Check operation of taillights and turn signals.


6. Install lens and screws.

GS25068,0003E2F-19-02FEB18

### Replace Warning Light Bulb

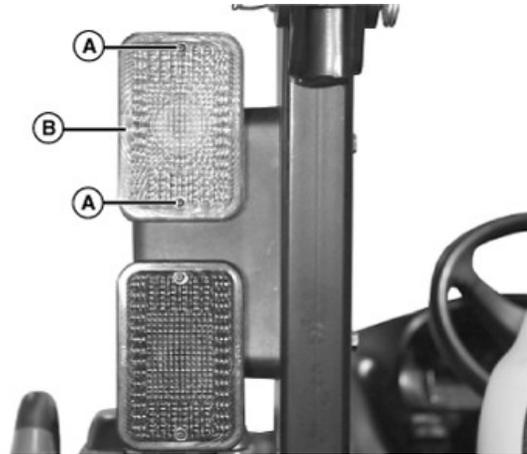

LVAL38750—UN—05OCT12

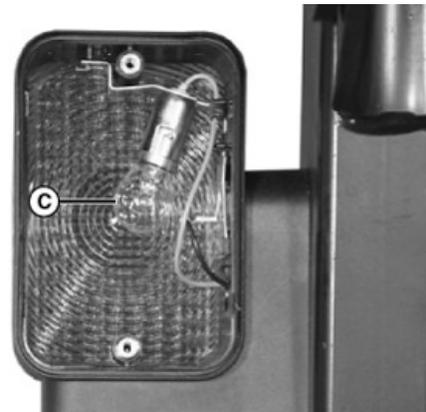

LVAL38751—UN—05OCT12

**A—Screw**  
**B—Lens**  
**C—Bulb**

1. Park machine safely.
2. Remove two screws (A) and amber lens (B).
3. Push up and rotate bulb (C) to remove. Do not twist bulb.
4. Push up and rotate new bulb into socket.
5. Check operation of turn signal and warning lights.
6. Install lens and screws.

GS25068,0003E30-19-02FEB18

### Replace Fuses and Relays

**IMPORTANT:** Avoid damage! The electrical system can be damaged if incorrect replacement fuses are used. Replace the bad fuse with a fuse of the same ampere rating.

### Locate Fuses and Relays

All electrical circuits are protected by fuses. Ampere rating is marked on each fuse, plus fuses are color coded to ensure proper replacement.

Fuses	
Fuse Rating (A)	Color
10A	Red
15A	Blue
20A	Yellow
30A	Green

### Fuse Location—Under Hood Cowl


1. Park machine safely.
2. Open hood.



LV25563—UN—13JUN16

A—Hood Cowl Latch  
B—Hood Cowl

3. Pull hood cowl latch (A) out and up on both sides.
4. Remove hood cowl (B).

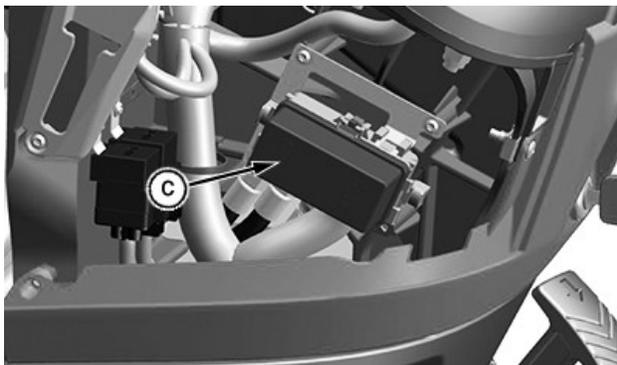

LV25564—UN—23AUG16


C—Load Center Cover

5. Remove load center cover (C).
6. Identify fuse or relay in the fuse block.
7. Remove defective relay or fuse.
8. Replace with the new relay or fuse.
9. Install load center cover.

10. Line up hood cowl and gently slide into place.
11. Close hood.

### Fuse Location—Right of Seat


1. Park Machine Safely.

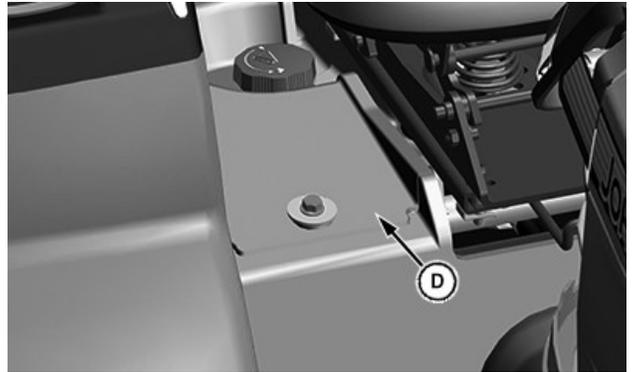

LV25566—UN—15JUN16

D—Cover

2. Remove bolt, washer, and cover (D).

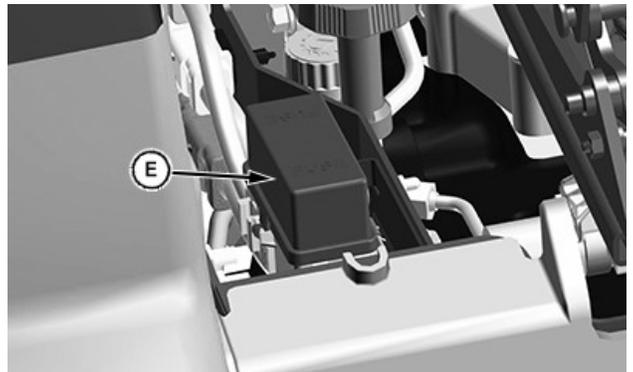


LV25567—UN—15JUN16

E—Load Center Cover

3. Remove load center cover (E).
4. Identify fuse or relay in the fuse block.
5. Remove defective relay or fuse.
6. Replace with the new relay or fuse.
7. Install load center cover.
8. Install cover (D). Secure with washer and bolt.

### Fuse Location—Left of Radiator

1. Park Machine Safely.
2. Remove side panel.

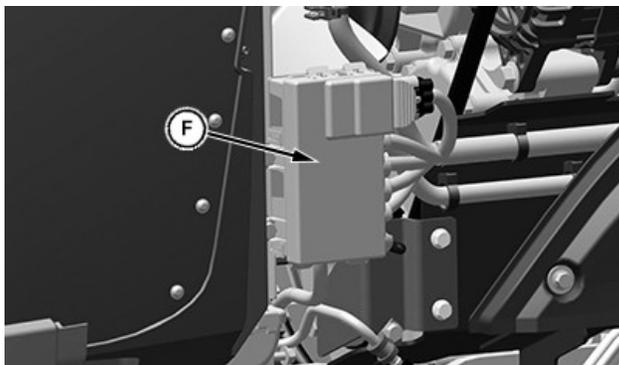

LV26021—UN—30AUG16

**F—Load Center Cover**

3. Remove load center cover (F).
4. Identify fuse or relay in the fuse block.
5. Remove defective relay or fuse.
6. Replace with the new relay or fuse.
7. Install load center cover.
8. Install side panel.

**Fuse and Relay Size and Function**

FRONT (LCM1)		INSIDE PEDESTAL (LC1)					
FL1-250A MEGA FUSE LOCATED ON BACK OF MODULE	FL9 NONE	F01-30A DISPLAY	F02-15A BRAKE LTS	F03 NONE	F11 NONE	K14 BRAKE LTS RELAY	
	FL8-20A ECU	F04-10A EGR	F05-10A VCU	F06-10A ELX	F16 NONE		
	FL7-20A JCT BLK	FL6-40A LCS1		F07-15A WORK LTS	F08-10A TAIL LTS	F09-15A HEAD LTS	F10-15A ACC
FL5-100A ALTERNATOR		F12-30A KEY SW	F13-15A PWR PORT	F14-30A LIGHT SW	F15-10A IGN PWR		
FL4-40A GLOW PLUG		RIGHT OF SEAT (LCS 2)					
FL3-50A LCS2		K24 3RD EH "A" RELAY	K25 3RD EH "B" RELAY	K19 DUAL REAR CONTINUOUS RELAY	K20 DUAL REAR CONT. LOCKOUT RELAY		
FL2 NONE		F17-20A REAR WORK LTS	-	-	K06 REAR WORK LTS RELAY		
		F18-10A RH FENDER	F19 NONE	F20-30A DECK LIFT	NONE		

TR109329

Fuse Label

LVP10687—UN—18MAR20

- F01—Display Fuse (30A)
- F02—Brake Lights Fuse (15A)
- F03—Not Used
- F04—EGR Fuse (10A)
- F05—VCU Fuse (10A)
- F06—ELX Fuse (10A)
- F07—Work Lights Fuse (15A)
- F08—Tail Lights Fuse (10A)
- F09—Head Lights Fuse (15A)
- F10—Accessory Fuse (15A)
- F11—Not Used
- F12—Key Switch Fuse (30A)
- F13—Power Port Fuse (15A)
- F14—Light Switch Fuse (30A)
- F15—Ignition Power Fuse (10A)
- F16—Not Used
- F17—Rear Work Lights Fuse (20A)
- F18—Right Fender Fuse (10A)

- F19—Not Used
- F20—Deck Lift Fuse (30A)
- FL2—Not Used
- FL3—Load Center 2 Fuse (50A)
- FL4—Glow Plug Fuse (40A)
- FL5—Alternator Fuse (100A)
- FL6—Load Center 1 Fuse (40A)
- FL7—Junction Block Fuse (20A)
- FL8—ECU Fuse (20A)
- FL9—Not Used
- K03—EGR Relay
- K06—Rear Work Light Relay
- K14—Brake Lights Relay
- K19—Dual Rear Continuous Relay
- K20—Dual Rear Continuous Lockout Relay
- K24—Third EH Retract Relay A (if equipped)
- K25—Third EH Extend Relay B (if equipped)

PP71895,0001469-19-01JUL20

# Drivetrain Maintenance

---

## Drivetrain Maintenance

See specific drivetrain component for maintenance information.

UP00731.0000208-19-22JUN16

---


# Transmission Maintenance

## Check Transmission Oil Level

**IMPORTANT: Avoid damage! Dirt and contamination can enter transmission when checking oil level. Clean area around dipstick before removing.**

**Do not overfill transmission. Oil expands during operation and could overflow.**


1. Park machine safely. Allow machine to cool down for at least 1 hour.

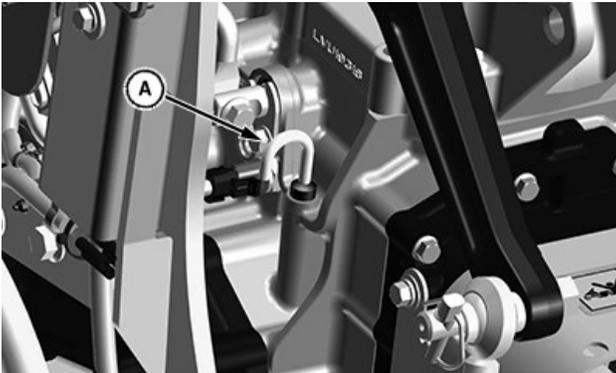

LV25621—UN—13JUN16

A—Dipstick


2. Pull to remove dipstick (A), located at left side of transaxle. Wipe with a clean cloth.
3. Install dipstick.
4. Remove dipstick.

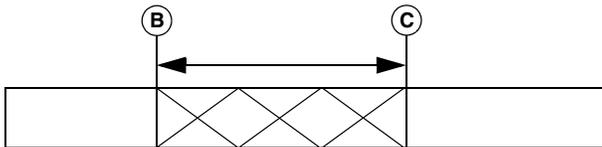

LVAL38336—UN—21AUG12

B—Oil Level Mark  
C—Oil Level Mark

5. Check oil level on dipstick. Correct level is between oil level mark (B) and (C) on dipstick.

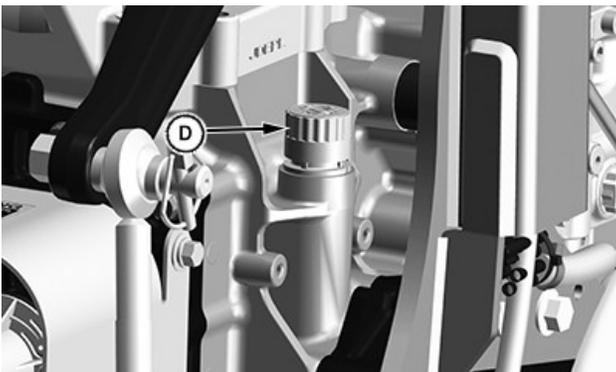

LV25622—UN—13JUN16

D—Oil Filler Cap

6. If oil level is low, remove oil filler cap (D) and add recommended oil until the level is correct.
7. If oil exceeds top mark on the dipstick, drain to proper level.
8. Install and tighten filler cap.
9. Install dipstick.

GS25068,0003E1F-19-01FEB18

## Change Transmission Oil and Hydraulic Suction Oil Filter

**CAUTION: Avoid injury! Touching hot surfaces can burn skin. The engine, components, and fluids are hot when engine has been running. Allow the engine to cool before servicing or working near the engine and components.**

**IMPORTANT: Avoid damage! If there is evidence of severe oil contamination, it may be necessary to change the oil several times.**

**Contamination of hydraulic fluid could cause transmission damage or failure.**

**Severe or unusual conditions require a more frequent service interval.**

*NOTE: Transmission oil can be changed every 1200 hours or 3 years if the following requirements are met:*

- Use John Deere Hy-Gard™ or Lo-Vis Hy-Gard oil.
- Suction and transmission filter are both changed every 400 hours.
- Perform oil-scan of transmission oil every 400 hours or once per year.

1. Drive tractor a few minutes to warm and mix transmission oil.
2. Park machine safely.




LV25623—UN—25AUG16

A—Transmission Drain Plug

*Hy-Gard is a trademark of Deere & Company*

3. Position drain pan under transmission drain plug (A) at rear cover. Remove plug and allow oil to drain.
4. Install transmission drain plug.

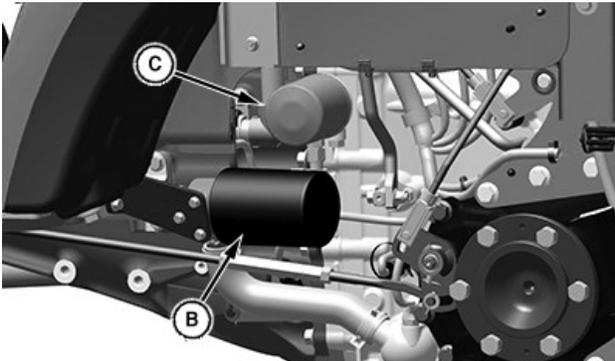


LV25624—UN—15JUN16

*Shown with left rear tire removed for clarity.*

**B—Hydraulic Suction Filter**  
**C—HST Filter**

5. Position drain pan under suction filter (B) and HST filter (C). Remove filters and allow oil to drain.
6. Put a light coat of clean transmission oil on gasket of new filters.
7. Install replacement filters by turning clockwise until gasket contacts filter base. Tighten additional one half turn.

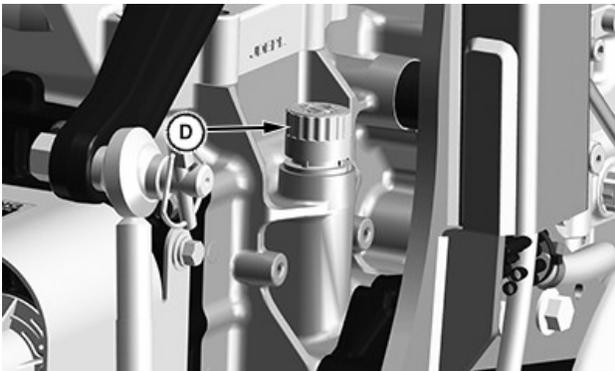

LV25622—UN—13JUN16

**D—Oil Fill Cap**

8. Remove oil fill cap (D).
9. Add recommended oil into filler opening.
10. Start engine. Check for oil leaks around filter bases and drain plugs.
11. Stop engine.
12. Check transmission oil level. Add oil if necessary.

GS25068,0003E20-19-01FEB18


# MFWD and Front Axle Maintenance

## Check Front Axle Oil Level

**IMPORTANT: Avoid damage! Allow oil one hour to settle before checking level to ensure accurate dipstick reading. Repeat oil level check after several hours of operation.**

1. Park the machine safely. Allow the machine to cool down for at least 1 hour.

**IMPORTANT: Avoid damage! Dirt and debris in oil damages the transaxle. Clean area around opening before removing dipstick.**

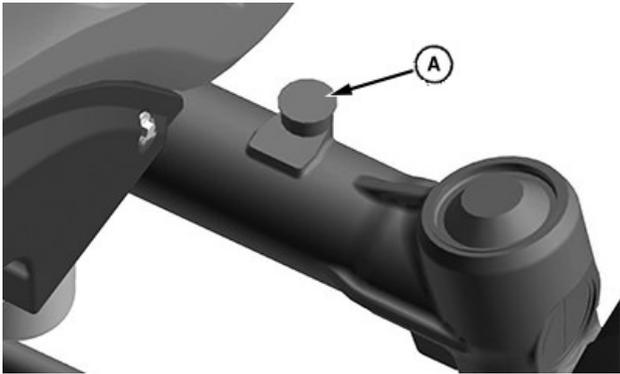

A—Dipstick

LV25626—UN—13JUN16

2. Loosen and remove dipstick (A) located on the right side of the front axle.
3. Wipe the dipstick clean with a rag. Install and tighten the dipstick.



B—High  
C—Low

LVAL38331—UN—21AUG12


4. Remove the dipstick. The correct oil level is between high (B) and low (C) on the dipstick.
5. If the oil level is low, add recommended oil through the dipstick opening until the level is correct.
6. Install and tighten the dipstick.
7. Check the front axle oil level again after the first several hours of operation.

GS25068,0003E21-19-01FEB18

## Change Front Axle Oil

1. Warm the front axle oil by operating the machine.

2. Park the machine safely.

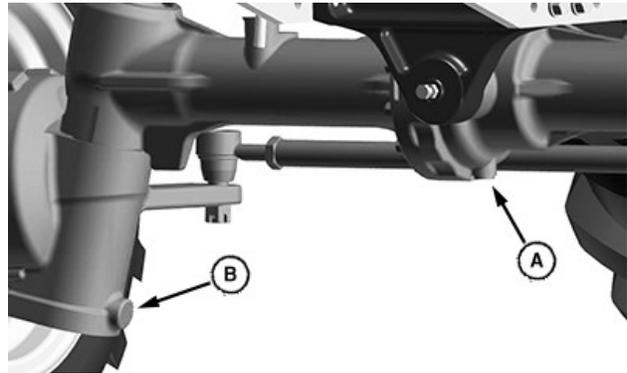


LV25625—UN—13JUN16

Right Front Axle Drain Plug Shown, Left is Similar

A—Differential Drain Plug  
B—Axle Drain Plug (right side shown, left side is similar)

3. Position a drain pan under the differential drain plug (A) and both the axle drain plugs (B).
4. Remove the drain plugs and allow the oil to drain.
5. Install and tighten drain plugs after all the oil has drained.

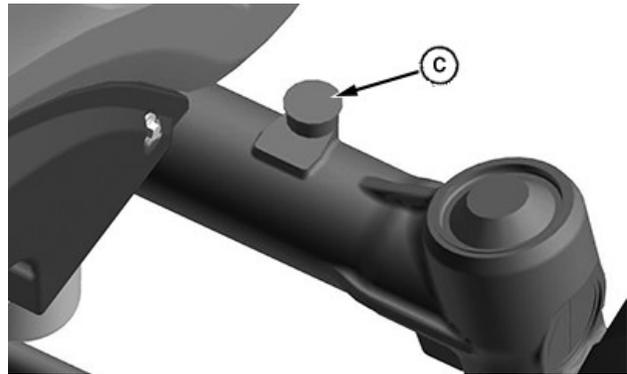

C—Dipstick

LV25627—UN—13JUN16

6. Remove the dipstick (C) on the right side of the front axle.
7. Add the recommended oil through the dipstick fill opening until the oil level is correct.
8. Install and tighten the dipstick.

**IMPORTANT: Avoid damage! Drive the tractor 1 minute at low speed, in both forward and reverse to help fill the wheel ends.**

**Allow the oil 1 hour to settle before checking the level to ensure accurate dipstick reading. Repeat the oil level check after several hours of operation.**


9. Check the front axle oil level.

GS25068,0003E22-19-01FEB18

## Adjust Front Axle Thrust Bolt Torque

**NOTE:** Prevent excessive forward or rearward movement of front axle by adjusting the bolt torque at the required service intervals.

1. Park the machine safely.

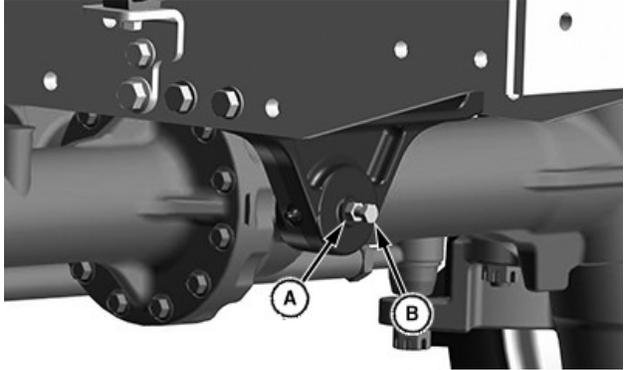

LV25628—UN—13JUN16

A—Locknut  
B—Thrust Bolt

**⚠ CAUTION: Avoid injury! The machine can fall or slip from an unsafe lifting device or supports.**

- Use a safe lifting device rated for the load to be lifted.
- Lower the machine onto jack stands or other stable supports and block the wheels before servicing.

2. Raise the front axle off the ground to take the machine weight off the front axle.
3. Loosen the locknut (A).
4. Tighten the thrust bolt (B).

### Specification


Thrust Bolt—Torque . . . . . 14 N·m  
(10 lb·ft)

Do not overtighten.


5. Oscillate the axle from stop to stop. Check the torque.
6. Tighten the locknut.
7. Lower the front axle to the ground.

GS25068,0003E23-19-01FEB18

## Lubricate Axle Trunnion

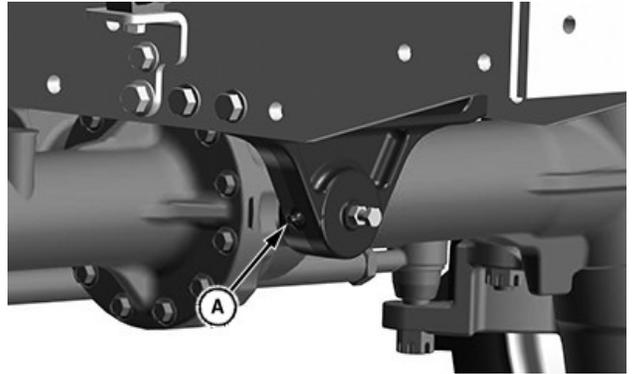

LV25629—UN—13JUN16

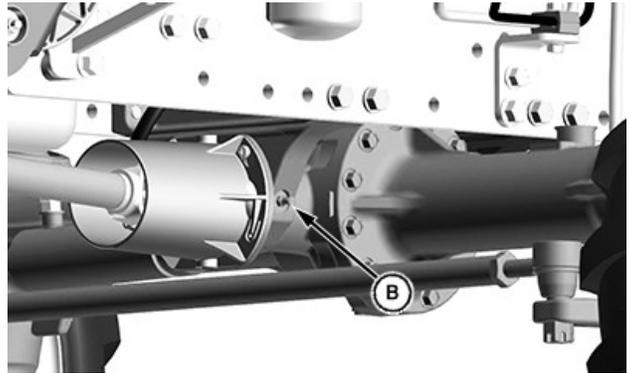


LV25630—UN—13JUN16

A—Front Trunnion Grease Fitting  
B—Rear Trunnion Grease Fitting

Lubricate the front trunnion grease fitting (A) and the rear trunnion grease fitting (B) with the recommended grease or equivalent.

GS25068,0003E24-19-01FEB18

## Lubricate MFWD Driveshaft

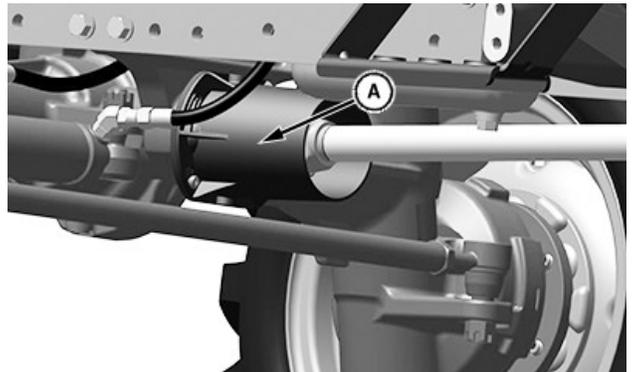


LV25805—UN—11JUL16

Front MFWD Driveshaft Shield

A—Front MFWD Driveshaft Shield

1. Remove two screws, then rotate the front MFWD shield (A) counterclockwise to remove.

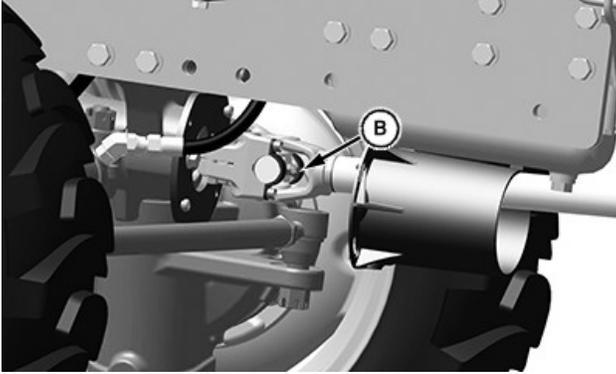

LV25806—UN—11JUL16


Front MFWD Driveshaft

2. Clean all the dirt and debris from the breather valve.
3. Install the breather valve.

UP00731,0000359-19-03JAN18

**B—Front MFWD Driveshaft Grease Fitting**

2. Lubricate the front MFWD driveshaft grease fitting (B) with John Deere multi-purpose grease.

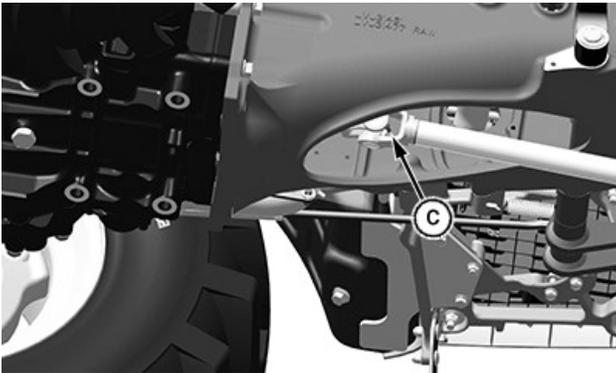

LV25804—UN—21JUL16


Rear MFWD Driveshaft

**C—Rear MFWD Driveshaft Grease Fitting**

3. Lubricate the rear MFWD driveshaft grease fitting (C) with John Deere multi-purpose grease.

GS25068,0003E25-19-01FEB18

**Clean MFWD Axle Breather Valve**

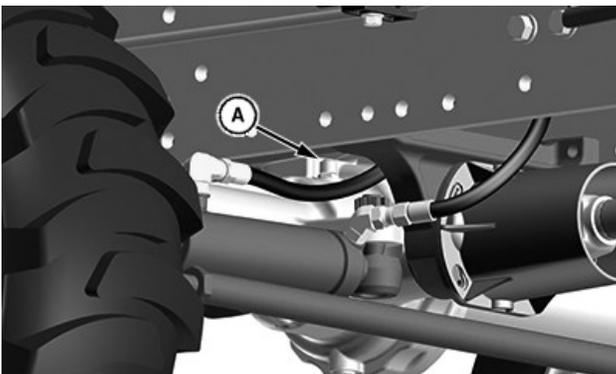

LV28772—UN—21JUN17

**A—Breather Valve**

1. Remove the breather valve (A) from the front axle.

# Differential and Rear Axle Maintenance

---

## Rear Axle

The rear axle is part of the transmission. See Transmission Maintenance for the rear axle information.

UP00731,00001CA-19-03JAN18

---

# Power Take Off (PTO) Maintenance

---

## PTO Maintenance

See the specific system for maintenance.

UP00731.00001BE-19-03JAN18


# Steering and Brake Maintenance

## Check and Adjust Toe-In

1. Stop the machine on a firm, level surface.
2. Disengage the MFWD if equipped.
3. Turn the steering wheel so the front wheels are pointing straight ahead.
4. Park the machine safely.

### Check Toe-In

**NOTE:** Use an outside or inside bar on each tire for marking the center line if the front axle is equipped with bar tires.

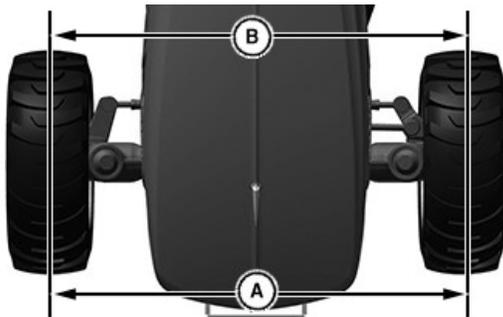


LV26019—UN—25AUG16

**A**—Distance between center line of tire.  
**B**—Distance between center line of tire.

1. Using chalk, mark the center line of each tire at hub height and to the front of the axle.
2. Measure and record the distance (A) between the center lines of each tire.
3. Drive the machine forward or rearward until the chalk mark moves 180° to rear of the axle.
4. Park the machine safely.
5. Measure and record the distance (B) between the center lines of each tire.
6. Determine the difference between the front and rear measurement. The measured distance (A) must be 3 mm (1/8 in) less than the measured distance (B). Adjust the toe-in if necessary.

### Adjust Toe-In

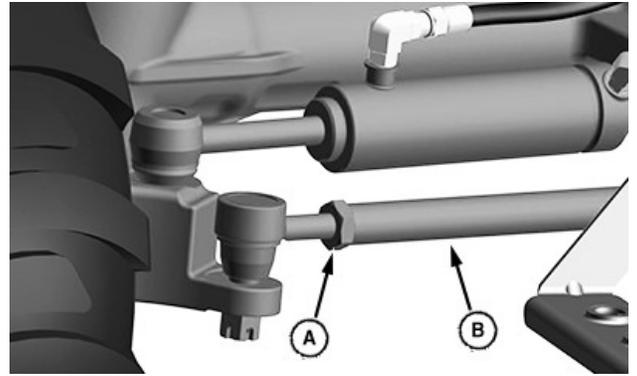

LV25631—UN—15JUN16

**A**—Nut  
**B**—Tie Rod

1. Loosen nuts (A) on both ball joints.

**NOTE:** Rotating the threaded rod in 1/2 turn increments equals 1.5 mm (1/16 in).

2. Rotate the tie rod (B) clockwise or counterclockwise to adjust the amount of toe-in. Adjust the tie rod until the toe-in measurement is within the correct specification.
3. Tighten the nuts to the correct specification.

#### Specification

Ball Joint Nut—Torque. . . . . 120 N·m  
 88 lb·ft

4. Check the toe-in setting. Repeat the procedure if further adjustment is required.

GS25068,0003E91-19-05FEB18

## Steering Maintenance

See your John Deere dealer if steering problems exist on the machine.

GS25068,0003DA2-19-23JAN18

## Brake Maintenance

See your John Deere dealer if brake problems exist on the machine.

GS25068,0003DA3-19-23JAN18

# Hydraulics Maintenance

---

## Hydraulic Maintenance

See the Transmission Maintenance section for servicing the hydraulic oil and filters.


UP00731,0000117-19-03JAN18

---

# Hitch and Drawbar Maintenance

---


## Lubricate 3-Point Hitch

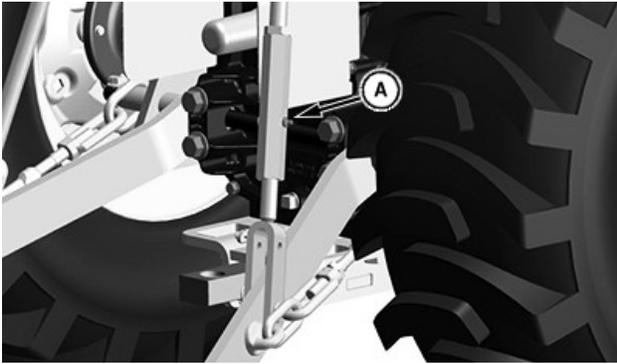

LV25632—UN—15JUN16

**A—Lift Link Grease Fitting**

1. Lubricate the lift link grease fitting (A) with the recommended grease or equivalent.

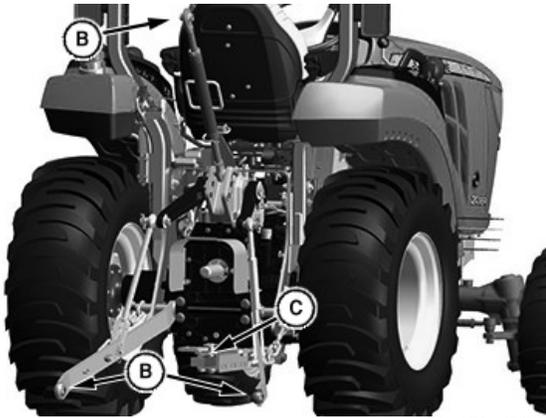

LV25633—UN—15JUN16

**B—Ball Joints**  
**C—Drawbar**

2. Lubricate the ball joints (B) and the drawbar (C) with SUPER LUBE® lubricant.<sup>1</sup>


GS25068.0003E26-19-01FEB18

---

<sup>1</sup> SUPER LUBE is a registered trademark of Synco Chemical Corp.


# Selective Control Valve Maintenance

## Check Selective Control Valve

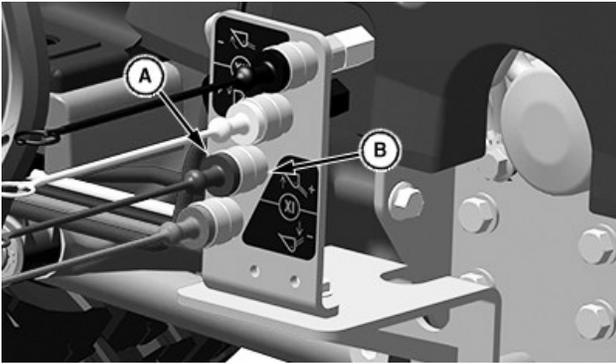


SCV Coupler

LV26016—UN—25AUG16

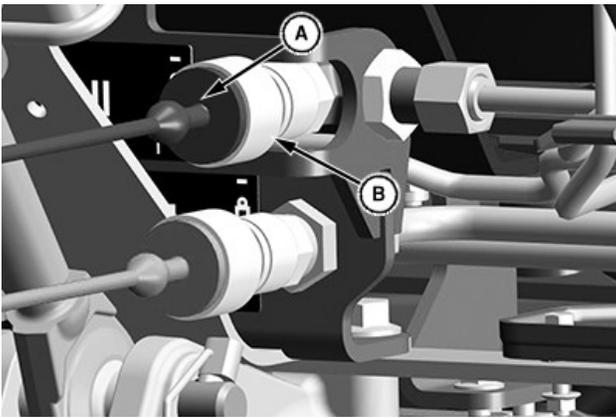

Dual Rear SCV Coupler (If equipped)

LV25634—UN—15JUN16

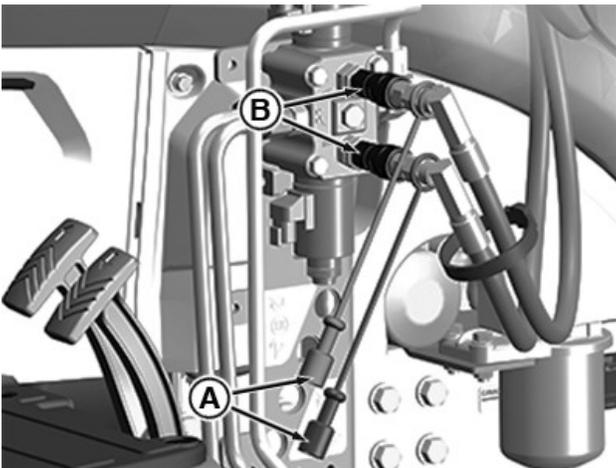

Third Function SCV Coupler (If equipped)

LVP11077—UN—30JUN20

**A—Dust Plug**  
**B—Selective Control Valve Coupler**

1. Check the dust plugs (A) for damage, replace as needed.
2. Clean the dirt and debris from the selective control valve couplers (B) and check for oil leakage. Contact your John Deere dealer for service.

AL61114,000071C-19-11MAY21

# Wheels and Tires Maintenance

## Check Wheel Lug Bolts and Hardware

**CAUTION: Avoid injury! Prevent possible machine roll-over by periodically checking the rim, hub, and axle hardware.**

When the machine is new, check the lug bolts torque after the first 10 hours of use.

Tighten all lug bolts after 1 hour of operation and every 4 hours thereafter until proper torque values are maintained anytime the wheel hardware is loosened.

Maintained the lug bolt torque according to the service interval recommendations.

Tighten the lug bolts alternately to specifications.

### Specification

Front and Rear Lug Bolt—Torque. . . . . 140 N·m (103 lb-ft)

GS25068,0003E40-19-05FEB18

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.
- Do not inflate the tires above the recommended pressure.
- Do not weld or heat a wheel and tire assembly. Heat can cause an increase in air pressure resulting in an explosion. Welding can structurally weaken or deform the wheel.
- Do not stand in front or over the tire assembly when inflating. Use a clip-on chuck and extension hose long enough to allow you to stand to one side.

1. Check the tires for damage.
2. Check the tire pressure with an accurate gauge.
3. Add or remove air as necessary.

KN52281,1003F4E-19-07MAY18

## Remove and Install Wheels

**CAUTION: Avoid injury! Remove wheels safely.**

- Use a safe lifting device and support the machine securely on jack stands.
- Block the front and rear of wheel not raised to prevent machine movement.
- The wheel can be heavy or difficult to handle when removing.

1. Loosen the lug bolts slightly before raising the machine.
2. Raise the machine and lower onto suitable jackstand.
3. Remove the lug bolts and the wheel.
4. Install the wheels onto axle, insert the lug bolts, and lightly tighten the bolts.
5. Raise the machine, remove the jackstand and lower the machine to floor.
6. Tighten the lug bolts alternately to specification.

### Specification

Front and Rear Lug Bolt—Torque. . . . . 140 N·m (103 lb-ft)

GS25068,0003E41-19-05FEB18

## Tire Inflation Pressure Chart

Front Tires—Standard Factory Inflation				
Tire Size	Tread	kPa	bar	psi
23x8.50-14 6PR	R4	210	2.1	30
23x8.50-14 6PR	R3	210	2.1	30
200/60R15 (Radial)	R3	160	1.6	23
7.00-12 6PR	R1	138	1.4	20

Rear Tires—Standard Factory Inflation				
Tire Size	Tread	kPa	bar	psi
14-17.5 6PR	R4	210	2.1	30
14-17.5 6PR	R3	210	2.1	30
300/70R20 (Radial)	R3	160	1.6	23
12.4-16 6PR	R1	103	1.1	15

UP00731,000021C-19-03JAN18

## Select Front Tire Rolling Direction

**CAUTION: Avoid injury! Remove wheels safely.**

- Use a safe lifting device and support machine securely on jack stands.
- Block front and rear of wheel not raised to prevent machine movement.
- Wheel can be heavy or difficult to handle when removing.

The machines are equipped with directional type tires (such as bar tires) and have directional arrows on the

## Check Tire Pressure

**CAUTION: Avoid injury! Explosive separation of tire and rim parts is possible when they are serviced incorrectly:**

tire sidewall. Install the tires with the directional arrow pointing in the direction of travel.

If the machine is mainly used for loader operations, lug direction may be reversed on the MFWD axle to increase tire life, improve tire wear, and increased traction.

Change the tire rolling direction by moving the wheel from one side of the machine to the other.

Install the wheel with the valve stem facing outwards.

GS25068,0003DC4-19-24JAN18

Front Tire Size	Wide Tire Position	
	Overall	Tread
23x8.50-14 6PR R4 GA	1472 mm (58.0 in)	1254 mm (49.4 in)
23x8.50-14 6PR R3 GA	1472 mm (58.0 in)	1254 mm (49.4 in)
200/60R15 R3 GA	1506 mm (59.3 in)	1309 mm(51.5 in)
7.00-12 4PR R1 GA	1341 mm (52.8 in)	1178 mm (46.4 in)

GS25068,0003E27-19-01FEB18

### Change Wheel Spacing and Tread Width

In special cases, front tires can be set to wide position; however, wide position cannot be used with a loader. Using wide position during loader operation reduces front axle life.

#### Mount Guidelines

- To keep tire rotation in right direction, move each rim to opposite side of machine, rather than turning around rim.
- Dished wheels can be reversed.
- Tighten all bolts to specifications.

#### Rear Tires

Rear Tire Size	Narrow Tire Position	
	Overall	Tread
14-17.5 6PR R4 GA	1380 mm (54.3 in)	1031 mm (40.6 in)
14-17.5 6PR R3 GA	1380 mm (54.3 in)	1031 mm (40.6 in)
300/70R20 R3	1260 mm (49.6 in)	965 mm (38.0 in)
12.4-16 6PR R1	1361 m (53.6 in)	1045 mm (41.1 in)


Rear Tire Size	Wide Tire Position	
	Overall	Tread
14-17.5 6PR R4 GA	1500 mm (59.0 in)	1151 mm (45.3 in)
14-17.5 6PR R3 GA	1500 mm (59.0 in)	1151 mm (45.3 in)
300/70R20 R3	1380 mm (54.3 in)	1085 mm (42.7 in)
12.4-16 6PR R1	1481 mm (58.3 in)	1165 mm (45.9 in)

#### Front Tires

Front Tire Size	Narrow Tire Position	
	Overall	Tread
23x8.50-14 6PR R4 GA	1304 mm (51.3 in)	1086 mm (42.8 in)
23x8.50-14 6PR R3 GA	1304 mm (51.3 in)	1086 mm (42.8 in)
200/60R15 R3 GA	1227 mm (48.3)	1030 mm (40.6 in)
7.00-12 4PR R1 GA	1321 (52.0)	1158 mm (45.6 in)

### Lift Points for Jacking up the Tractor

**CAUTION:** Avoid crushing injury. Use approved lifting equipment only. Raise tractor on firm, level ground only. Before doing any work on the tractor, secure it using suitable jack stands.

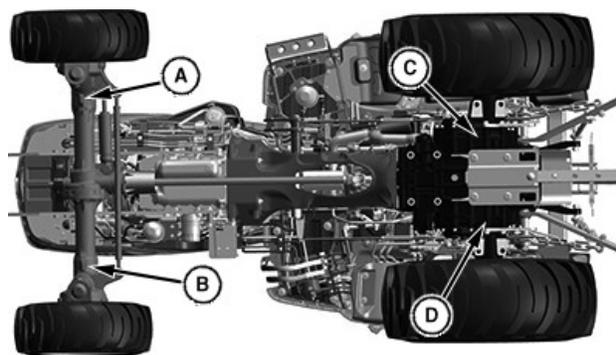

LV25635—UN—15JUN16

- A—Front Left Lift Point
- B—Front Right Lift Point
- C—Rear Left Lift Point
- D—Rear Right Lift Point

GS25068,0003E28-19-01FEB18

# Ballast Maintenance

---

## Match Ballast to Work Load

Use no more ballast than necessary and remove ballast when it is no longer required.

Rather than weighing tractor down to pull heavy loads, try to reduce load. Pulling a lighter load is more economical and more efficient.

<b>Not Enough Ballast</b>	<b>Too Much Ballast</b>
Excessive wheel slip	Increased load
Power loss due to churning of soil	Power loss due to carrying extra weight
Tire wear	Tire strain
Fuel waste	Soil compaction
Lower productivity	Fuel waste
	Lower productivity

UP00731,00001D0-19-26MAY17

---

# Additional Equipment Maintenance

---

## Additional Equipment Maintenance

To service additional equipment, refer to the additional equipment operator's manual.

UP00731,0000207-19-26MAY17

---

# Operator Station Maintenance

## Raise and Lower Hood




LV25637—UN—05JUL16

A—Hood lock  
B—Hood

1. Park the machine safely.
2. Release the latch by inserting a screw driver into the hood lock (A).
3. Raise the hood (B).
4. Lock the latch by gently pushing down on both sides of the hood.


GS25068,0003E29-19-01FEB18

## Remove and Install Side Panels

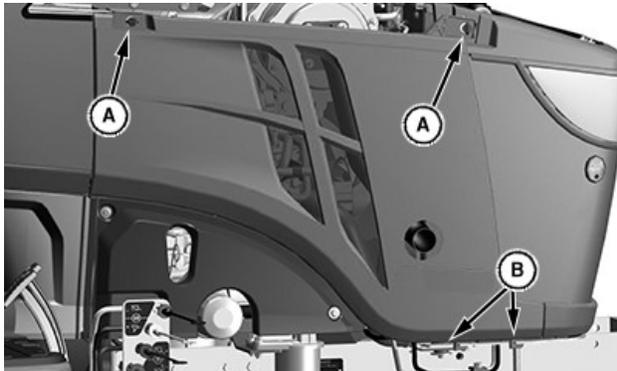

LV25552—UN—05JUL16

Left side shown. Right side is the same

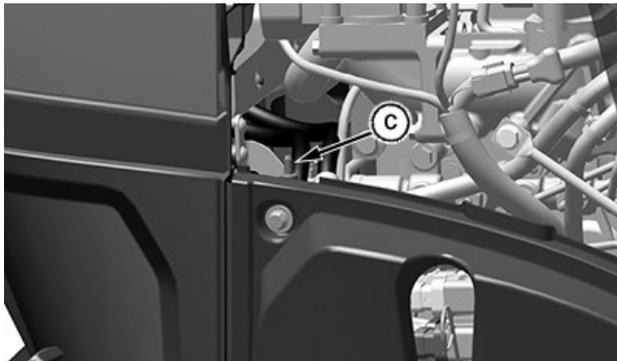

LV26017—UN—25AUG16

Alignment Pin

A—Locking Pin  
B—Mounting Tabs  
C—Alignment Pin


1. Park the machine safely.
2. Raise the hood.
3. Releases the side panel by pushing and turning the locking pins (A).
4. Tilt the side panel away from the machine and lift until the slots clear the front mounting tabs (B). Remove the side panel.
5. Align the side panel mounting slots with the front mounting tabs (B) and alignment pin (C).
6. Push the side panel into place.
7. Secure the side panel pushing and turning the lock pin (A).
8. Lower the hood.

GS25068,0003E2A-19-01FEB18

## Remove and Install Front Cowl



LV25563—UN—13JUN16

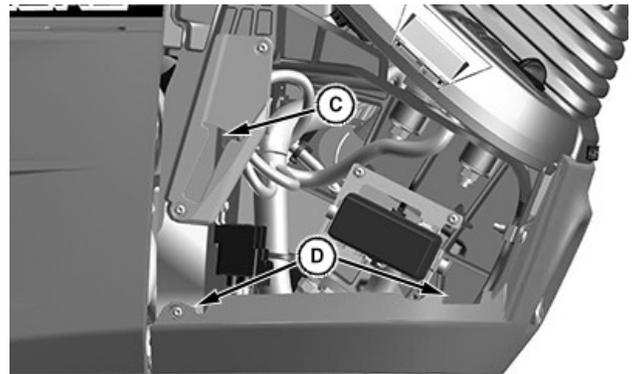

LV25638—UN—15JUN16

A—Hood Cowl Latch  
B—Hood Cowl  
C—Alignment Slot  
D—Alignment Slot


1. Park the machine safely.
2. Close the hood.
3. Pull the hood cowl latch (A) out on both sides.

4. To remove, slide the hood cowl (B) up.
5. Align the hood cowl tabs with the alignment slots (C and D).
6. Slide the cowl into position.
7. Pull out the hood cowl latch on both sides and release.

GS25068,0003E2B-19-01FEB18

## Inspect ROPS for Loose Hardware

**⚠ CAUTION:** Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque. The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

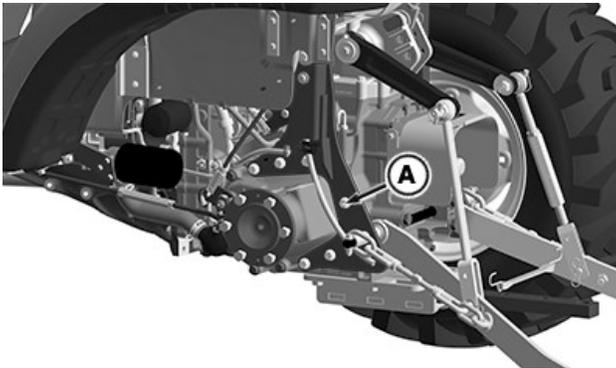

LV29940—UN—23JAN18

**A—Bolt (6 each side)**

Tighten the ROPS attaching hardware on each side of the ROPS to specification.

### Specification

Mounting Bolts (A)—Torque. . . . . 85.5—104.5 N·m  
(63 —77 lb-ft)

GS25068,0003DA4-19-23JAN18

# Troubleshooting

---

## Information Display Fault Messages

Symptom	Problem	Solution
<b>“PTO Switch Fault” Message</b>	Fault with the switch circuit	See a John Deere dealer
<b>“PTO Coil Fault” Message</b>	Fault with the PTO solenoid circuit	See a John Deere dealer
<b>“Start Coil Fault” Message</b>	Fault with starting circuit	See a John Deere dealer
<b>“RIO Fault” Message</b>	Fault with RIO circuit	See a John Deere dealer
<b>“Glow Plug Coil Fault” Message</b>	Fault with cold starting device	See a John Deere dealer
<b>“Audible Alarm Fault” Message</b>	Fault with information display audible alarm	See a John Deere dealer
<b>“Engine Overheat” Message</b>	Coolant level is below specification	Add coolant to specification
	Leak in coolant system	Check for leaks and repair or see your John Deere dealer
	Improperly adjusted or broken fan belt	Tighten or replace fan belt
	Dirt or debris accumulation on hood screen or radiator	Clean debris and dirt from front screen and radiator fins
<b>“Low Oil Pressure” Message</b>	Engine oil level low	Add oil to specification
	Plugged engine oil filter	Replace oil filter
	Improper type of engine oil	Verify correct engine oil. Drain system and fill with correct oil type
	Oil leaks	Check for leaks and repair or see your John Deere dealer
<b>“Oil Pressure Sensor Disconnected” Message</b>	Problem with oil pressure sensor	See a John Deere dealer
<b>“Low Fuel” Message</b>	Fuel level low	Fill fuel tank
	Fault with fuel sensing circuit	See a John Deere dealer
<b>“Hydraulic Oil Overtemp” Message</b>	Water in hydraulic oil	Replace hydraulic oil with correct oil type or see a John Deere dealer
	Plugged hydraulic oil filter	Replace oil filter
	Improper type of hydraulic oil	Verify correct hydraulic oil. Drain system and fill with correct oil type
	Oil leaks	Check for leaks and repair or see your John Deere dealer
<b>“Air Filter Restriction” Message</b>	Plugged air filter	Replace air filter elements

## Troubleshooting

---

Symptom	Problem	Solution
	Plugged inlet air filter suction pipe	Clean debris from suction inlet tube

---

UP00731,00002E6-19-25AUG16

### Engine

Symptom	Problem	Solution
<b>Engine Will Not Start Or Is Hard To Start</b>	Transmission gearshift lever is not in neutral position	Place range shift lever to Neutral
	Engine throttle lever not pushed forward	Move throttle to half throttle
	Fuel shutoff valve CLOSED (OFF)	Open fuel shutoff valve at the water separator
	Stale fuel/improper fuel/fuel level	Drain stale or improper fuel and fill to capacity
	Wrong engine oil viscosity	Change engine oil and fill with correct viscosity oil for conditions
	Cold start system not being used, or malfunctioning	Verify that cold start system is utilized during required temperatures or see your John Deere dealer
	Plugged fuel filter	Replace fuel filter
	Plugged air intake filter	Clean or replace air filter elements
<b>Engine Runs Rough Or Stalls</b>	Dirty or faulty fuel injectors	See your John Deere dealer
	Blown fuse	Check and replace and faulty fuses
	Fuel shutoff valve partially closed	Open fuel shutoff valve at the water separator
	Plugged fuel filter	Replace fuel filter
	Plugged air intake system	Clean or replace air filter elements
	Stale or improper fuel/fuel level	Drain stale or improper fuel and fill to capacity
	Dirty or faulty fuel injectors	See your John Deere dealer
	Low coolant temperature	See your John Deere dealer
<b>Engine Overheats</b>	Fuel pump not functioning properly	See your John Deere dealer
	Dirt or debris accumulation on hood screen or radiator fins	Clean debris and dirt from the front screen and radiator fins

## *Troubleshooting*

---

<b>Symptom</b>	<b>Problem</b>	<b>Solution</b>
	Coolant level is below specification	Add coolant as specified
	Leak in the coolant system	Check for leaks and repair or see your John Deere dealer
	Improperly adjusted or broken fan belt	Tighten or replace fan belt
	Cooling system needs flushing	See your John Deere dealer
	Defective radiator cap	Replace radiator cap
	Defective thermostat	See your John Deere dealer
	Defective water temperature indicator or sensor.	See your John Deere dealer
	Loose or defective alternator belt	Tighten or replace belt
	Engine speed too low for load. Do not operate at low idle	Raise engine speed to match load requirements
	Operating at too fast ground speed for conditions	Reduce speed to match operating conditions
<b>Engine Knocks</b>	Fuel shutoff valve partially closed	Open fuel shutoff valve at the water separator
	Plugged fuel filter	Replace fuel filter
	Plugged air intake system	Clean or replace air filter elements
	Stale or improper fuel/fuel level	Drain stale or improper fuel and fill to capacity
	Dirty or faulty fuel injectors	See your John Deere dealer
	Low coolant temperature See your John Deere Dealer	See your John Deere dealer
	Fuel pump not functioning properly	See your John Deere dealer
<b>Low Oil Pressure</b>	Engine oil level low	Add oil to specification
	Plugged engine oil filter	Replace oil filter
	Improper type of engine oil	Verify correct engine oil. Drain system and fill with the correct oil type
	Oil leaks	Check for leaks and repair or see your John Deere dealer
<b>Engine Uses Too Much Oil</b>	Oil leaks	Check for leaks and repair or see your John Deere dealer

## *Troubleshooting*

---

<b>Symptom</b>	<b>Problem</b>	<b>Solution</b>
<b>Engine Emits White Smoke</b>	Improper type of engine oil	Verify correct engine oil. Drain system and fill with the correct oil type
	Stale or improper fuel/fuel level	Drain stale or improper fuel and fill to capacity
<b>Engine Emits Black or Gray Exhaust Smoke</b>	Internal coolant leak	See your John Deere dealer
	Stale or improper fuel/fuel level	Drain stale or improper fuel and fill to capacity
	Dirty or faulty fuel injectors	See your John Deere dealer
	Fuel pump not functioning properly	See your John Deere dealer
<b>High Fuel Consumption</b>	Stale or improper fuel/fuel level	Drain stale or improper fuel and fill to capacity
	Dirty or faulty fuel injectors	See your John Deere dealer
	Fuel pump not functioning properly	See your John Deere dealer
	Failed fuel solenoid	See your John Deere dealer
	Operating at too fast ground speed for conditions	Reduce speed to match operating conditions
	Improper valve clearance	See your John Deere dealer
	Plugged air intake system	Clean or replace air filter elements

UP00731,00002E7-19-30NOV16

---

## **Electrical System**

<b>Symptom</b>	<b>Problem</b>	<b>Solution</b>
<b>Battery Will Not Charge</b>	Poor electrical connection at alternator	Check for proper electrical connections at alternator
	Loose or corroded connections	Clean connections at alternator and battery terminals
	Check for a blown fuse	Check starting circuit fuses and replace if necessary
	Loose or defective alternator belt	Tighten or replace belt
	Defective battery	Replace battery or see your John Deere dealer
	Defective alternator	See your John Deere dealer

---

## *Troubleshooting*

---

<b>Symptom</b>	<b>Problem</b>	<b>Solution</b>
<b>Battery Discharge Indicator Stays On With Engine Running</b>	Poor electrical connection at alternator	Check for proper electrical connections at alternator
	Loose or corroded connections	Clean connections at alternator and battery terminals
	Loose or defective alternator belt	Tighten or replace belt
	Defective battery	Replace battery or see your John Deere dealer
	Defective alternator	See your John Deere dealer
<b>Starter Will Not Work</b>	Poor electrical connection at battery or starter motor	Check for proper electrical connections
	Loose or corroded connections	Clean connections at alternator and battery terminals
	Low battery charge	Charge battery to proper specification
	Defective battery	Replace battery or see your John Deere dealer
	Defective starter motor	See your John Deere dealer
	Check for a blown fuse	Check starting circuit fuses and replace if necessary
	Neutral start switch faulty or not adjusted properly	See your John Deere dealer
	Key switch or starter faulty	See your John Deere dealer
	Range transmission lever not in neutral position	Place range transmission lever in neutral
<b>Starter Turns Slowly</b>	Loose or corroded connections	Clean connections at alternator and battery terminals
	Low battery charge	Charge battery to proper specification
	Defective battery	Replace battery or see your John Deere dealer
	Defective starter motor	See your John Deere dealer
<b>Light Circuit Not Working</b>	Defective bulb	Check and replace faulty bulbs
	Check for a blown fuse	Check light circuit fuses and replace if necessary

## Troubleshooting

---

Symptom	Problem	Solution
	Faulty switch	See your John Deere dealer

UP00731,00002E8-19-25AUG16

---

### Machine

Symptom	Problem	Solution
<b>Operation Sluggish, Slow</b>	Water in hydraulic oil	Replace hydraulic oil with correct oil type or see your John Deere dealer
	Plugged hydraulic oil filter	Replace oil filter
	Improper type of hydraulic oil	Verify correct hydraulic oil. Drain system and fill with correct oil type
	Oil leaks	Check for leaks and repair or see your John Deere dealer
<b>Poor Hydraulic Performance</b>	Water in hydraulic oil	Replace hydraulic oil with correct oil type or see your John Deere dealer
	Plugged hydraulic oil filter	Replace oil filter
	Improper type of hydraulic oil	Verify correct hydraulic oil. Drain system and fill with correct oil type
	Oil leaks	Check for leaks and repair or see your John Deere dealer
<b>Machine Will Not Move With Engine Running</b>	Park brake engaged	Release park brake
	Transmission oil level low	Fill hydraulic oil with correct oil type as specified, or see your John Deere dealer
	Transmission oil cold	Allow engine to warm before operating
	Transmission range shift lever in neutral position	Place range transmission lever in high or low range
<b>3-point Hitch Fails To Lift</b>	Transmission oil level low	Fill hydraulic oil with correct oil type to specification or see your John Deere dealer
	Transmission oil cold	Allow engine to warm before operating
	Rate-of-drop valve closed	Open rate-of-drop valve to desired setting
	Excessive load on hitch	Reduce load on hitch
	Plugged hydraulic oil filter	Replace oil filter

## Troubleshooting

---

Symptom	Problem	Solution
<b>3-point Hitch Lifts Slowly</b>	Worn hydraulic pump	See your John Deere dealer
	Transmission oil level low	Fill hydraulic oil with correct oil type as specified, or see your John Deere dealer
	Transmission oil cold	Allow engine to warm before operating
	Excessive load on hitch	Reduce load on hitch
	Plugged hydraulic oil filter	Replace oil filter
<b>3-point Hitch Drops Slowly Or Does Not Drop</b>	Worn hydraulic pump	See your John Deere dealer
	Rate-of-drop valve set too slow	Adjust rate-of-drop valve to desired setting
<b>3-point Hitch Drops Too Fast</b>	Rate-of-drop valve set too fast	Adjust rate-of-drop valve to desired setting
	Excessive load on hitch	Reduce load on hitch
<b>Noise Is Coming From PTO During Operation</b>	Too low engine speed	Increase to rated engine speed

WS68074,00016B2-19-30NOV16

---

### Brakes

Symptom	Problem	Solution
<b>Rear Brakes Not Working</b>	Brakes out of adjustment	Adjust brakes to specification
	Worn or damaged brake linkage or brake disks	See your John Deere dealer

WS68074,00016C5-19-17AUG16

---

### Steering

Symptom	Problem	Solution
<b>Steering Not Working</b>	Improper tire inflation	Inflate tires to proper specification
	Hydraulic oil level low	Fill hydraulic oil with correct oil type as specified, or see your John Deere dealer
	Hydraulic oil cold	Allow engine to warm before operating
	Plugged hydraulic oil filter	Replace hydraulic oil filter
	Excessive play in steering	See your John Deere Dealer

---

*Troubleshooting*

---

**Symptom**

**Problem**

**Solution**


Worn hydraulic pump or steering gear See your John Deere dealer

WS68074,00016B4-19-30NOV16

---

# On Board Diagnostics

## Service Alert and Information Display

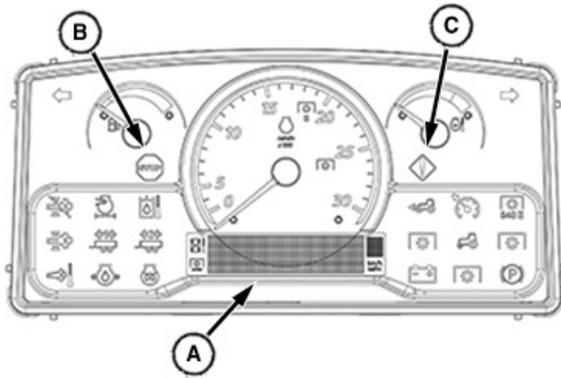

- A—Information Display
- B—Stop Indicator
- C—Service Alert Indicator

LV25639—UN—15JUN16

On-board diagnostic information is displayed using the indicator lights and the information display (A). If the control unit software detects a malfunction or a status “out of the permissible range”, an error message or diagnostic trouble code is displayed. These numbers identify the machine system and problem type.

**STOP Indicator (B):** The light illuminates and indicates the tractor requires immediate attention or the tractor will be damaged. Correct problem before restarting the engine. See your John Deere dealer if the issue can not be resolved.

**Service Alert Indicator (C):** The light flashes and indicates a performance problem or malfunction that has to be resolved as soon as possible. Continued operations during a service alert can result in the STOP indicator lighting up. If appropriate corrective action is not taken soon (maintenance, repair, change of operating mode), a significant reduction in performance and/or machine damage will occur.

Whenever a STOP indicator is displayed, switch the transmission to the park position and shut down the engine.

UP00731,00001D9-19-13SEP16

## On Board Diagnostic Display

Information Display acts as a visual, user interface device for machine functions and operation. The information display provides normal operational information, such as display settings, performance monitoring and more for selected machine features or functions.

Certain conditions associate displayed text along with instrument cluster icons.



LV25997—UN—15AUG16

Information Display

For more information on instrument cluster icon descriptions see Controls and Instruments section.

For more information on display messages see the Troubleshooting section.

WS68074,00016BC-19-17AUG16

## On-Board Diagnostic (OBD) Tool

On-board diagnostic tool is not available on this tractor.

WS68074,00016BD-19-16AUG16

## Diagnostic Trouble Code (DTC)

**IMPORTANT: When a DTC occurs; make note of operating conditions and information alert indicators. Contact your John Deere dealer for service assistance.**



LV25998—UN—15AUG16

If a control unit software detects a malfunction or a status fault, a Diagnostic Trouble Code (DTC) is registered. A DTC number consist of the control unit software abbreviation, suspect parameter number (SPN), and a failure mode indicator number (FMI). A DTC identifies which machine system is experiencing a certain type of problem.

Software	SPN	FMI
ECU	3251	.04

Example of an Engine Control Unit (ECU) Diagnostic Trouble Code

If the DTC is accompanied by the STOP warning

indicator, cease machine operation immediately and correct problem before resuming operation. See your John Deere dealer if the issue can not be resolved.



LV25014—UN—22APR16

**A—Display Mode Switch**

For DTCs that are not accompanied by a Service Alert Indicator, press the display mode switch (A) to acknowledge the condition and resume the current operation. Resolve the DTC as soon as possible. An unresolved DTC can result in a STOP condition if left unresolved.

WS68074,00016BE-19-15AUG16

# Specifications

## Engine Specifications

Engine Specifications		
	2032R	2038R
Engine Manufacturer	Yanmar	Yanmar
Engine Model	3TNV88C-NJT2V	3TNV86CT-NJT2V
Type	Diesel	Diesel
Gross Horsepower	22.9 kW (30.7 hp)	27.4 kW (36.7 hp)
Manufacturer's Estimated PTO Horsepower	18.1 kW (24.2 hp)	22.7 kW (30.4 hp)
Low Idle Speed	950 rpm	950 rpm
Rated Engine Speed	2500 rpm	2500 rpm
High Idle	2650 rpm	2650 rpm
Operating Range	950—2650 rpm	950—2650 rpm
Engine Torque @ Rated Speed	88 N·m (64.5 lb·ft)	105 N·m (77.2 lb·ft)
Maximum Torque @ 1625 rpm	105 N·m (77.4 lb·ft)	127 N·m (93.7 lb·ft)
Displacement	1.6 L (100.2 in <sup>3</sup> )	1.6 L (95.7 in <sup>3</sup> )
Cylinders	3	3
Cooling System	Liquid	Liquid
Oil Filter	Single Element	Single Element
Air Cleaner	Dry Type with Safety Element	Dry Type with Safety Element
Starting Aid	Glow Plug	Glow Plug

NOTE: Engine Power rated according to SAE J1995.

UP00731,0000993-19-31MAR20

## Drivetrain Specifications

Drivetrain Specifications		
	2032R	2038R
Transmission Type	Hydrostatic	Hydrostatic
Speeds	Infinite / 2 Range	Infinite / 2 Range
Mechanical Front Wheel Drive	Standard	Standard
Final Drive	Spur Gear	Spur Gear
Rear Axle Weight Capacity (Continuous)	1800 kg (3968 lb)	1800 kg (3968 lb)
Front Axle Weight Capacity (Continuous)	880 kg (1764 lb)	880 kg (1764 lb)

GS25068,0003DA7-19-23JAN18

## Hydraulic System Specifications

Hydraulic System Specifications		
	2032R	2038R
Pump Type	Tandem Gear	Tandem Gear
Hydrostatic Pump Type	PV Axial Piston	PV Axial Piston
System Relief Pressure	17237 kPa (2500 psi)	17237 kPa (2500 psi)
Implement Flow @ Rated Speed	20.2 L/min (5.3 gpm)	20.2 L/min (5.3 gpm)
Steering Flow @ Rated Speed	15 L/min (4 gpm)	15 L/min (4 gpm)

Hydraulic System Specifications		
	2032R	2038R
Total Pump Flow	35.2 L/min (9.3 gpm)	35.2 L/min (9.3 gpm)

GS25068,0003DA8-19-23JAN18

## Electrical System Specifications

Electrical System Specifications		
	2032R	2038R
Battery Voltage	12V	12V
Battery Cold Cranking Amps @ -18 °C (0 °F)	500	500
Alternator Capacity	85 Amp	85 Amp

GS25068,0003DA9-19-23JAN18

## Fluid Capacities

Fluid Capacities		
	2032R	2038R
Fuel Tank	32 (8.5 gal)	32 (8.5 gal)
Cooling System	4.9 L (5.1 qt)	5.2 L (5.4 qt)
Crankcase with Filter	4.5 L (4.7 qt)	4.5 L (4.7 qt)
Transmission and Hydraulic System	23.5 L (24.8 qt)	23.5 L (24.8 qt)
Front Axle	3.8 L (4 qt)	3.8 L (4 qt)

AL61114,0000732-19-11MAY22

## Specifications

### Ground Speeds

*NOTE: All ground speed calculations shown are with machine equipped with standard rear tires and operated at 2500 engine rpm.*

Ground Speeds		
	2032R	2038R
Forward and Reverse Low Range	Low 0-8.7 km/h (0-5.4 mph)	Low 0-8.7 km/h (0-5.4 mph)
Forward and Reverse High Range	High 0-22.1 km/h (0-13.7 mph)	High 0-22.1 km/h (0-13.7 mph)

YCWRHFR,0000048-19-11MAY22

### Dimensions

*NOTE: Machine equipped with 23x8.50-14 6PR front and 14-17.5 6PR rear tires.*

Dimensions		
	2032R	2038R
Wheelbase	1723 mm (67.8 in.)	1723 mm (67.8 in.)
Overall Length with 3-point Hitch	3200 mm (125.9 in.)	3200 mm (125.9 in.)
Overall Width	1520 mm (59.84 in.)	1520 mm (59.84 in.)

YCWRHFR,0000049-19-11MAY22

### Height From Ground

*NOTE: Machine equipped with 23x8.50-14 6PR front and 14-17.5 6PR rear tires.*

Height From Ground		
	2032R	2038R
Height to top of hood (R4 Tires)	1280 mm (50.4 in.)	1280 mm (50.4 in.)
Height to top of ROPS (R4 Tires)	2344 mm (92.3 in.)	2344 mm (92.3 in.)

GS25068,0003DAD-19-23JAN18

### Ground Clearance

*NOTE: Machine equipped with 23x8.50-14 6PR front and 14-17.5 6PR rear tires.*

Ground Clearance		
	2032R	2038R
Front Axle Clearance	248.5 mm (9.8 in.)	248.5 mm (9.8 in.)

GS25068,0003DAE-19-23JAN18

### Turning Radius

Turning Radius		
	2032R	2038R
Turning Radius—In 2WD with brakes	2.15 m (84.6 in.)	2.15 m (84.6 in.)
Turning Radius—In 2WD without brakes	2.5 m (98.4 in.)	2.5 m (98.4 in.)

GS25068,0003DAF-19-23JAN18

### Machine Weight

*NOTE: Machine equipped with a ROPS, 3-point hitch, standard R1 tires and all fluids*

Weight		
	2032R	2038R
Base Tractor Weight	1306 kg (2879 lb)	1320 kg (2910 lb)

YCWRHFR,000004A-19-11MAY22

### 3-Point Hitch Specification

3-Point Hitch		
	2032R	2038R
3-Point Hitch Type	Category 1	Category 1
3-Point Hitch Lift Capacity—61 cm (24 in.) behind hitch ball	675 kg (1488 lb)	675 kg (1488 lb)

GS25068,0003DB1-19-23JAN18

### Coupling Devices


Coupling devices		Drawbar
Maximum vertical load (daN)		500
Towable Mass (kg)	Unbraked	1500
	Independently braked	2400
	Inertia braked	2500
	Assisted braked	---

Specifications

Coupling devices	Drawbar
Combination mass tractor plus trailer	4900

GS25068,0003DB2-19-23JAN18

**How to Calculate Maximum Permissible Download on Trailer Hitch**

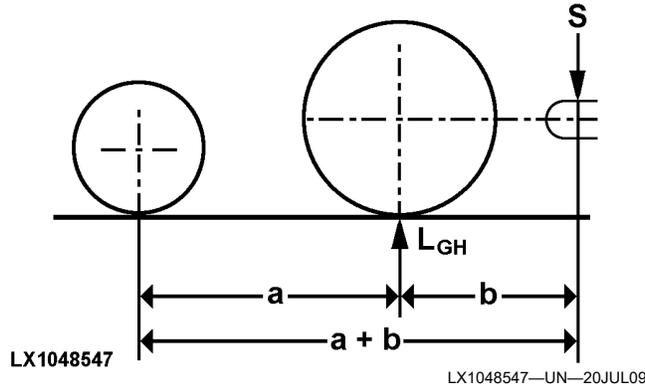

Calculation of maximum permissible download at the trailer hitch in relation to Load Index (LI)

- The load index can be read on the sidewall of the tire. If the index is not provided, refer to the tire's load capacity as quoted by the tire manufacturer.
- The load index is quoted in conjunction with a Speed index (SI)
- As a rule, the load capacity of the tire in kg can be derived directly from the LI; see the following table:

LI	kg	LI	kg	LI	kg	LI	kg
90	600	111	1090	132	2000	153	3650
91	615	112	1120	133	2060	154	3750
92	630	113	1150	134	2120	155	3875
93	650	114	1180	135	2180	156	4000
94	670	115	1215	136	2240	157	4125
95	690	116	1250	137	2300	158	4250
96	710	117	1285	138	2360	159	4375
97	730	118	1320	139	2430	160	4500
98	750	119	1360	140	2500	161	4625
99	775	120	1400	141	2575	162	4750
100	800	121	1450	142	2650	163	4875
101	825	122	1500	143	2725	164	5000
102	850	123	1550	144	2800	165	5150
103	875	124	1600	145	2900	166	5300
104	900	125	1650	146	3000	167	5450
105	925	126	1700	147	3075	168	5600
106	950	127	1750	148	3150	169	5800
107	975	128	1800	149	3250	170	6000
108	1000	129	1850	150	3350	171	6150
109	1030	130	1900	151	3450	172	6300
110	1060	131	1950	152	3550	173	6500

As a general rule, SI A8 implies a top speed of 40 km/h

(25 mph), while SI B implies a top speed of 50 km/h (31 mph). If the SI is different, the manufacturer's instructions apply.

Calculate maximum trailer hitch download as follows:

$$S = \frac{(H_{max} - L_{GH}) * a}{a + b}, \text{ where}$$

- $H_{max}$  = the smaller value from 2\*load capacity of a tire on the rear axle and the maximum permissible rear axle load in kg
- $L_{GH}$  = the mass in kg acting on the ground through the rear wheels (to be ascertained by weighing)
- $a$  = the wheelbase (the horizontal distance between the front and rear axles)
- $b$  = the rear overhang (the horizontal distance between the center of the rear axle and center of the hitch point)

Example of how to calculate maximum trailer hitch download:

Given that: Empty mass on rear axle  $L_{GH}$  = 1800 kg

- Wheelbase  $a$  = 2100 mm
- Overhang  $b$  = 600 mm
- Tire marking = 130A8
- Maximum permitted speed of tractor = 40 km/h (25 mph)
- Permissible rear axle load = 3500 kg
- $H_{max}$  = 3500 kg
- (1900 kg \* 2 = 3800 kg, rear axle load = 3500 kg)

$$S = \frac{(3500 \text{ kg} - 1800 \text{ kg}) * 2100 \text{ mm}}{2100 \text{ mm} + 600 \text{ mm}} = 1322 \text{ kg}$$

**CAUTION: At least 20% of the vehicle's total unladen mass must be on the front axle. Trailer hitch download must not exceed the trailer hitch limit specified by the manufacturer.**

WS68074,00022C8-19-16JAN18

**How to Calculate Permissible Mass**  
Calculating permissible tractor mass and permissible trailer mass on the basis of the D value

EC-approved, dynamically tested hitches are always provided with a D value. This is calculated as follows:

## Specifications

$$D = \frac{G * A * B}{A + B}, \text{ where}$$

$$G * A - D$$

- D = D value of hitch  
 G = Gravitational constant 9.81 m/s<sup>2</sup>  
 A = Tractor mass  
 B = Trailer mass

*NOTE: If when calculating A the product of G\*B is less than the D value, or if when calculating B the product of G\*A is less than the D value, then the result of this calculation is negative. Even so, the D value is sufficient for every combination of tractor mass and trailer mass.*

Example of how to calculate permissible trailer mass:


Given that: D value, D = 55 kN = 55000 N  
 Tractor mass A = 7000 kg

$$B = \frac{55000 \text{ N} * 7000 \text{ kg}}{9.81 \text{ m/s}^2 * 7000 \text{ kg} - 55000 \text{ N}} = 28163 \text{ kg}$$

Pay close attention to permissible towed mass and tractor mass!

WS68074.00022C9-19-16JAN18


## Unified Inch Bolt and Screw Torque Values

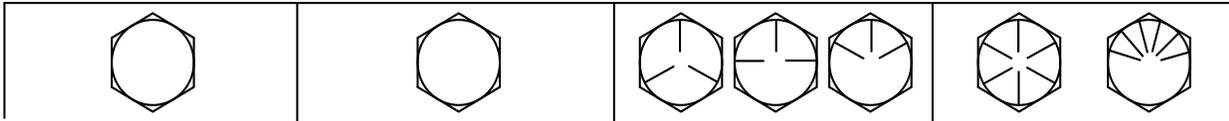

TS1671—UN—01MAY03

Bolt or Screw Size	SAE Grade 1 <sup>a</sup>				SAE Grade 2 <sup>b</sup>				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head <sup>c</sup>		Flange Head <sup>d</sup>		Hex Head <sup>c</sup>		Flange Head <sup>d</sup>		Hex Head <sup>c</sup>		Flange Head <sup>d</sup>		Hex Head <sup>c</sup>		Flange Head <sup>d</sup>	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
1/4	3.1	27.3	3.2	28.4	5.1	45.5	5.3	47.3	7.9	70.2	8.3	73.1	11.2	99.2	11.6	103
													N·m	lb·ft	N·m	lb·ft
5/16	6.1	54.1	6.5	57.7	10.2	90.2	10.9	96.2	15.7	139	16.8	149	22.2	16.4	23.7	17.5
									N·m	lb·ft	N·m	lb·ft				
3/8	10.5	93.6	11.5	102	17.6	156	19.2	170	27.3	20.1	29.7	21.9	38.5	28.4	41.9	30.9
					N·m	lb·ft	N·m	lb·ft								
7/16	16.7	148	18.4	163	27.8	20.5	30.6	22.6	43	31.7	47.3	34.9	60.6	44.7	66.8	49.3
	N·m	lb·ft	N·m	lb·ft												
1/2	25.9	19.1	28.2	20.8	43.1	31.8	47	34.7	66.6	49.1	72.8	53.7	94	69.3	103	75.8
9/16	36.7	27.1	40.5	29.9	61.1	45.1	67.5	49.8	94.6	69.8	104	77	134	98.5	148	109
5/8	51	37.6	55.9	41.2	85	62.7	93.1	68.7	131	96.9	144	106	186	137	203	150
3/4	89.5	66	98	72.3	149	110	164	121	230	170	252	186	325	240	357	263
7/8	144	106	157	116	144	106	157	116	370	273	405	299	522	385	572	422
1	216	159	236	174	216	159	236	174	556	410	609	449	785	579	860	634
1-1/8	305	225	335	247	305	225	335	247	685	505	751	554	1110	819	1218	898
1-1/4	427	315	469	346	427	315	469	346	957	706	1051	775	1552	1145	1703	1256
1-3/8	564	416	618	456	564	416	618	456	1264	932	1386	1022	2050	1512	2248	1658
1-1/2	743	548	815	601	743	548	815	601	1665	1228	1826	1347	2699	1991	2962	2185

## Specifications

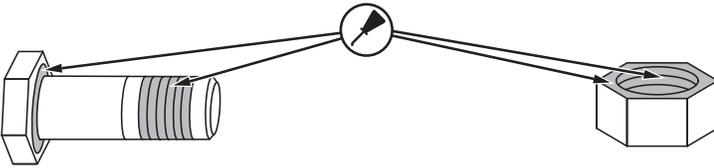Bolt or Screw Size	SAE Grade 1 <sup>a</sup>		SAE Grade 2 <sup>b</sup>		SAE Grade 5, 5.1 or 5.2		SAE Grade 8 or 8.2	
	Hex Head <sup>c</sup>	Flange Head <sup>d</sup>	Hex Head <sup>c</sup>	Flange Head <sup>d</sup>	Hex Head <sup>c</sup>	Flange Head <sup>d</sup>	Hex Head <sup>c</sup>	Flange Head <sup>d</sup>
The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.					Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.			
<ul style="list-style-type: none"> <li>• Make sure that fastener threads are clean.</li> <li>• Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.</li> <li>• Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.</li> <li>• Properly start thread engagement.</li> </ul>								
								

TS1741—UN—22MAY18

<sup>a</sup>Grade 1 applies for hex cap screws over 6 in (152 mm) long, and for all other types of bolts and screws of any length.


<sup>b</sup>Grade 2 applies for hex cap screws (not hex bolts) up to 6 in (152 mm) long.

<sup>c</sup>Hex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

<sup>d</sup>Hex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ1-19-09MAY22


## Metric Bolt and Screw Torque Values

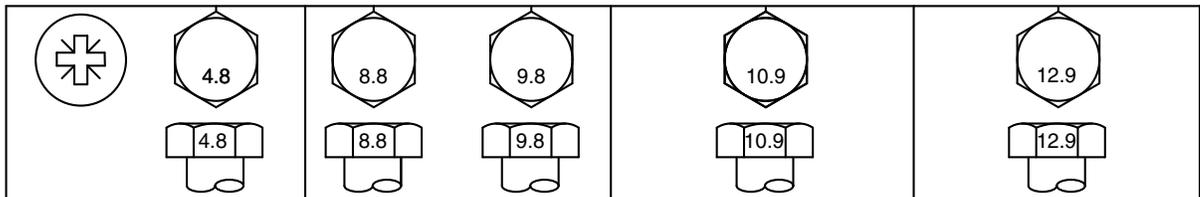

TS1742—UN—31MAY18

Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head <sup>a</sup>		Flange Head <sup>b</sup>		Hex Head <sup>a</sup>		Flange Head <sup>b</sup>		Hex Head <sup>a</sup>		Flange Head <sup>b</sup>		Hex Head <sup>a</sup>		Flange Head <sup>b</sup>	
	N·m	lb·in	N·m	lb·in												
M6	3.6	31.9	3.9	34.5	6.7	59.3	7.3	64.6	9.8	86.7	10.8	95.6	11.5	102	12.6	112
									N·m	lb·ft	N·m	lb·ft	N·m	lb·ft	N·m	lb·ft
M8	8.6	76.1	9.4	83.2	16.2	143	17.6	156	23.8	17.6	25.9	19.1	27.8	20.5	30.3	22.3
			N·m	lb·ft	N·m	lb·ft	N·m	lb·ft								
M10	16.9	150	18.4	13.6	31.9	23.5	34.7	25.6	46.8	34.5	51	37.6	55	40.6	60	44.3
	N·m	lb·ft														
M12	—	—	—	—	55	40.6	61	45	81	59.7	89	65.6	95	70.1	105	77.4
M14	—	—	—	—	87	64.2	96	70.8	128	94.4	141	104	150	111	165	122
M16	—	—	—	—	135	99.6	149	110	198	146	219	162	232	171	257	190
M18	—	—	—	—	193	142	214	158	275	203	304	224	322	245	356	263
M20	—	—	—	—	272	201	301	222	387	285	428	316	453	334	501	370
M22	—	—	—	—	365	263	405	299	520	384	576	425	608	448	674	497
M24	—	—	—	—	468	345	518	382	666	491	738	544	780	575	864	637
M27	—	—	—	—	683	504	758	559	973	718	1080	797	1139	840	1263	932

## Specifications

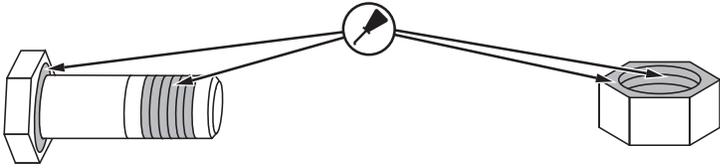Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head <sup>a</sup>		Flange Head <sup>b</sup>		Hex Head <sup>a</sup>		Flange Head <sup>b</sup>		Hex Head <sup>a</sup>		Flange Head <sup>b</sup>		Hex Head <sup>a</sup>		Flange Head <sup>b</sup>	
M30	—	—	—	—	932	687	1029	759	1327	979	1466	1081	1553	1145	1715	1265
M33	—	—	—	—	1258	928	1398	1031	1788	1319	1986	1465	2092	1543	2324	1714
M36	—	—	—	—	1617	1193	1789	1319	2303	1699	2548	1879	2695	1988	2982	2199
<p>The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.</p>									<p>Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.</p>							
<ul style="list-style-type: none"> <li>• Make sure that fastener threads are clean.</li> <li>• Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.</li> <li>• Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.</li> <li>• Properly start thread engagement.</li> </ul>																
																

TS1741—UN—22MAY18

<sup>a</sup>Hex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

<sup>b</sup>Hex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX, TORQ2-19-09MAY22

# Identification Numbers

## Product Identification Information

1	L	V	3	0	4	6	R	#	#	A	1	0	0	0	0	1
WMC	Build Factory	Machine Series	Engine Hp			Machine Family	Check Letter	Calendar Year	Model Year	Operator Station Identifier	Build Sequence					
		Model Number			Serial Number											

Product Identification Number (PIN) is made of various alphabetical and numeric characters. Characters represent multiple machine attributes like manufacture location, model number, manufacture date, model year, machine configurations, serial number, and more.

Use machine PIN when communicating with John Deere Dealer.

Each machine has its own unique Product Identification Number (PIN). The PIN number is broken down as follows:

WMC: World Manufacturing Code.

Build Factory: represents manufacturing location.

Machine Series: represents tractor series.

Engine Hp: represents approximate engine horsepower.

Machine Family: represents overall machine configuration.

Check Letter: calculated based on values and positions of the other characters in the PIN.

Calendar Year = represents calendar year of manufacture (2010 = A, 2031 = 1, 2041 = A again).

Model Year = year of new product release or year of updates to existing product.

Operator Station = represents style of cab or open operation station.

Build Sequence = represents consecutive number of machines built with same machine series through operator station.

Model Number: made up of series, Hp, and family; example shown 3046R.

Serial Number: made up of model year, operator station, and build sequence.

GS25068,0003DB3-19-23JAN18

## Record Identification Numbers

### Compact Utility Tractor

2032R and 2038R PIN (KL100001—)


If you contact an Authorized Service Center for information on servicing, always provide the product model and identification numbers.

Locate the identifications numbers for the product and record the information in the spaces provided below.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

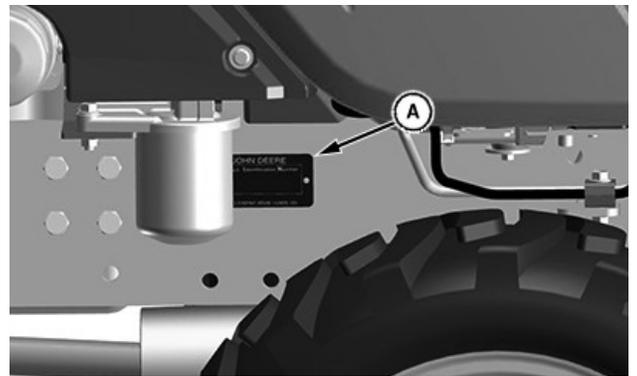


LV25641—UN—14JUN16

Product Identification Number Plate

PRODUCT IDENTIFICATION NUMBER (A):

### Engine Serial Number

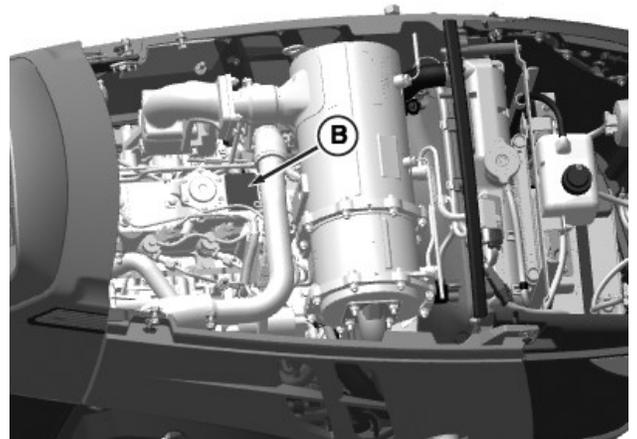


LVP11380—UN—14MAY21

Engine Serial Number Plate

ENGINE SERIAL NUMBER (B):

**Roll Over Protection Serial Number Plate**

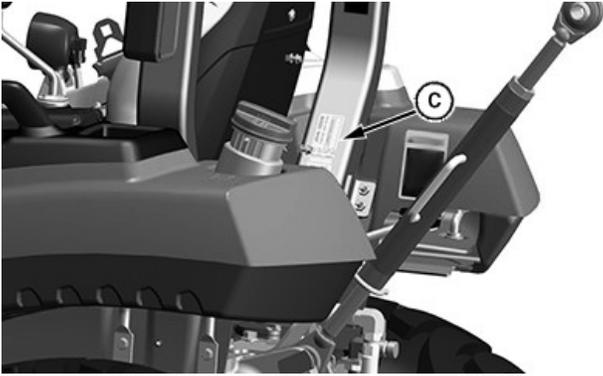

LV25902—UN—25JUL16

*ROPS Serial Number Plate*

ROPS Serial Number (C):

-----  
AL61114,000071D-19-14MAY21

# Certification and Warranty

## Product Warranty

John Deere offers a standard warranty on new John Deere products. For a copy of the product warranty statement or for details on the warranty terms and conditions for products purchased in the United States and Canada, please contact your local John Deere Dealer or utilize the following resources:

### United States

#### Website:

[http://www.deere.com/en\\_US/services\\_and\\_support/warranty/warranty.page](http://www.deere.com/en_US/services_and_support/warranty/warranty.page)

**Toll Free:** 1-800-537-8233

#### Dealer Locator:

<http://dealerlocator.deere.com/servlet/country=US>

### Canada

#### Website (English):

[http://www.deere.ca/en\\_CA/services\\_and\\_support/service\\_plans\\_warranties/service\\_plans\\_warranties.page](http://www.deere.ca/en_CA/services_and_support/service_plans_warranties/service_plans_warranties.page)

#### Website (French):

[http://fr.deere.ca/en\\_CA/services\\_and\\_support/service\\_plans\\_warranties/service\\_plans\\_warranties.page](http://fr.deere.ca/en_CA/services_and_support/service_plans_warranties/service_plans_warranties.page)

**Toll Free:** 1-800-537-8233

#### Dealer Locator:

<http://dealerlocator.deere.com/servlet/country=CA>

**Emission-related warranties are included in this Operator's Manual, and applicable if required by law or regulation.**

For products purchased in a country other than the United States or Canada, please contact your local John Deere dealer for assistance.

## YANMAR POWER TECHNOLOGY CO., LTD. EMISSION CONTROL SYSTEM WARRANTY - USA ONLY

### Your warranty rights and obligations:

The California Air Resources Board (CARB), the United States Environmental Protection Agency (EPA) and YANMAR POWER TECHNOLOGY CO., LTD., hereafter referred to as YANMAR, are pleased to explain the **emission control system warranty** on your 2020, 2021, or 2022 model year industrial compression-ignition engine. California-certified, new off-road compression-ignition engines must be designed, built and equipped to meet the State's stringent anti-smog standards. In the remaining forty nine (49) states, new non-road compression-ignition engines must be designed, built and equipped to meet the United States EPA emissions standards. YANMAR must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system, the air induction system, the electronic control system, EGR (Exhaust Gas Recirculation) system and the exhaust gas aftertreatment (diesel particulate filter system, urea SCR system). Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, YANMAR will repair your off-road compression-ignition engine at no charge to you including diagnosis, parts and labor.

### Manufacturer's warranty period:

2020, 2021, or 2022 model year off-road compression-ignition engines are warranted for the periods listed below. If any emission-related part on your engine is found to be defective during the applicable warranty period, the part will be repaired or replaced by YANMAR.

MP47322,00F4690-19-01JUN22

If your engine is certified as	And its maximum power is	And its rated speed is	Then its warranty period is
Variable speed or constant speed	kW < 8	Any speed	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Variable speed or constant speed	8 ≤ kW < 19	Any speed	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Constant speed	19 ≤ kW < 37	3,000 rpm or higher	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Constant speed	19 ≤ kW < 37	Less than 3,000 rpm	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
Variable speed	19 ≤ kW < 37	Any speed	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
Variable speed or constant speed	kW ≥ 37	Any speed	3,000 hours or five (5) years whichever comes first. In the

			absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
--	--	--	--

**Warranty coverage:**

This warranty is transferable to each subsequent purchaser for the duration of the warranty period. YANMAR recommends that repair or replacement of any warranted part will be performed at an authorized YANMAR dealer.

Warranted parts not scheduled for replacement as required maintenance in the owner's manual shall be warranted for the warranty period. Warranted parts scheduled for replacement as required maintenance in the owner's manual are warranted for the period of time prior to the first scheduled replacement. Any warranted parts scheduled for replacement as required maintenance that are repaired or replaced under warranty shall be warranted for the remaining period of time prior to the first scheduled replacement. Any part not scheduled for replacement that is repaired or replaced under warranty shall be warranted for the remaining warranty period.

During the warranty period, YANMAR is liable for damages to other engine components caused by the failure of any warranted part during the warranty period.

Any replacement part which is functionally identical to the original equipment part in all respects may be used in the maintenance or repair of your engine, and shall not reduce YANMAR's warranty obligations. Add-on or modified parts that are not exempted may not be used. The use of any non-exempted add-on or modified parts shall be grounds for disallowing a warranty.

**Warranted parts:**

This warranty covers engine components that are a part of the emission control system of the engine as delivered by YANMAR to the original retail purchaser. Such components may include the following:

- (A) Fuel injection system (including Altitude compensation system)
- (B) Cold start enrichment system
- (C) Intake manifold and Air intake throttle valve
- (D) Turbocharger systems
- (E) Exhaust manifold and exhaust throttle valve
- (F) Positive crankcase ventilation system
- (G) Charge Air Cooling systems
- (H) Exhaust Gas Recirculation (EGR) systems
- (I) Exhaust gas after treatment (Diesel Particulate Filter (DPF) system, urea SCR system)
- (J) Electronic Control units, sensors, solenoids and wiring harnesses used in above systems
- (K) Hoses, belts, connectors and assemblies used in above systems

(L) Emission Control Information Labels

Since emissions related parts may vary slightly between models, certain models may not contain all of these parts and other models may contain the functional equivalents.

**Exclusions:**

Failures other than those arising from defects in material or workmanship are not covered by this warranty. The warranty does not extend to the following: malfunctions caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance, or use of non-recommended fuels and lubricating oils; accident-caused damage and replacement of expendable items made in connection with scheduled maintenance. YANMAR disclaims any responsibility for incidental or consequential damages such as loss of time, inconvenience, loss of use of equipment/engine or commercial loss.

**Owner's warranty responsibilities:**

**As the off-road compression-ignition engine owner, you are responsible for the performance of the required maintenance listed in your operation manual.** YANMAR recommends that you retain all documentation, including receipts, covering maintenance on your off-road compression-ignition engine, but YANMAR cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

YANMAR may deny your warranty coverage if your off-road compression-ignition engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with CARB and EPA emissions requirements.

You are responsible for initiating the warranty process. You are responsible for presenting your engine to an authorized YANMAR dealer or distributor as soon as a problem exists. The warranty repairs should be completed by the dealer as expeditiously as possible.

If you have any questions regarding your warranty rights and responsibilities, or would like information on the nearest YANMAR dealer or authorized service center, you should contact YANMAR America Corporation.

Website: <https://www.yanmar.com>

E-mail: [CS\\_support@yanmar.com](mailto:CS_support@yanmar.com)

Toll free telephone number: 1-800-872-2867, 1-855-416-7091

**What the emergency stationary type engine owner must do:**

The engines for emergency stationary type generators certified by Federal Law (40 CFR Part60) are limited to emergency use only, and the operation for maintenance checks and verification test for functions is required. The total operating hours for maintenance and verification test for functions should not exceed 100 hours per year. However, there is no limitation on the operating hours for emergency use. Keep a log of the number of hours the engine is operated for both emergency use and non-emergency use. Also, note the reason for the operation.

mk71445,1681748727253-19-18APR23

**Emission System Warranty**

**YANMAR POWER TECHNOLOGY CO., LTD. LIMITED EMISSION CONTROL SYSTEM WARRANTY - USA ONLY**

**Your Warranty Rights and Obligations:**

The California Air Resources Board (CARB), the United State Environmental Protection Agency (EPA) and YANMAR POWER TECHNOLOGY CO., LTD. hereafter referred to as YANMAR, are pleased to explain the **emission control system warranty** on your 2023, 2024, or 2025 model year compression-ignition engine. In California, new heavy-duty off-road engines must be

designed, built and equipped to meet the State’s stringent anti-smog standards. In the remaining forty nine (49) states, new non-road compression-ignition engines must be designed, built and equipped to meet the United States EPA emissions standards. YANMAR must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system, the air induction system, the electronic control system, EGR (Exhaust Gas Recirculation) system and the exhaust gas after treatment (diesel particulate filter system, urea SCR system). Also included may be hoses, belts, connectors, and other emission-related assemblies.

Where a warrantable condition exists, YANMAR will repair your heavy-duty off-road compression-ignition engine at no charge to you including diagnosis, parts and labor.

**Manufacturer’s Warranty Period:**

2023, 2024, or 2025 model year heavy-duty off-road compression-ignition engines are warranted for the periods listed below. If any emission-related part on your engine is defective, the part will be repaired or replaced by YANMAR.

If your engine is certified as	And its maximum power is	And its rated speed is	Then its warranty period is
Variable speed or constant speed	kW <8	Any speed	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Variable speed or constant speed	8<=kW<19	Any speed	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Constant speed	19 <=kW <37	3000 rpm or higher	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Constant speed	19 <=kW <37	Less than 3,000 rpm	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
Variable speed	19 <=kW <37	Any speed	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
Variable speed or constant speed	kW ≥ 37	Any speed	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.

**Warranty Coverage:**

This warranty is transferable to each subsequent purchaser for the duration of the warranty period. YANMAR recommends that repair or replacement of any warranted part will be performed at an authorized YANMAR dealer.

Warranted parts not scheduled for replacement as required maintenance in the owner’s manual shall be warranted for the warranty period. Warranted parts

scheduled for replacement as required maintenance in the owner’s manual are warranted for the period of time prior to the first scheduled replacement. Any warranted parts scheduled for replacement as required maintenance that are repaired or replaced under warranty shall be warranted for the remaining period of time prior to the first scheduled replacement. Any part not scheduled for replacement that is repaired or

replaced under warranty shall be warranted for the remaining warranty period.

During the warranty period, YANMAR is liable for damages to other engine components caused by the failure of any warranted part during the warranty period.

Any replacement part which is functionally identical to the original equipment part in all respects may be used in the maintenance or repair of your engine, and shall not reduce YANMAR's warranty obligations. Add-on or modified parts that are not exempted may not be used. The use of any non-exempted add-on or modified parts shall be grounds for disallowing a warranty.

#### **Warranted Parts:**

This warranty covers engine components that are a part of the emission control system of the engine as delivered by YANMAR to the original retail purchaser. Such components may include the following:

- Fuel injection system (including Altitude compensation system)
- Cold start enrichment system
- Intake manifold and Air intake throttle valve
- Turbocharger systems
- Exhaust manifold and exhaust throttle valve
- Positive crankcase ventilation system
- Charge Air Cooling systems
- Exhaust Gas Recirculation (EGR) systems
- Exhaust gas after treatment (Diesel Particulate Filter (DPF) system, urea SCR system)
- Electronic Control units, sensors, solenoids and wiring harnesses used in above systems
- Hoses, belts, connectors and assemblies used in above systems
- Emission Control Information Labels

Since emissions related parts may vary slightly between models, certain models may not contain all of these parts and other models may contain the functional equivalents.

#### **Exclusions:**

Failures other than those arising from defects in material or workmanship are not covered by this warranty. The warranty does not extend to the following: malfunctions caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance, or use of non-recommended fuels and lubricating oils; accident-

caused damage and replacement of expendable items made in connection with scheduled maintenance. YANMAR disclaims any responsibility for incidental or consequential such as loss of time, inconvenience, loss of use of equipment/engine or commercial loss.

#### **Owner's Warranty Responsibilities:**

**As the off-road compression-ignition engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual.** YANMAR recommends that you retain all documentation, including receipts, covering maintenance on your off-road compression-ignition engine, but YANMAR cannot deny warranty solely for the lack of receipts, or for your failure to ensure the performance of all scheduled maintenance.

As the off-road engine owner, you should however be aware that YANMAR may deny your warranty coverage if your off-road compression-ignition engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with CARB and EPA emissions requirements.

You are responsible for initiating the warranty process. The ARB and EPA suggest that you present your off-road engine to a YANMAR dealer as soon as a problem exists. The warranty repairs should be completed by the dealer as expeditiously as possible. If you have any questions regarding your warranty rights and responsibilities, you should contact YANMAR America Corporation. If you would like to find the nearest YANMAR dealer or authorized service center, you should contact YANMAR America Corporation.

Website: <https://www.yanmar.com>

E-mail: [CS\\_support@yanmar.com](mailto:CS_support@yanmar.com)

Toll free telephone number: 1-800-872-2867, 1-855-416-7091

#### **What the Emergency Stationary Type Engine Owner must Do:**

The engines for emergency stationary type generators certified by Federal Law (40 CFR Part 60) are limited to emergency use only, and the operation for maintenance checks and verification test for functions is required. The total operating hours for maintenance and verification test for functions should not exceed 100 hours per year. However, there is no limitation on the operating hours for emergency use. Keep a log of the number of hours the engine is operated for both emergency use and non-emergency use. Also, note the reason for the operation.

mk71445,1679915954842-19-30MAR23

## Tire Warranty

John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your machine may not apply outside the U.S. (See your John Deere dealer for specific information.)

KN52281,1003F90-19-22AUG12

---

## Limited Battery Warranty

*NOTE: Applicable in North America only. For complete machine warranty, reference a copy of the John Deere warranty statement. Contact your John Deere dealer to obtain a copy.*

### To Secure Warranty Service

The purchaser must request warranty service from a John Deere dealer authorized to sell John Deere batteries, and present the battery to the dealer with the top cover plate codes intact.

### Replacement

Any new battery which becomes unserviceable (not merely discharged) due to defects in material or workmanship will be eligible for warranty consideration.

### This Warranty Does Not Cover

Breakage of the container, cover, or terminals.

Depreciation or damage caused by lack of reasonable and necessary maintenance or by improper maintenance.

Transportation, mailing, or service call charges for warranty service.

### Limitation of Implied Warranties and Purchaser's Remedies

To the extent permitted by law, neither John Deere nor any company affiliated with it makes any warranties, representations or promises as to the quality, performance or freedom from defect of the products covered by this warranty. IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT APPLICABLE, SHALL BE LIMITED IN DURATION TO THE APPLICABLE ADJUSTMENT PERIOD SET FORTH HERE. THE PURCHASER'S ONLY REMEDIES IN CONNECTION WITH THE BREACH OR PERFORMANCE OF ANY WARRANTY ON JOHN DEERE BATTERIES ARE THOSE SET FORTH HERE. IN NO EVENT WILL THE DEALER, JOHN DEERE OR ANY COMPANY AFFILIATED WITH JOHN DEERE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. (Note: Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages. So

these limitations and exclusions may not apply to you.) This warranty gives you specific legal rights, and you may also have some rights which vary from state to state.

### No Dealer Warranty

The selling dealer makes no warranty of its own and the dealer has no authority to make any representation or promise on behalf of John Deere, or to modify the terms or limitations of this warranty in any way.

DX,BATWAR,NA-19-06AUG21

---

# Service Records

## Every 10 Hour Service

SERVICE PROCEDURE	
<input type="checkbox"/> Check safety interlock system	<input type="checkbox"/> Radiator Coolant Level
<input type="checkbox"/> Check Engine Oil Level	<input type="checkbox"/> Lubricate Grease Points (Wet Conditions)
<input type="checkbox"/> Check Transmission Oil Level	
<input type="checkbox"/> Clean Air Filter Rubber Dust Valve	

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002A7-19-27MAR20

## Every 50 Hour Service

SERVICE PROCEDURE	
<input type="checkbox"/> Check Front Axle Oil Level	<input type="checkbox"/> Lubricate Grease Points (Normal Conditions)
<input type="checkbox"/> Lubricate 3-Point Hitch	

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002EC-19-27MAR20

## Every 200 Hour Service

SERVICE PROCEDURE	
<input type="checkbox"/> Check Wheel Bolt Torque	<input type="checkbox"/> Inspect Alternator Belt
<input type="checkbox"/> Change Engine Oil and Filter(s)	

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002A9-19-27MAR20

Service Records

**Every 400 Hour Service**

SERVICE PROCEDURE	
<input type="checkbox"/> Change Transmission Oil and Filter <sup>a</sup>	<input type="checkbox"/> Drain water from fuel tank and replace fuel filter

<sup>a</sup>Transmission oil can be changed every 1200 hours or 3 years if specific requirements are met., see transmission maintenance for additional information.

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002AA-19-27MAR20

**Every 600 Hour Service**

SERVICE PROCEDURE	
<input type="checkbox"/> Service Air Filter Element and Hoses	<input type="checkbox"/> Check Front Axle Oil
<input type="checkbox"/> Check all Hoses and Clamps	<input type="checkbox"/> Check Axle Thrust Bolt Torque

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002AB-19-27MAR20

**Yearly**

SERVICE PROCEDURE	
<input type="checkbox"/> Change Engine Oil and Filter	<input type="checkbox"/> Drain Water from Fuel Tank and Replace Fuel Filter
<input type="checkbox"/> Check Wheel Bolt Torque	<input type="checkbox"/> Check all Hoses and Clamps

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002AC-19-27MAR20

**Every 1000 Hour Service**

SERVICE PROCEDURE	
<input type="checkbox"/> Check Engine Valve Clearance. See your John Deere Dealer	

## Service Records

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002E4-19-26MAY17

### Every 2000 Hour Service or Every Two Years

SERVICE PROCEDURE	
<input type="checkbox"/> Drain, Flush and Refill Engine Cooling System <sup>a</sup>	

<sup>a</sup>When coolant is NOT checked annually or NOT serviced with the pre-diluted John Deere Cool-Gard II

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002AD-19-27MAR20

### Every 6000 Hour Service or Every Six Years

SERVICE PROCEDURE	
<input type="checkbox"/> Drain, Flush and Refill Engine Cooling System <sup>a</sup>	

<sup>a</sup>When coolant is checked annually and serviced with the pre-diluted John Deere Cool-Gard II

Hours:	Comments:	Dealer's Stamp
Date:		
Work Carried Out By:		

UP00731,00002AE-19-27MAR20

### Change of Ownership

Serial Number																		
Engine Number																		

Previous Owner:
Address:
Purchase Date:
Hours at Purchase:

Service Records

Machine Model:
Registration No.:
New Owner:
Address:
Dealer's Stamp (only if sold through dealer)

UP00731,0000233-19-22FEB18

**Change of Ownership**

Serial Number																			
Engine Number																			
Previous Owner:																			
Address:																			
Purchase Date:																			
Hours at Purchase:																			

Machine Model:
Registration No.:
New Owner:
Address:
Dealer's Stamp (only if sold through dealer)

UP00731,0000234-19-22FEB18

**Change of Ownership**

Serial Number																			
Engine Number																			
Previous Owner:																			
Address:																			
Purchase Date:																			
Hours at Purchase:																			

*Service Records*

Machine Model:
Registration No.:
New Owner:
Address:
Dealer's Stamp (only if sold through dealer)

UP00731,0000235-19-22FEB18

# Index

<b>A</b>	
A-Frame, Assemble and Install .....	70A-5
A-Frame, Remove .....	100-3
Additional Equipment, Maintenance .....	280B-1
Additional Equipment, Operation .....	80B-1
Aftertreatment indicators overview .....	30-3
Air Filter Elements, Servicing .....	230-1
Air Filter Intake Hoses and Clamps, Checking .....	230-1
Alternator Belt, Servicing .....	220-3
Attachments, Operate .....	70A-1
Avoid static electricity risk when fueling .....	00A-4
Axle Trunnion, Lubricate .....	250B-2
Axle, Front, Change Oil .....	250B-1
Axle, Front, Check Oil Level .....	250B-1
Axle, Front, Thrust Bolt .....	250B-2
<b>B</b>	
Ballast Machine .....	80A-1
Ballast to Work Load, Match .....	280A-1
Battery	
Warranty .....	400B-5
Battery and Terminals, Clean .....	240-2
Battery Booster, Use .....	240-2
Battery Handling, Safety	
Safety, Battery Handling .....	00A-12
Battery, Remove and Install .....	240-1
Bolt and screw torque values	
Metric .....	400-5
Unified inch .....	400-4
Brake Operation .....	60-1
Brake, Operating Park .....	60-1
Bulb, Replace Taillight .....	240-3
Bulb, Replace Warning Light .....	240-3
<b>C</b>	
Center Link, Position .....	70A-1
Chain, Safety .....	100-2
Controls, Foot-Operated Controls .....	10-2
Controls, Front Console .....	10-1
Controls, Left-Hand Console .....	10-4
Controls, Right-Hand Console .....	10-3
Coolant	
Additional information .....	200A-4
Diesel Engine	
Light Duty .....	200A-3
Testing .....	200A-5
Warm temperature climates .....	200A-4
Cooling System, Filling .....	230-9
Cooling System, Servicing .....	230-7, 230-8
Cruise Control, Operate .....	50A-1
<b>D</b>	
Diagnostic Trouble Code (DTC) Mode .....	300A-1
Diesel engines, cold weather effect .....	200A-2
Diesel fuel, testing .....	200A-2
Diesel Fuel, Use .....	200A-1
Differential Lock Pedal, MFWD Controls, Seat	
Adjustment .....	10-5
Dimensions .....	400-2
Display Mode Switch, Use .....	40-2
Display, Information .....	10-9
Display, On Board Diagnostic .....	300A-1
Draft Links, Use .....	70A-2
Drawbar, Operate .....	70A-3
Drivetrain Specifications .....	400-1
Dual Rear Selective Control Valve (If Equipped),	
Operate .....	70B-2
Dust Unloading Valve, Clean .....	220-2
<b>E</b>	
Effect of cold weather on diesel engines .....	200A-2
Engine, Warm and Idle .....	20-3
Electrical Specifications .....	400-1
Electrical System Troubleshooting .....	300-4
Emissions	
Required language	
EPA .....	220-1
Emissions Performance	
Tampering .....	220-1
Engine Compartment, Clean .....	220-4
Engine Oil and Filter, Change .....	220-2
Engine Oil Level, Check .....	220-1
Engine Specifications .....	400-1
Engine Speeds, Change .....	20-1
Engine Troubleshooting .....	300-2
Engine, Start .....	20-2
Engine, Start a Stalled .....	20-3
Exhaust Filter	
Maintenance and Service .....	230-2
Exhaust Filter Cleaning, Automatic .....	230-2
Exhaust Filter Cleaning, Parked .....	230-4
Exhaust Filter Cleaning, Service .....	230-5
Exhaust Filter Cleaning, Disabled .....	230-3
Exhaust Filter Maintenance and Service .....	230-2
Exhaust Filter, Safety	
Safety, Exhaust Filter .....	00A-14
<b>F</b>	
Filter, Exhaust	
Exhaust Filter System .....	30-2
Fluid Capacities .....	400-1
Front 3-Point Hitch, Operate and Install .....	70A-5
Front 3-Point Hitch, Remove .....	100-4
Front 3-Point Hitch, Store .....	100-4
Front Axle Oil .....	200A-6
Front Cowl, Remove and Install .....	290-1
Front Hitch with A-Frame, Install Implements ..	70A-6
Front Loader Mounting Bracket Installation .....	80B-1
Front Weights .....	80A-2

Front Wheel Drive (MFWD), Operate Mechanical .....	50B-1		
Fuel			
Handling and storing .....	200A-1		
Fuel Filters, Replacing .....	230-6		
Fuel Shut- Off Valve, Operate.....	20-1		
Fuel Shut- Off Valve, Using .....	30-1		
Fuel Storage.....	100-3		
Fuel Tank, Drain and Flush.....	230-7		
Fuel Tank, Fill .....	30-1		
			<b>G</b>
Gille Screens, Clean Front and Side.....	220-3		
Grease .....	200A-6		
Ground Speeds .....	400-2		
			<b>H</b>
Hardware torque values			
Metric .....	400-5		
Unified inch.....	400-4		
Headlight Bulb, Replace .....	240-2		
Height of Cut (If equipped), Adjusting.....	50D-2		
Hood, Raise and Lower.....	290-1		
Hydraulic Maintenance.....	270-1		
Hydraulic Oil.....	200A-5		
Hydraulic Specifications.....	400-1		
Hydraulics Information .....	70-1		
Hydrostatic Transmission, Operate.....	50A-1		
			<b>I</b>
iMatch Quick-Attach Hitch System (Optional), Operate			
iMatch.....	70A-4		
Implement Codes .....	80A-1		
Implement Front-to-Rear, Level.....	70A-2		
Implement Hydraulic Hoses, Connect.....	70B-1		
Implement Side-to-Side Sway, Adjust.....	70A-3		
Implement Side-to-Side, Level .....	70A-3		
Indicators overview .....	30-3		
Inflation Pressure .....	80-1		
Information Display Fault Messages .....	300-1		
Instrument Cluster .....	10-6		
			<b>K</b>
Key Switch, Operate .....	20-1		
			<b>L</b>
Lift Points for Jacking up Tractor .....	280-2		
Lights, Road, Work and Warning .....	40-1		
Lights, Turn Signal and Hazard.....	40-1		
Liquid Weight in Tires .....	80A-2		
Load Capacity of Tires, Ascertaining.....	80-1		
Lock Lever, Operate Selective Control Valve( SCV) ..	70B-2		
Lubricants, safety.....	200A-3		
			<b>M</b>
Machine Troubleshooting .....	300-6		
Machine, Drive .....	50-1		
Machine, Stop.....	20-3		
Maintenance Interval Chart - Every 600 Hours - Every			
6000 Hours .....	200-1		
Maintenance Interval Chart, Daily to Every 400 Hours			
.....	200-1		
Maintenance, Brake .....	260-1		
Maintenance, Controls and Instruments .....	210-1		
Maintenance, Drivetrain.....	250-1		
Maintenance, PTO.....	250D-1		
Maintenance, Steering .....	260-1		
Metal Surfaces, Repair and Clean.....	200-4		
Metric bolt and screw torque values .....	400-5		
MFWD Axle Vent Filter, Clean .....	250B-3		
MFWD Driveshaft, Lubricate .....	250B-2		
MFWD Oil .....	200A-6		
Mid-Mount Mower with Front Hitch, Install and			
Remove.....	70A-7		
			<b>N</b>
Nozzles, Fuel Injection.....	230-7		
			<b>O</b>
Oil, Engine.....	200A-3		
Oil, Warming Hydraulic System.....	70-1		
			<b>P</b>
Plastic And Painted Surfaces, Avoid Damage To			
.....	200-3		
Plastic Surfaces, Clean .....	200-3		
Power Beyond (If Equipped), Use.....	70B-3		
Power- Take- Off( PTO), Operating Rear and Mid			
.....	50D-1		
Prepare Machine for Storage .....	100-2		
Product Identification Information.....	400A-1		
Pump, Fuel Injection .....	230-7		
Push or Tow Machine .....	100-1		
			<b>R</b>
Radiator Hoses and Clamps, Checking.....	230-9		
Radiator, Fuel and Transmission Cooling Fins,			
Cleaning .....	230-9		
Rate of Drop/Lock Valve, Operate.....	70A-2		
Rear Axle .....	250C-1		
Rear Ballast Box.....	80A-2		
Rear Cast Iron Wheel Weights.....	80A-2		
Refueling, avoid static electricity risk.....	00A-4		
Reverse Implement Option (RIO), Operate.....	50D-1		
Rops, Inspect for Loose Hardware .....	290-2		
ROPS, Raise and Lower.....	90-1		

<b>S</b>	<b>T</b>
Safety	Testing diesel fuel ..... 200A-2
Protect against noise..... 00A-2	Testing Safety Interlock System Before Startup 200-2
Rotating drivelines, stay clear..... 00A-5	Throttle Lever, Operate ..... 20-1
Safe maintenance, practice ..... 00A-14	Tilt Steering Wheel, Adjust ..... 60-1
Tires, service safely ..... 00A-17	Tire Capacities ..... 80A-2
Towed equipment, transport at safe speeds 00A-9	Tire Capacity, Front and Rear..... 80-2
Tractor, operating safely ..... 00A-6	Tire Combinations ..... 80-2
Use caution on slopes, uneven terrain, and rough ground ..... 00A-10	Tire Inflation Pressure Chart ..... 280-1
Safety, Avoid High-Pressure Fluids	Tire Labeling ..... 80-1
Avoid High-Pressure Fluids ..... 00A-18	Tire Pressure, Check..... 280-1
Safety, Fire Prevention	Tire Rolling Direction, Front, Select ..... 280-1
Fire Prevention..... 00A-3	Tires, service safely ..... 00A-17
Safety, Forestry Operations	Toe-In, Check and Adjust..... 260-1
Limited Use in Forestry Operation ..... 00A-7	Tool, On-Board Diagnostic (OBD) ..... 300A-1
Safety, Handle Fuel Safely, Avoid Fires	Torque charts
Avoid Fires, Handle Fuel Safely ..... 00A-2	Metric ..... 400-5
Safety, lubricants..... 200A-3	Unified inch..... 400-4
Safety, ROPS	Tow Loads ..... 100-2
ROPS, Keep Installed Properly..... 00A-4	Towed equipment, transport at safe speeds ... 00A-9
Safety, Steps and Handholds	Traction Assist, Operate ..... 50C-1
Use Steps and Handholds Correctly ..... 00A-5	Tractor, operating safely ..... 00A-6
Safety, Tightening Wheel Retaining Bolts/Nuts	Trailer Hitch, Maximum Permissible Download
Tightening Wheel Retaining Bolts/Nuts ..... 00A-17	Permissible Downloads ..... 400-3
Seat Belt, Use..... 90-1	Trailer Hitch, Maximum Permissible Mass
Seat, Adjust ..... 90-1	Permissible Mass..... 400-3
Selective Control Valve (SCV), Operate Hydraulic	Transmission Oil and Filter, Change ..... 250A-1
Dual ..... 70B-1	Transmission Oil Level, Check..... 250A-1
Selective Control Valve, Check ..... 270B-1	Transport Machine..... 100-1
Selective Control Valve, Operate Third Function 70B-3	Transport Machine on Trailer..... 100-1
Service Alert and Information Display ..... 300A-1	
Service Records	<b>U</b>
Change of Ownership..... 500-3, 500-4	Unified inch bolt and screw torque values..... 400-4
Every 10 Hours ..... 500-1	
Every 50 Hours ..... 500-1	<b>W</b>
Every 200 Hours..... 500-1	Warranty, product..... 400B-1
Every 400 Hours..... 500-2	Water Separator and Filter Screen, Cleaning ... 230-6
Every 600 Hours..... 500-2	Water Separator, Checking and Draining..... 230-6
Every 1000 Hours ..... 500-2	Weight, Machine..... 400-2
Every 2000 Hours	Wheel Lug Bolts and Hardware, Check ..... 280-1
Every Two Years ..... 500-3	Wheel Spacing and Tread Width, Change ..... 280-2
Every 6000 Hours	Wheels, Remove and Install ..... 280-1
Every Six Years..... 500-3	
Every Year..... 500-2	
Service, As Required..... 200B-1	
Side Panels, Remove and Install ..... 290-1	
Signal words, understand..... 00A-1	
Specifications on Tires..... 80-1	
Starting, Cold Weather..... 20-3	
Steering Troubleshooting ..... 300-7	
Storage, Remove Machine From ..... 100-3	
Store Safety ..... 100-2	
Storing fuel ..... 200A-1	
Switch, Display Mode ..... 10-9	

# John Deere Service

## John Deere Is At Your Service



TS201—UN—15APR13

CUSTOMER SATISFACTION is important to John Deere.

Our dealers strive to provide you with prompt, efficient parts and service:

–Maintenance and service parts to support your equipment.

–Trained service technicians and the necessary diagnostic and repair tools to service your equipment.

## CUSTOMER SATISFACTION PROBLEM RESOLUTION PROCESS

Your John Deere dealer is dedicated to supporting your equipment and resolving any problem you may experience.

1. When contacting your dealer, be prepared with the following information:

–Machine model and product identification number

–Date of purchase

–Nature of problem

2. Discuss problem with dealer service manager.

3. If unable to resolve, explain problem to dealership manager and request assistance.

4. If you have a persistent problem your dealership is unable to resolve, ask your dealer to contact John Deere for assistance. Or contact the Ag Customer Assistance Center at 1-866-99DEERE (866-993-3373) or e-mail us at [www.deere.com/en\\_US/ag/contactus/](http://www.deere.com/en_US/ag/contactus/).

DX,IBC,2-19-02APR02

## Technical Information

Technical information can be purchased from John Deere. Publications are available in print or CD-ROM format.

Orders can be made using one of the following:

- John Deere Technical Information Store: [www.JohnDeere.com/TechInfoStore](http://www.JohnDeere.com/TechInfoStore)
- Call 1-800-522-7448
- Contact your John Deere dealer

Available information includes:




TS189—UN—17JAN89

PARTS CATALOGS list service parts available for your machine with exploded view illustrations to help you identify the correct parts. It is also useful in assembling and disassembling.



TS191—UN—02DEC88

OPERATOR'S MANUALS providing safety, operating, maintenance, and service information.

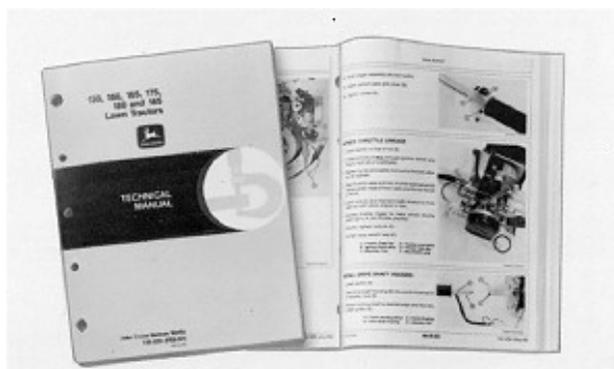

TS224—UN—17JAN89

TECHNICAL MANUALS outlining service information for your machine. Included are specifications, illustrated assembly and disassembly procedures, hydraulic oil flow diagrams, and wiring diagrams. Some products have separate manuals for repair and diagnostic

information. Some components, such as engines, are available in a separate component technical manual.



TS1663—UN—10OCT97

EDUCATIONAL CURRICULUM including five comprehensive series of books detailing basic information regardless of manufacturer:

- Agricultural Primer series covers technology in farming and ranching.
- Farm Business Management series examines “real-world” problems and offers practical solutions in the areas of marketing, financing, equipment selection, and compliance.
- Fundamentals of Services manuals show you how to repair and maintain off-road equipment.
- Fundamentals of Machine Operation manuals explain machine capacities and adjustments, how to improve machine performance, and how to eliminate unnecessary field operations.
- Fundamentals of Compact Equipment manuals provide instruction in servicing and maintaining equipment up to 40 PTO horsepower.

DX,SERVLIT-19-07DEC16

---

